

AUTHORITY TO ALTER FACILITIES IN RESIDENTIAL AND SMALL BUSINESS PREMISES AND NON-PREMISES LOCATIONS

Standards

Document number	F0002-31-11678
Document category	Standard
Author	Standards
Approver (owner)	Senior Manager - Standards
Status	Published
Issue date	22 MAY 25
Revision number	6.0

Disclaimer

This document is provided for information purposes only. This document is subject to the information classification set out on this page. If no information classification has been included, this document must be treated as 'PUBLIC' and must not be disclosed other than with the consent of nbn co. The recipient (including third parties) must make and rely on their own inquiries as to the currency, accuracy and completeness of the information contained herein and must not use this document other than with the consent of nbn co.

Copyright © 2015 nbn co limited. All rights reserved.

Document control

Revision history

Date	Revision	Details
22 MAY 25	6.0	Refer to section 1.7 Changes in this revision, in revision 6.0, for details of changes between revision 5.0 and 6.0.
30 NOV 22	5.0	Refer to section 1.7 Changes in this revision, in revision 5.0, for details of changes between revision 4.0 and 5.0.
11 AUG 20	4.0	Refer to section 1.7 Changes in this revision, in revision 4.0, for details of changes between revision 3.0 and 4.0.
18 JUL 19	3.0	Refer to section 1.7 Changes in this revision, in revision 3.0, for details of changes between revision 2.0 and 3.0.
23 NOV 15	2.0	Refer to section 1.7 Changes in this revision, in revision 2.0, for details of changes between revision 1.0 and 2.0.
17 SEP 15	1.0	First release.

Contents

1 About this document	8
1.1 Background	8
1.2 Purpose	8
1.3 Scope	8
1.3.1 In scope	9
1.3.2 Out of scope	9
1.4 Audience	9
1.5 Assumptions and constraints	9
1.6 Referenced documents	10
1.7 Changes in this revision	10
2 Overview	13
2.1 General	13
2.2 Regulatory	13
2.2.1 Laws	13
2.3 Supplementary Information	14
2.3.1 Important information for the nbn® Copper Network	14
3 Authorisation	16
3.1 Rationale for limiting authorisation	16
3.2 Facilities and practices	16
4 Network boundary	17
4.1 nbn® Copper network	17
4.1.1 FTTN connections not at an MDU site	17
4.1.2 FTTN/FTTB connections at an MDU site	20
4.1.3 FTTC	21
4.1.4 Star Wired TOs	23
4.2 nbn® fibre network	24
4.2.1 nbn® Fibre NTD - marked	24
4.2.2 nbn® fibre NTD - unmarked	25
4.2.3 Fibre TV	28
4.3 nbn® HFC network	29
4.3.1 nbn Installation responsibility	29
5 Authorised activities	30
5.1 General terms and conditions	30
6 nbn® copper network	33
6.1 Authorised activities	33
6.1.1 Replacement of the first TO	33
6.1.2 Relocation of the first TO	33

6.1.3	Replacement of fixed wall phone or other hard-wired telephones	34
6.1.4	Relocation of the first TO	34
6.1.5	Relocation of star-wired TOs	35
6.1.6	Reconfiguration of nbn® wiring.....	35
6.1.7	Cabling in the building.....	36
6.1.8	Cable installation.....	36
6.1.9	Building cable entry.....	38
6.1.10	Cable jointing.....	39
6.1.11	Change/Over (C/O) switch.....	39
6.1.12	VDSL2 centralised filter	40
6.1.13	Existing passive NTD	42
6.1.14	nbn® Passive NTD	42
6.1.15	Disconnection of nbn® copper lead-in cabling.....	44
6.1.16	Use of existing telecom lead-in poles for customer cabling.....	45
6.1.17	Physical MDF tag.....	46
6.1.18	Activities specific to nbn® Fibre to the Curb (FTTC)	47
6.1.19	Testing and minimum specifications.....	48
6.2	Activities not authorised	51
6.3	Approved lead-in equipment (copper)	52
6.3.1	Connection box 1-2 lines	52
6.3.2	nbn® NTD.....	54
6.3.3	nbn® TO	55
6.3.4	Centralised filters	57
6.3.5	Cable connectors	58
7	nbn® fibre network.....	60
7.1	Authorised activities	60
7.1.1	nbn® indoor fibre NTD.....	63
7.1.2	nbn® outdoor fibre NTD	63
7.1.3	nbn® Customer Connecting Cable and SFP-NTD	64
7.1.4	nbn® fibre Business NTD (BNTD)	65
7.1.5	nbn® Fibre TV TVR.....	68
7.1.6	Premises internal cable (PIC).....	69
7.1.7	MDU NTDs and premises cabling.....	69
7.1.8	Testing and minimum specifications.....	71
7.2	Activities not authorised	77
7.3	Approved nbn® fibre equipment	78
7.3.1	nbn® Fibre Wall Outlet (FWO)	78
7.3.2	nbn® Through Connector	79
7.3.3	nbn® Premises Installation Cable (PIC)	79
7.3.4	nbn® Internal Connection Device (ICD)	81
7.3.5	nbn® Standalone fibre NTD and Power Supply	82

7.3.6	nbn [®] Smart Locations - (approved Non-Premise Locations) SFP-NTD	88
7.3.7	nbn [®] Business NTD (BNTD) and Power Supplies	89
7.3.8	nbn [®] Non-Premises Locations Customer Connecting Cables (CCC)	91
7.3.9	nbn [®] Fibre TV TVRs and Power Supply	95
8	nbn[®] HFC network	97
8.1	Authorised activities	97
8.1.1	SDUs	97
8.1.2	MDUs	98
8.1.3	Authorised work boundaries	99
8.1.4	Coaxial installation/modification/removal options	99
8.1.5	Testing and minimum specifications	103
8.2	Activities not authorised	105
8.3	Approved Coaxial equipment	106
8.3.1	PCD	106
8.3.2	ICD	106
8.3.3	Passive devices	107
8.3.4	Premises amplifier	109
8.3.5	Drop and indoor cables	111
8.3.6	F Connectors	114
8.3.7	Wall plates	117
9	Glossary	118

Figures

Figure 1.	Typical underground residential installation with TO as NBP	17
Figure 2.	Typical underground residential installation with passive NTD as NBP	18
Figure 3.	Typical aerial residential installation with first TO as NBP	18
Figure 4.	Typical aerial residential installation with a passive NTD as NBP	19
Figure 5.	Typical residential MDU installation with MDF as NBP	20
Figure 6.	Typical FTTC residential installation with first TO as NBP	21
Figure 7.	Typical Aerial FTTC residential installation with first TO as NBP	22
Figure 8.	Typical internal residential installation with first TO as NBP	23
Figure 9.	Stand-alone 4-port NTDs – indoor	24
Figure 10.	Stand-alone 1-port NTDs – indoor	24
Figure 11.	Stand-alone legacy indoor and outdoor NTDs	25
Figure 12.	Example of SFP-NTD Module	25
Figure 13.	Example of 1Gbps Business NTD (BNTD)	26
Figure 14.	Example of 2 to 10Gbps BNTD	26

Figure 15. Aerial and underground fibre NBP for stand-alone NTD within an SDU	27
Figure 16. Network Boundary Point for Stand-Alone NTD within an MDU	28
Figure 17. Aerial and underground HFC network building entry point and internal cabling (SDU)	29
Figure 18. Typical wiring to facilitate 'mode 3'	35
Figure 19. Representation of 2 pair - 5 pair cable minimum bend radius	37
Figure 20. Building cable entry	38
Figure 21. Typical VDSL2 centralised filter installation within an external NTD for existing star legacy wiring	41
Figure 22. Physical tag (front)	46
Figure 23. Physical tag (back)	46
Figure 24. FTTC Network	47
Figure 25. HLOG example with normal line and a bridged tap.....	50
Figure 26. nbn compact box 10023542	52
Figure 27. nbn compact NTD 10023656	53
Figure 28. nbn compact NTD with unterminated cables (only white conduit and saddles allowed)	53
Figure 29. nbn NTD with VDSL2 centralised filter installed (only white conduit and saddles allowed) .	54
Figure 30. nbn NTD 10023544	55
Figure 31. nbn faceplate	56
Figure 32. nbn VDSL2 centralised filter	57
Figure 33. nbn VDSL2 centralised filter	58
Figure 34. Connectors and crimping tool	59
Figure 35. nbn Internal NTD with PS/B Power Unit	61
Figure 36. Indoor fibre NTD and PS/S Power Unit arrangement.....	62
Figure 37. Installation of legacy fibre NTD with and without Power Supply.....	62
Figure 38. Installation of 1-port and 4-port fibre NTD with Power Supply.....	63
Figure 39. Legacy Outdoor fibre NTD installed internally, without PCD arrangement.....	64
Figure 40. Smart Locations	65
Figure 41. Business NTD (BNTD) arrangement - SDU	67
Figure 42. Business NTD (BNTD) arrangement - MDU	68
Figure 43. Fibre TV TVR with Indoor NTD.....	69
Figure 44. FDT to FWO & ICD arrangement	70
Figure 45. SDT to FWO & ICD arrangement.....	71
Figure 46. NTD fibre inspection and connection process flow	75
Figure 47. nbn FWO with inbuilt through connector SCA Simplex SM	78
Figure 48. SCA Through Connector	79
Figure 49. nbn Rugged Patch lead (Premises cable).....	79
Figure 50. ICD supplied with SCA Through Connector.....	81
Figure 51. SFP-NTD	89
Figure 52. 1Gbps – BNTD	89

Figure 53. 1Gbps NTD - Business PSUs	90
Figure 54. BNTD 2–10Gbps	90
Figure 55. 2–10 Gbps BNTD - PSUs	90
Figure 56. CCC with HFOC (Hardened Fibre Optical Connector).....	91
Figure 57. CCC with Pushlok	92
Figure 58. Pushlok adaptor	93
Figure 59. NJL	93
Figure 60. SJL	94
Figure 61. Fibre TV TVR Kingray.....	95
Figure 62. Fibre TV TVR Jonsa	96
Figure 63. nbn Coaxial Authorised Work Boundary – SDU	99
Figure 64. MDU equipment and cabling (coax).....	102
Figure 65. Typical PCDs	106
Figure 66. Hensel ICD	106
Figure 67. Typical isolator	107
Figure 68. Typical 2- and 3-way splitters	108
Figure 69. Typical attenuators	109
Figure 70. Typical premises amplifier	110
Figure 71. Typical RG6 and RG11 Quadshield cable	111
Figure 72. RG6 Tri-shield flooded cable.....	112
Figure 73. RG11 Quadshield flooded cable.....	112
Figure 74. Typical Aerial cable	113
Figure 75. Example F connectors / adaptors	114
Figure 76. Example compression crimp connectors	115
Figure 77. Typical skirt mount wall plate	117

Tables

Table 1. Wet cleaning products	72
Table 2. Dry cleaning products	74
Table 3. Overview of Nokia nbn NTD and Power Supplies.....	83
Table 4. Overview of Sercomm nbn NTD and Power Supplies.....	85
Table 5. Legacy outdoor and indoor NTD and power supplies.....	87
Table 6. Home run cable lengths	98
Table 7. Signal level.....	105

1 About this document

1.1 Background

nbn supplies nbn® services to its customers (RSPs) under the terms of a Wholesale Broadband Agreement (WBA). In order to supply network services, nbn must install certain nbn® owned copper, HFC and fibre network cabling, equipment, material and assets (Facilities) in relation to the end user's residential and small business premises and other approved Non-Premises Locations (NPLs). nbn must maintain these Facilities for continuance of the nbn® service.

1.2 Purpose

This document authorises Registered Cablers accredited by the Australian Communications and Media Authority (ACMA) to move, remove or alter certain nbn® Facilities.

This document also defines the types of activities and the areas of the nbn® network that can be altered in accordance with Health, Safety & Environment (HS&E) regulations.

nbn takes health, safety and environment very seriously and expects the same of our Delivery Partners (DPs), network planners, designers and constructors, who have a range of obligations under Workplace Health & Safety (WHS) and environmental legislation. Registered Cablers need to consider their specific duty of care; in particular, how they eliminate and minimise risks in the design that have an impact on later stages of the asset lifecycle (including construction, inspection and assurance) and how information about those risks, design rationale, and residual risks and controls are communicated to nbn.

nbn has considered the specific risks associated with these design standards for the lifecycle of the assets, and incorporated safety and environmental based design standards within this document where relevant.

As a Registered Cabler, there is an obligation to:

- undertake whatever calculations, analysis, testing or examination are necessary to ensure their work, as per the scope of this document, is conducted without safety or environmental risks, so far as is reasonably practicable;
- communicate residual risks associated with the work in the scope of this document and implement further controls/conditions required to manage those risks;
- demonstrate to nbn they have done the above with appropriate record keeping as stipulated in section 5.1 General terms and conditions; and
- ensure adequate training and competency of the workers involved.

1.3 Scope

This document applies to both premises and approved Non-Premises Locations and local areas of the nbn® network where certain Facilities typically terminate at a Telecommunications Outlet (TO), a passive Network Termination Device (NTD), Network Connection Device (NCD) or a Network Termination Device (NTD).

1.3.1 In scope

Facilities on premises fed by the copper network with copper cables of 10 pair or less, the HFC network, and the fibre network, as per authorised work activities listed in the document.

Facilities to approved Non-Premises Locations fed by the fibre network as per authorised work activities listed in the document.

1.3.2 Out of scope

The document does not apply to the below and other any other activity not explicitly authorised in this document:

- nbn® network to locations that are not premises or approved Non-Premises Locations
- Facilities that are not operated by nbn
- RSP and other third-party assets
- nbn® backhaul transit network
- mains cabling that terminates on a Main Distribution Frame (MDF)
- payphones
- cabling in high voltage substations or power generating stations and fuel dispensing stations
- any equipment, materials or assets associated with the nbn® Satellite network
- any equipment, materials or assets associated with the nbn® Fixed Wireless network
- any other activity that is not explicitly authorised within this document



Note: nbn may undertake activities that are deemed out of scope, or are otherwise unauthorised, upon request, and under a fee-for-service commercial works engagement. This excludes Facilities not owned and/or operated by nbn.

Further information can be found at:

<https://www.nbnco.com.au/develop-or-plan-with-the-nbn/commercial-works.html>

1.4 Audience

- Registered Cablers working in premises and approved Non-Premises Locations.
- RSPs
- End users

1.5 Assumptions and constraints

The Registered Cabler must be a registered cabling provider in either the 'Restricted' or 'Open' category and include the qualifications to:

- Install, terminate and certify structured cabling installations including CAT 5 and 6
- Install and terminate coaxial cabling installations

- Install and terminate optical fibre cable on end user premises.

1.6 Referenced documents

Document	Owner
[1] <i>AS/CA S009: Installation requirements for customer cabling (Wiring rules)</i>	Communications Alliance
[2] <i>AS/CA S041.3: Requirements for DSL Customer Equipment for connection to the Public Switched Telephone Network – Part 3: Filters for use in connection with all xDSL services</i>	Communications Alliance
[3] <i>G649: Cabling existing telecommunications services in the customer's premises for the nbn®</i>	Communications Alliance
[4] <i>Telecommunications Act 1997</i>	Australian Government
[5] <i>Criminal Code 1995 (Commonwealth)</i>	Australian Government
[6] <i>Building Code of Australia (BCA)</i>	www.abcb.gov.au

1.7 Changes in this revision

Changes in this document revision 6.0 dated 22 MAY 25 compared to the previous revision 5.0 dated 30 NOV 22 are summarised below:

Section	Details
Throughout document	<ul style="list-style-type: none">• Minor wording changes for clarity and consistency.
2.3.2 Guidance for migration of existing customer services from the existing Telstra or Optus access network technologies to the nbn™ network.	<ul style="list-style-type: none">• Deleted section.
4 Network boundary	<ul style="list-style-type: none">• New section combining existing information for each technology in relation to the network boundary point.
3 Authorisation	<ul style="list-style-type: none">• Note: Regrouped 'Authorised activities', 'Activities not authorised' and 'Approved equipment', under each technology.
4.1.2 FTTN/FTTB connections at an MDU site	<ul style="list-style-type: none">• Updated section heading and Figure 5 caption from 'FTTN' to 'FTTN/FTTB'.
4.1.3 FTTC	<ul style="list-style-type: none">• Clarified NBP location in FTTC.
4.1.4 Star Wired TOs	<ul style="list-style-type: none">• New section created from content previously in section 4.1.3 FTTC.
4.2.1 nbn® Fibre NTD - marked	<ul style="list-style-type: none">• Added details of NTD 2.0.

Section	Details
4.2.2 nbn® fibre NTD - unmarked	<ul style="list-style-type: none"> Added details of unmarked nbn-owned devices.
4.3.1 nbn Installation responsibility	<ul style="list-style-type: none"> Removed obsolete equipment from list of reasons for installing splitters.
7.1 Authorised activities	<ul style="list-style-type: none"> Added authorisation for removal of the PS/B and replacement with a PS/S or NTD upgrade. Revoked authority to terminate with a FIC the PIC at the PCD and the CCC at the NJL or SFP_NTD.
7.1.4 nbn® fibre Business NTD (BNTD)	<ul style="list-style-type: none"> Updates to scenarios and requirements for removal or relocation of BNTDs.
7.1.5 nbn® Fibre TV TVR	<ul style="list-style-type: none"> Deleted bullet point for: 'repair and replacement of the End User'. Added authority to extend or repair a PIC by installing an ICD. Revoked authority to re-terminate with a FIC the PIC at the PCD or FWO.
7.1.8.3 Power Supply test	<ul style="list-style-type: none"> Deleted the bullet point: 'check that the PS/S power light is on'.
(8.2.4) NTD Test	<ul style="list-style-type: none"> Deleted section.
7.2 Activities not authorised	<ul style="list-style-type: none"> Added activities. Deleted from list of not authorised activities: 'removal of PS/B from an NTD'.
7.3.3 nbn® Premises Installation Cable (PIC)	<ul style="list-style-type: none"> Updated approved PIC list.
(10.5) Field Installable Connector (FIC)	<ul style="list-style-type: none"> Deleted section.
7.3.5 nbn® Standalone fibre NTD and Power Supply	<ul style="list-style-type: none"> Added details of NTD 2.0 models.
7.3.7 nbn® Business NTD (BNTD) and Power Supplies	<ul style="list-style-type: none"> Added new section.
8.1 Authorised activities 8.1.4.1 SDUs Typical Coaxial installations and modifications Coaxial installation modification and removals	<ul style="list-style-type: none"> Added notes that in node areas that have been converted to 204MHz band split, premises amplifiers cannot be used and must be removed. Added notes that redundant splitters must be removed where possible.

Section	Details
Registered Cabler's modification & removal responsibilities	
8.1.4.2 MDUs	
Coaxial installation removals	
Registered Cabler's modification & removal responsibilities	
8.1.4.1 SDUs	<ul style="list-style-type: none"> Added note that the required removal of a redundant splitter is unlikely to cause errors or loss of service.
Coaxial installation modification and removals	
8.1.4.2 MDUs	<ul style="list-style-type: none"> Added requirement to update the Isolator.
Registered Cabler's modification & removal responsibilities	
8.1.5.1 Test Instrument	<ul style="list-style-type: none"> Updated test instrument list.
8.3.3.1 Isolator	<ul style="list-style-type: none"> Updated approved isolator list.
8.3.3.3 Attenuators	<ul style="list-style-type: none"> Updated approved attenuator list.
8.3.4 Premises amplifier	<ul style="list-style-type: none"> Added note that in node areas that have been converted to 204MHz band split, premises amplifiers cannot be used and must be removed.

2 Overview

2.1 General

Registered Cablers working in premises and approved Non-Premises Locations may need to alter Facilities to satisfy the end user's requirements. nbn authorises Registered Cablers to make limited alterations to Facilities in or on the building or approved Non-Premises Location when work complies to nbn's requirements as specified by the latest version of this document: *F0002-31-11678 Authority to Alter Facilities in Residential and Small Business Premises and Non-Premises Locations*.

2.2 Regulatory

Generally, nbn owns the Facilities it provides for the purpose of supplying nbn® services to the network boundary as defined in the WBA, whether or not they become fixtures. nbn may alter its Facilities in premises on request, at appropriate charges. Alternatively, nbn may authorise Registered Cablers to perform such alterations on terms and conditions stipulated by nbn.

A person who installs or maintains cabling for connection to a telecommunications network ('cabling work') must comply with the [4] *Telecommunications Act 1997*. The person must be registered to perform cabling work by an Australian Communications and Media Authority (ACMA) accredited body (a 'cabling registrar') and in accordance with the requirements under the Telecommunications Cabling Provider Rules 2014 (CPRs). It is a condition of the registration for the person to comply with the wiring rules [1], and other documents listed in section 1.6 Referenced documents, where applicable.

Clause 5.13 of [1] *AS/CA S009: Installation requirements for customer cabling (Wiring rules)*, prohibits a cabling provider from moving, removing or altering any lead-in cabling or network boundary facilities without the prior written authorisation of the carrier. However, the note to Clause 5.13 of [1] *AS/CA S009: Installation requirements for customer cabling (Wiring rules)*, clarifies that if a carrier publishes a document authorising cabling providers to alter its Facilities (such as this document), such a document will be taken to be the prior written authorisation of the carrier, as long as any terms and conditions set out in the document are adhered to by the Cabling Provider.

2.2.1 Laws

All telecommunications facilities owned or operated by a licensed carrier (e.g. nbn) or a carriage service provider are protected by various laws, whether or not they are located on the carrier's property, public property or private property (e.g. in premises). A summary of applicable laws follows.

2.2.1.1 Telecommunications Act 1997

In accordance with Clause 47 of Schedule 3 of the Telecommunications Act 1997 (Cth), nbn continues to have ownership of telecommunications facilities that it provides in premises even if they have become fixtures.

2.2.1.2 Criminal Code 1995 (Commonwealth)

A person is guilty of an offence under Section 474.6 of the Criminal Code 1995 (Cth) if:

- the person tampers or interferes with a facility owned or operated by a carrier or a carriage service provider
- the person tampers or interferes with a facility owned or operated by a carrier or a carriage service provider and this conduct results in hindering the normal operation of a carriage service supplied by a carriage service provider



The main distinction between a carrier and a carriage service provider is that a carrier owns the network infrastructure over which carriage services are supplied, while a carriage service provider supplies carriage services using the network of one or more carriers.

Each offence carries the risk of a substantial fine and/or imprisonment upon conviction. However, Section 474.3 of the Criminal Code 1995 (Cth) makes provision for a person to do anything for or on behalf of a carrier or a carriage service provider. For the purposes of Section 474.3 of the Criminal Code 1995 (Cth), **nbn** authorises a Registered Cabler to alter certain Facilities, on and subject to the specified terms and conditions set out in this document.

2.2.1.3 Other

nbn may bring a claim against a Registered Cabler who interferes with or damages nbn[®] facilities or services resulting in **nbn** suffering a loss.

2.2.1.4 Wholesale Broadband Agreement and cabling contracts

nbn supplies nbn[®] services to RSPs under the terms of a WBA. Under the terms of the WBA, RSPs must comply with the terms of this document and ensure that its contractors and employees comply with the terms of this document. Registered Cablers should therefore be aware that if they are working under a contract with an RSP, the terms of that contract may expressly require that they comply with this document.

2.3 Supplementary Information

2.3.1 Important information for the nbn[®] Copper Network

Before a cabling provider undertakes any work on the nbn[®] Copper Network, it is important that they understand the context and usage of the copper network for the supply of both nbn and other legacy services.

The nbn[®] Copper Network was originally deployed to provide basic telephony (POTS), and over time evolved to the supply of digital data services, such as Integrated Services Digital Network (ISDN), and Asymmetric Digital Subscriber Line (ADSL) and other technologies.

Within the current environment, where nbn has acquired the Copper Network from Telstra – there is a requirement for co-existence of legacy services (including POTS, ULLS, ADSL, ISDN and other Special Services).

Technological advances have occurred allowing the delivery of higher speed services, which generally see increased use of higher frequency bands over copper wiring. nbn utilises VDSL2 and G. Fast technologies within their Copper Network, and these are much more susceptible to issues within copper wiring.

To ensure that any work undertaken by a Cabling Provider does not adversely impact an end user and/or their ability to achieve high speed broadband services over the Copper Network using the nbn[®] FTTB, FTTN or FTTC technologies, particular care and attention should be paid to the quality of all copper cabling and/or connections made to the copper cabling.

For example:

- Wherever possible, if star-wired configurations exist, they should be removed.
- If no longer used, any additional internal sockets should be isolated and removed from connection to the first telecommunications outlet (TO).

If the premises have been migrated to the nbn[®] network and have a voice service being supplied through an RSP modem (instead of an exchange-based copper voice service), then additional internal wiring beyond the first TO can be removed and reconnected into the RSP modem to provide connectivity for legacy telephony devices.

3 Authorisation

nbn supplies telecommunications network services to RSPs using the nbn® network, which includes its copper network, HFC network and fibre network.

For **nbn** to supply network services, **nbn** may be required to install, modify or replace some of the existing Facilities at the premises or approved Non-Premises Locations, and must maintain these Facilities for the continuance of the nbn® service or supply of subsequent nbn services.

3.1 Rationale for limiting authorisation

nbn limits and controls authorisation for access to its network for the following reasons:

- in certain circumstances nbn has a statutory obligation to supply fixed line broadband services
- in certain circumstances nbn may install Over Voltage Protection (OVP) in relation to a premises
- in some cases, nbn may install equipment at the premises that are essential to the operation and performance of network

nbn has no legal obligation to authorise Registered Cablers to alter nbn® Facilities within premises and approved Non-Premises Locations. However, it is not **nbn**'s intention to impede cabling work that may include alterations to the Facilities if, in **nbn**'s opinion, a Registered Cabler is capable of carrying out such alterations without adversely affecting the **nbn** Facilities or the end user. Accordingly, **nbn** authorises Registered Cablers to make limited alterations to its Facilities in relation to premises and approved Non-Premises Locations under the terms and conditions specified in this document.

nbn reserves the right to cancel this document, to revoke or vary any authorisation conveyed in this document, or to vary the terms and conditions prescribed in this document, either generally or selectively, at any time without notice in its absolute discretion.

It is the responsibility of the Registered Cabler to ensure that this document has not been cancelled, the latest version of this document is used, and relevant laws, codes, standards or other regulatory requirements are complied with.

3.2 Facilities and practices

nbn specifies the use of certain Facilities and practices within the confines of its network (i.e. up to and including the relevant nbn® network boundary) because **nbn** shall maintain these Facilities or requires these Facilities to meet nbn performance requirements.

The Registered Cabler must use the same Facilities and practices as **nbn** would normally use on its side of the relevant nbn® network boundary, and this is referred to as the authorised work boundary for the Registered Cabler.

4 Network boundary

nbn owns or operates certain Facilities up to the nbn network boundary, also known as the network boundary point (NBP). The following sections detail where the NBP is for the nbn® copper, fibre and HFC networks.

Note: Generally, nbn owned equipment or cabling on the customer side of the network boundary will be identified as nbn property (e.g. labelled or stamped 'nbn').

4.1 nbn® Copper network

The NBP for carriage services that nbn supplies is determined in accordance with nbn's relevant supply terms with RSPs (e.g. the WBA).

4.1.1 FTTN connections not at an MDU site

4.1.1.1 Underground lead-in cable not connected to an end user MDF or passive NTD

Where the nbn® lead-in cable is not connected to an end user MDF or passive NTD, the NBP for each line supplied to a premises will be the first TO (first socket) after the building entry point. The first TO will be the NBP for most single dwellings throughout Australia. In these instances, **nbn** accepts responsibility for installation and repair of its network up to, and including, the first TO.

Note: Ten pair termination/connection boxes are not to be deemed as an MDF or as the NBP.

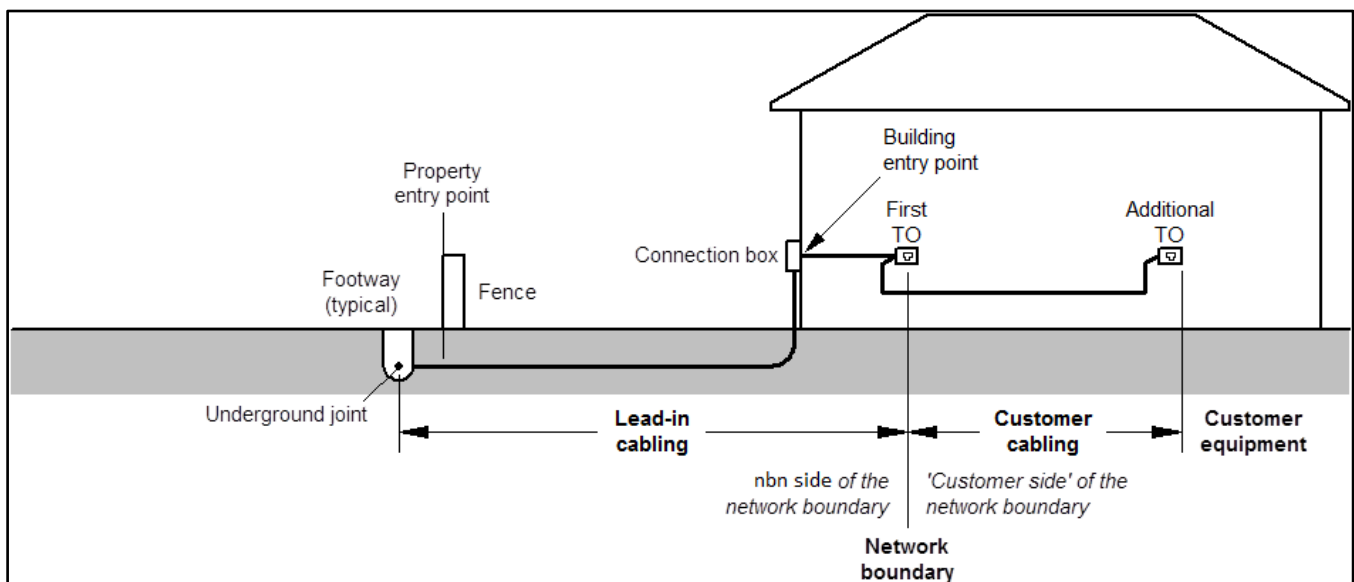


Figure 1. Typical underground residential installation with TO as NBP

4.1.1.2 Underground lead-in connected to external passive NTD.

Where the nbn® lead-in cable is connected to an external passive NTD, this defines the NBP.

Figure 2 shows the NBP for underground cabling when a passive NTD is installed.

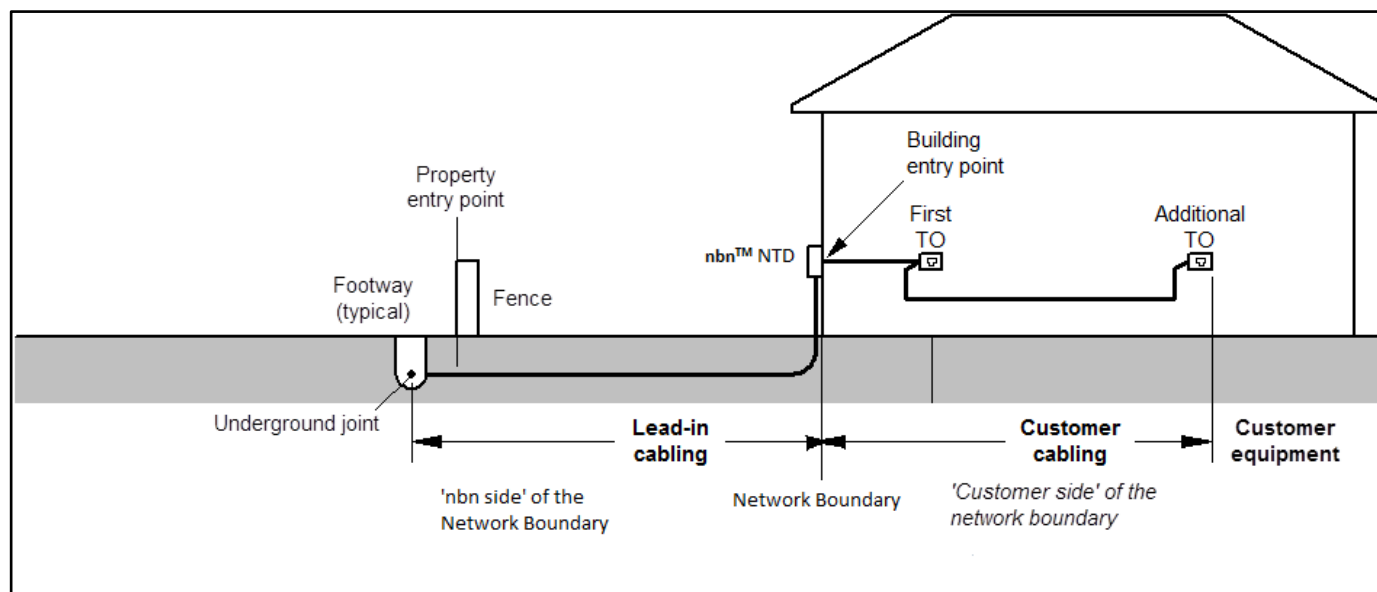


Figure 2. Typical underground residential installation with passive NTD as NBP

4.1.1.3 Aerial lead-in not connected to a passive NTD

The same rules apply for aerial fed lead-in cabling. If an NTD is not present, then the first TO is the NBP.

Figure 3 details typical aerial fed premises with the first TO as the NBP.

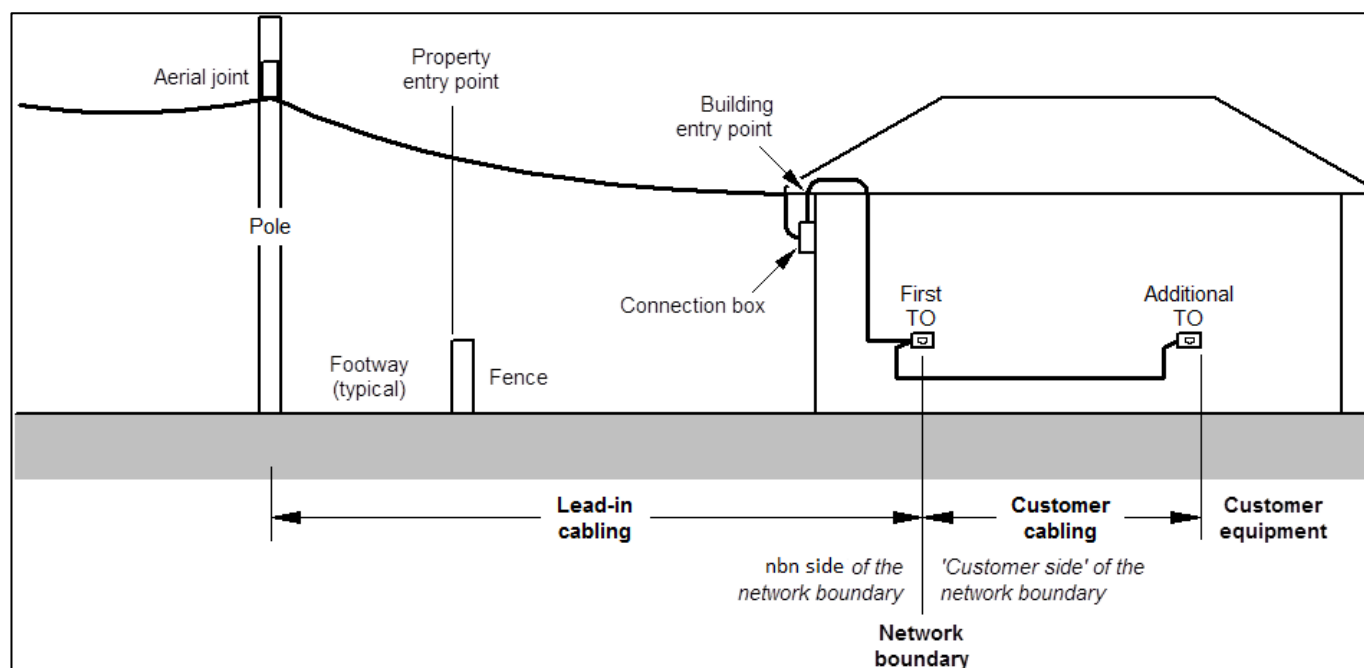


Figure 3. Typical aerial residential installation with first TO as NBP

4.1.1.4 Aerial lead-in connected to external passive NTD.

Figure 4 shows a typical aerial installation with a passive NTD as the NBP.

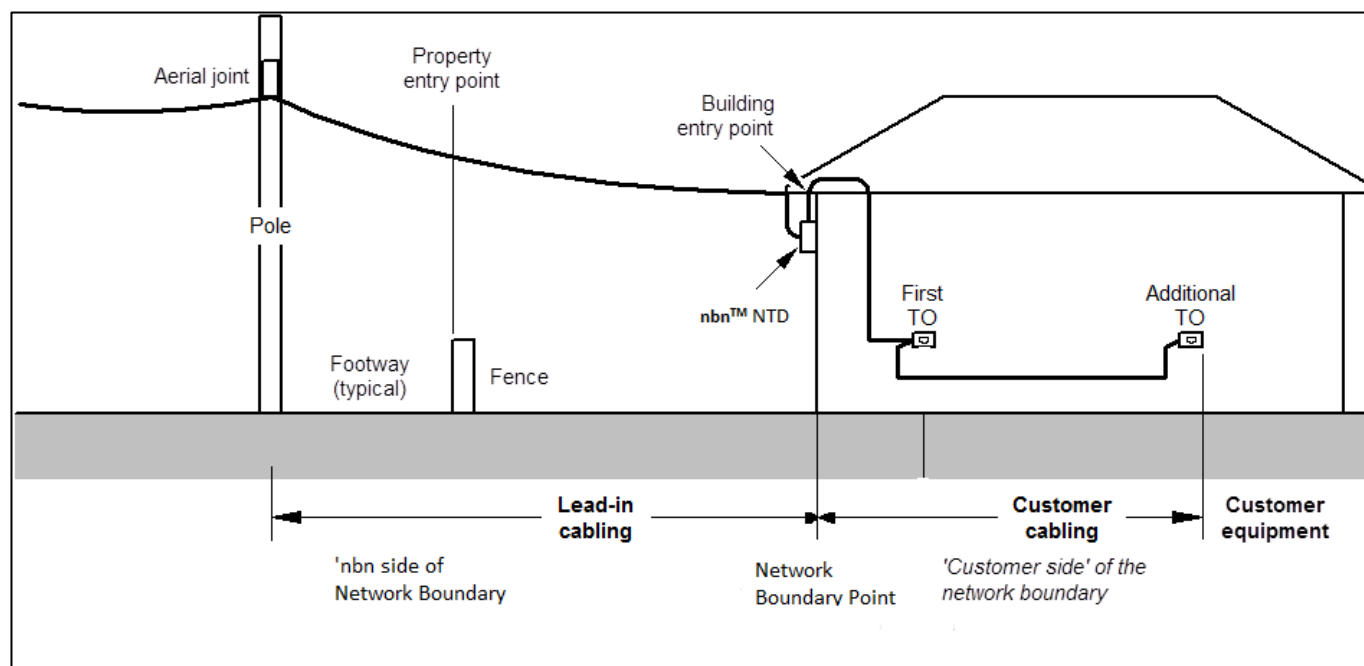


Figure 4. Typical aerial residential installation with a passive NTD as NBP

4.1.2 FTTN/FTTB connections at an MDU site

For FTTB and FTTN at an MDU site, the NBP will be the jumper cable termination on the end user side MDF.

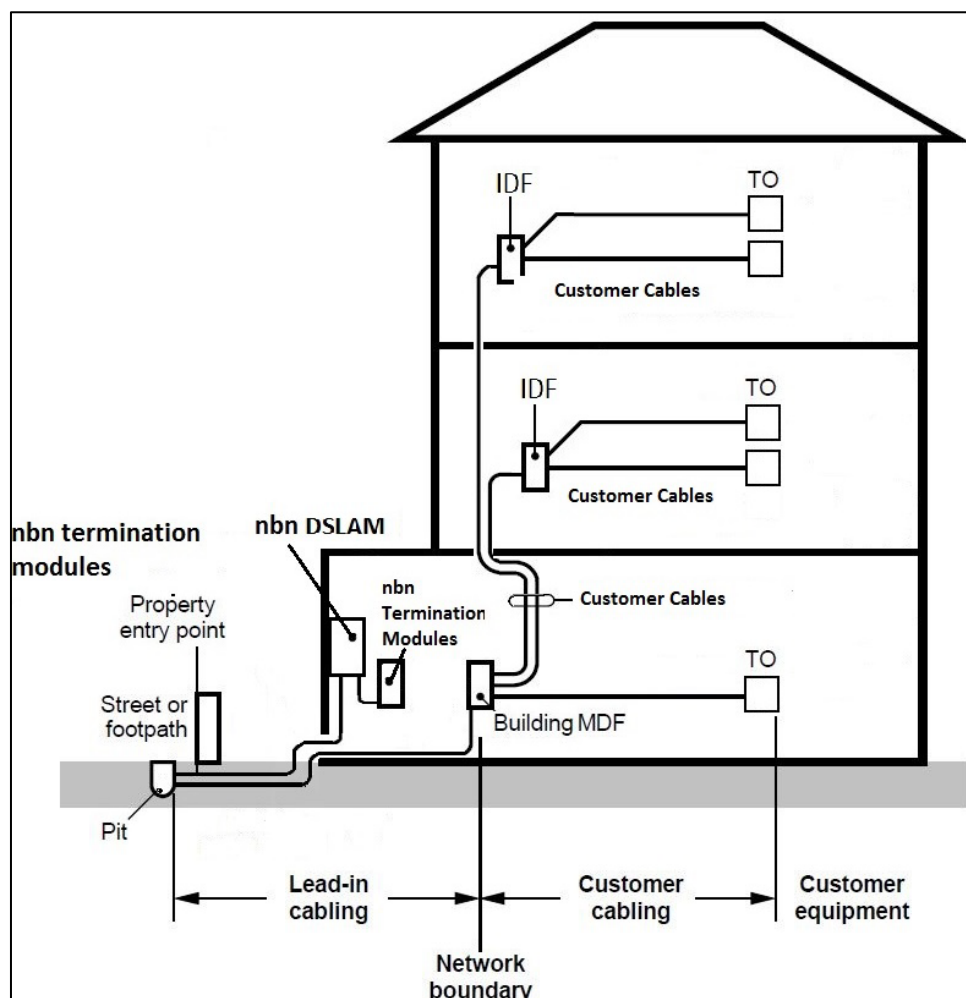


Figure 5. Typical residential MDU installation with MDF as NBP

Within MDUs where the lead in cable copper cable terminates at an MDF the NBP is the end user side of the building MDF as defined in [1] AS/CA S009: *Installation requirements for customer cabling (Wiring rules)*.

Where nbn has an FTTB Digital Subscriber Line Access Multiplexer (DSLAM) installed within the MDU with nbn® termination modules jumpered to the Building MDF, the installation of an nbn® DSLAM does not affect the NBP.

4.1.3 FTTC

For FTTC, when nbn® DPUs are located externally to the premises, the NBP will be the first TO. This applies to premises fed by either aerial or underground lead-in cabling.

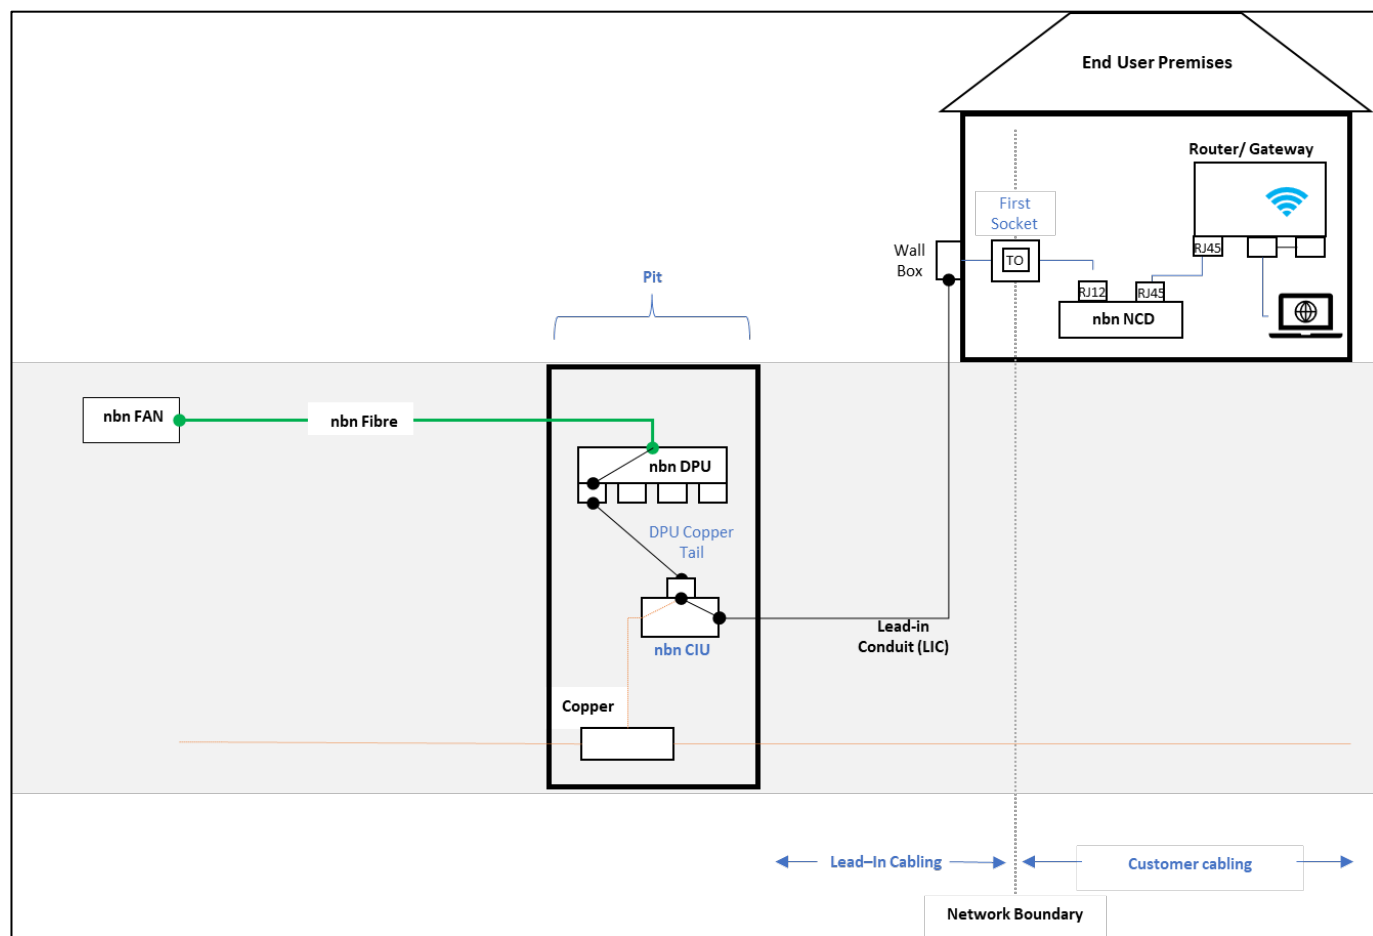


Figure 6. Typical FTTC residential installation with first TO as NBP

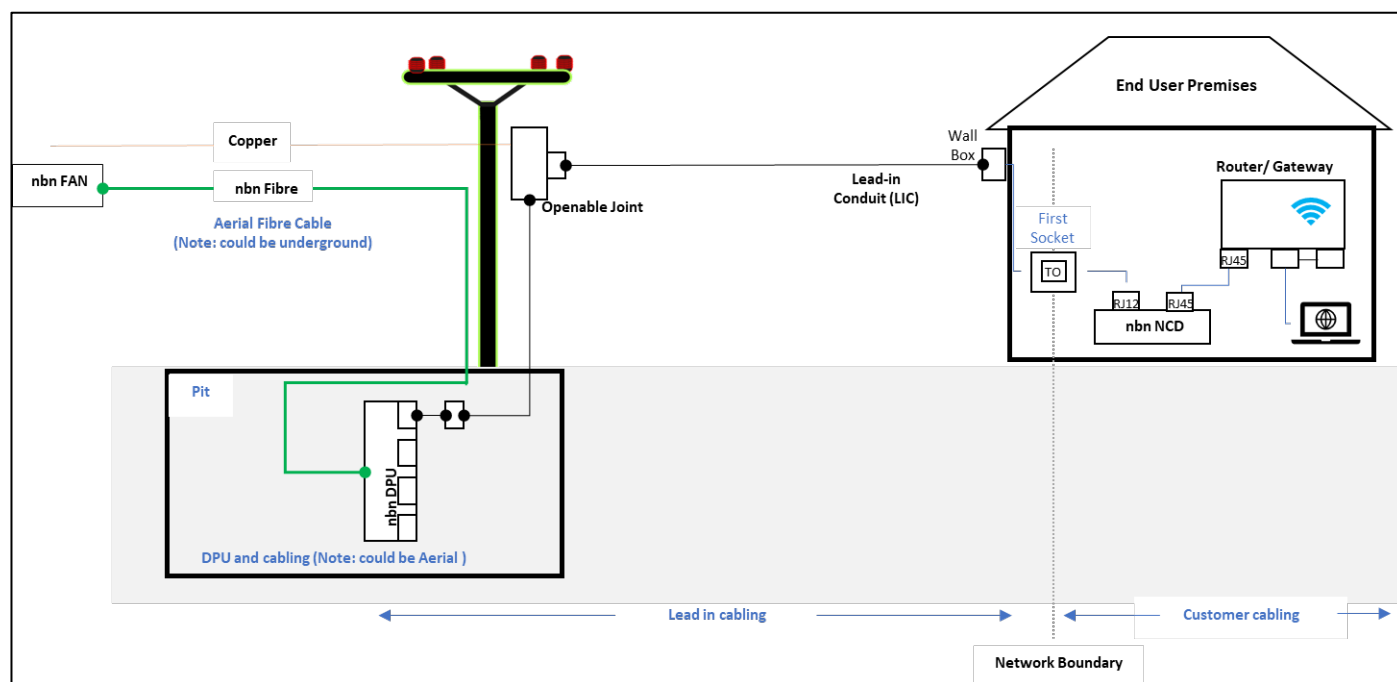


Figure 7. Typical Aerial FTTC residential installation with first TO as NBP

nbñ may have a Fibre-to-the-Curb (FTTC) distribution port unit (DPU) installed within the MDU with nbñ® termination modules jumped to the Building MDF. The installation of an nbñ® DPU does not affect the NBP which remains the Customer side of the building MDF as defined in [1]AS/CA S009: *Installation requirements for customer cabling (Wiring rules)*.

4.1.4 Star Wired TOs

Prior to 'deregulation' of premises cabling in 1989, it was common practice in some areas to star-wire TOs from a connection device or joint in the lead-in cable. In such cases, each star wired TO is potentially the network boundary for the cable terminated on it. **nbn** is not obliged to reconfigure existing star-wired installations.

This document does not legally change the network boundary from the first TO, NTD or customer side MDF to the building entry point or to any intermediate connection device or joint in the lead-in cabling - the network boundary is determined by legislation and detailed in [1]AS/CA S009: *Installation requirements for customer cabling (Wiring rules)* and what may otherwise be agreed in the WBA, and as such remains at the first TO, NTD or customer side MDF, as applicable. This document authorises Registered Cablers to make limited changes to certain Facilities, including changing the location of the NBP (e.g. changing the position of the first TO from one part of the building to another, or changing the network boundary from the first TO to a Passive NTD).

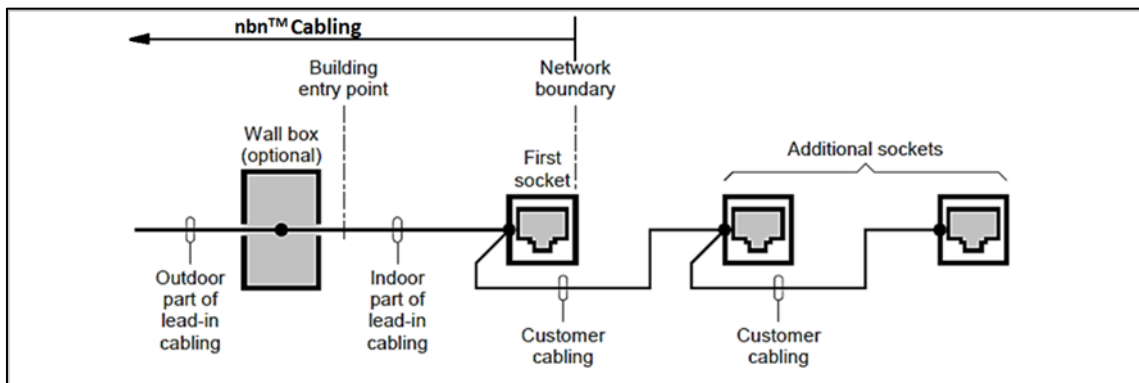


Figure 8. Typical internal residential installation with first TO as NBP

4.2 nbn[®] fibre network

The NBP for carriage services that nbn supplies is determined in accordance with nbn's relevant supply terms with RSPs (e.g. the WBA). The fibre service drop cable can be either aerially or Underground fed and generally connects to an external premises connection device (PCD) or building fibre device (BFD). A Premises Internal Cable (PIC) is then installed from the PCD or BFD to the fibre NTD or Network Device. Figure 15 details both aerial and underground nbn[®] fibre connections.

4.2.1 nbn[®] Fibre NTD - marked

A stand-alone unit that has an incoming optic fibre connection and provides UNI-V (legacy models only) and UNI-D output connections for customer equipment cabling. There are 1-port and 4-port UNI-D indoor NTD variants, and a single legacy NTD which all have "NTD Property of nbn" marked on them.



Figure 9. Stand-alone 4-port NTDs – indoor



Figure 10. Stand-alone 1-port NTDs – indoor



Figure 11. Stand-alone legacy indoor and outdoor NTDs

4.2.2 nbn® fibre NTD - unmarked

nbn has three unmarked NTD Optical Network Terminal Devices that are deployed at the NBP.

1. A SFP-NTD unit that plugs directly into the customers own equipment. This unit is not marked with “NTD Property of nbn”.

The NBP for SFP-NTD fibre installations is the SFP-NTD itself. The customer or RSP equipment that the SFP-NTD plugs into is not the responsibility of nbn.



Figure 12. Example of SFP-NTD Module

2. A stand-alone Business-Grade NTD for Enterprise Ethernet products up to 1Gbps that has an incoming optic fibre connection and provides fibre or copper output connections for customer equipment cabling. The Business Network Terminal Device (BNTD) is either rack- or wall-mounted.

This unit is not marked with "NTD Property of nbn".



Figure 13. Example of 1Gbps Business NTD (BNTD)

3. A stand-alone Business-Grade NTD (BNTD) unit for Enterprise Ethernet products from 2Gbps and up to 10Gbps that has an incoming optic fibre connection and provides fibre or copper output connections for customer equipment cabling. The 2–10Gbps Business Network Terminal Device (BNTD) is for internal application only and is either rack- or wall-mounted.

This unit is not marked with "NTD Property of nbn".



Figure 14. Example of 2 to 10Gbps BNTD

The NBP for stand alone fibre installations is the UNI-D ports on the fibre NTD or BNTD Equipment after the UNI port is defined as Customer or RSP equipment and is not the responsibility of nbn.

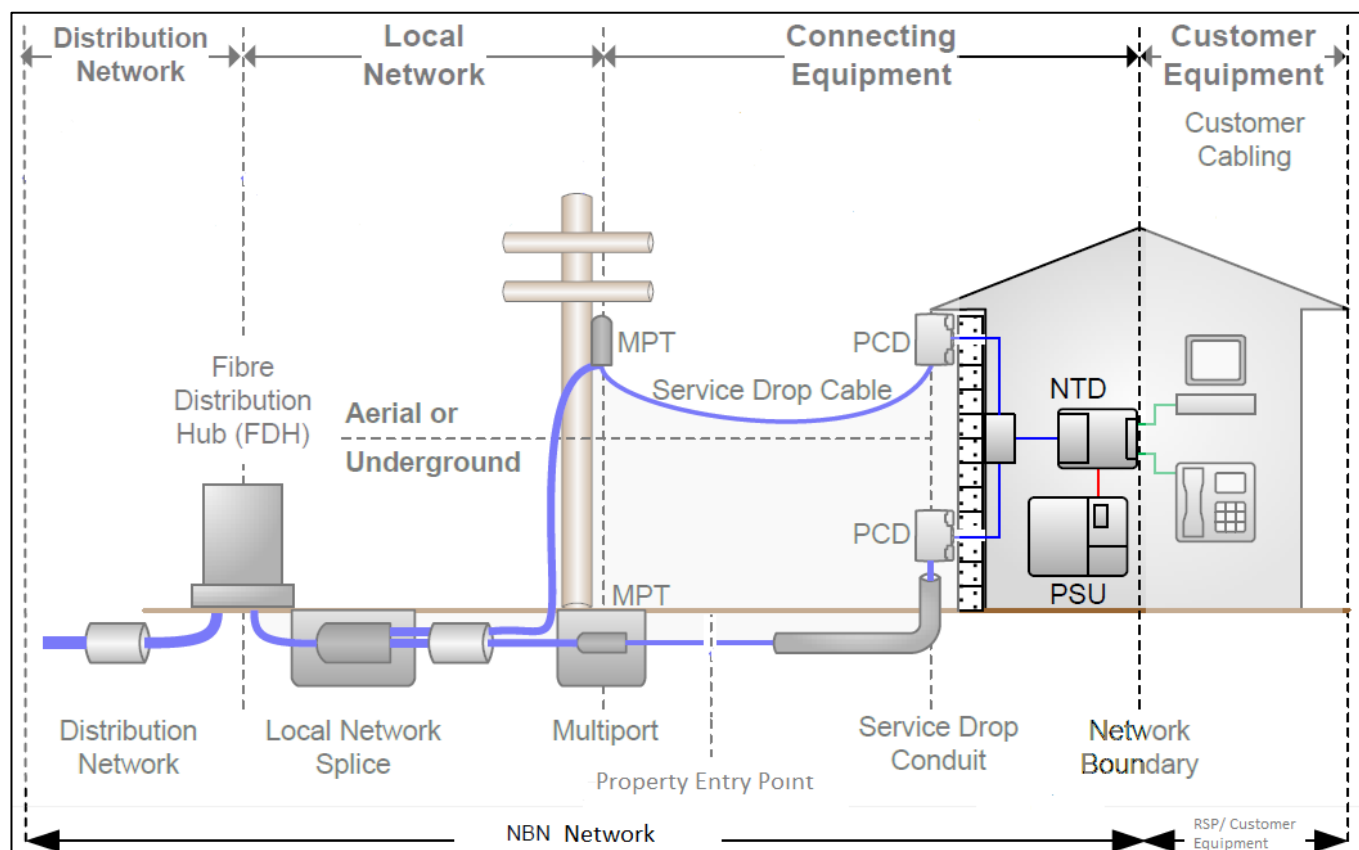


Figure 15. Aerial and underground fibre NBP for stand-alone NTD within an SDU

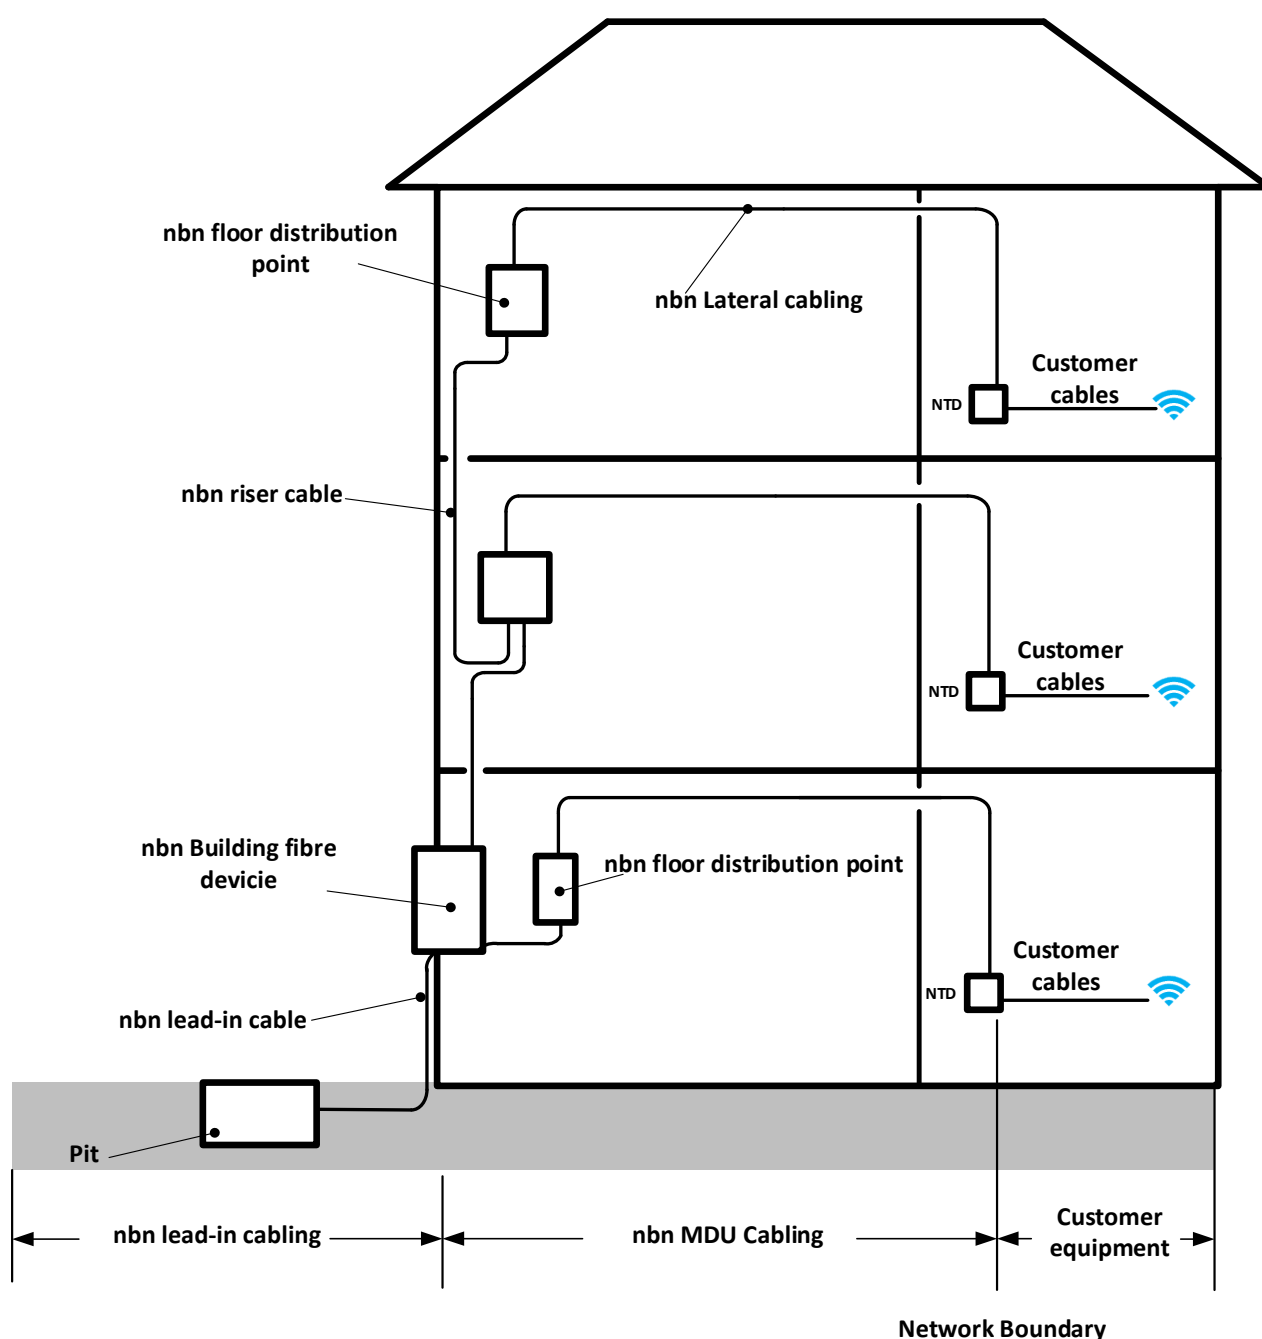


Figure 16. Network Boundary Point for Stand-Alone NTD within an MDU

The NBP for nbn Business BNTD fibre installations in both 1Gbps and 2-10Gbps applications is the customer facing UNI ports of the NTD itself. The customer equipment and cabling downstream of the ports is classed as customer cabling.

4.2.3 Fibre TV

For Fibre TV, the NBP is defined as the UNI-RFe port of the Fibre TV receiver.

4.3 nbn® HFC network

For HFC, the NBP is the HFC NTD.

nbn owns or operates its Facilities up to the nbn® network boundary. In some cases, nbn also owns equipment beyond the nbn® network boundary.

Generally, nbn® equipment or cabling on the customer side of the network boundary will be identified as nbn property (e.g. labelled or stamped 'nbn').

Irrespective of whether equipment or cabling is owned by nbn or not, such equipment and cabling must:

- conform to nbn approved materials lists; and
- be installed and commissioned in accordance with nbn approved design rules, construction practices and commissioning/test guides.

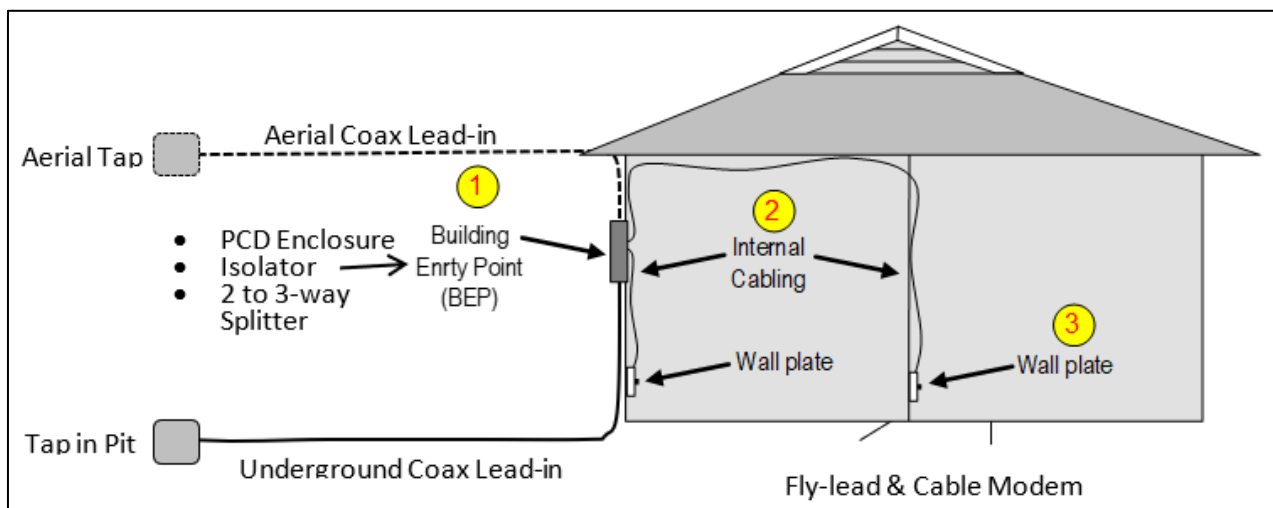


Figure 17. Aerial and underground HFC network building entry point and internal cabling (SDU)

4.3.1 nbn Installation responsibility

nbn is and remains responsible for constructing, modifying or removing the lead-in coaxial network from the Tap in the street coaxial network to and including the premises BEP. As shown in Figure 17, the lead-in may be aerial or underground. At the Building Entry Point (BEP), nbn or its Delivery Partner will install a PCD enclosure fitted with a mandatory 7kV Isolator and an optional 2-way or 3-way splitter (only where multiple NTDs are required). The latter is used where multiple wall-plates inside an SDU are to be installed to connect multiple services from one or RSPs. The equipment to be connected to the wall plate may include one or more nbn®-compliant HFC NTDs.

5 Authorised activities

Section 5 to section 8 (Authorised activities) describes the type of work that is authorised by **nbn** and sets out the general terms and conditions that apply to all activities, including further terms and conditions that apply to each specific activity.

If an activity is not listed in section 5 to section 8 (Authorised activities), it is not authorised.

5.1 General terms and conditions

nbn authorises a Registered Cabler to do certain work on Facilities, as set out in this document, subject to the general terms and conditions below.

- The Registered Cabler must be a registered cabling provider in either the 'Restricted' or 'Open' category.
- The Registered Cabler must hold additional competencies/endorsements relevant to the category of work being performed, e.g.
 - For work on the nbn® fibre network, hold Optical-fibre cable (OF) endorsement.
 - For work on the nbn® HFC network, hold Co-axial cable (OF) endorsement.
 - For work on the nbn® HFC network, hold Structured (S) endorsement, if any work performed uses Cat5/5e/6 cabling).
- The Registered Cabler must provide a Telecommunication Cabling Advice 1 form (TCA1 form) for work performed at or beyond on the network boundary, as defined in the CPRs.
- The Registered Cabler should provide a Telecommunication Cabling Advice 2 form (TCA2 form) to alert customers or building managers of any non-compliant cable installations that are outside the contracted scope of work.
- The Registered Cabler must discuss with the end user and make enquiries to determine whether the changes being made may have an impact on a service utilised by a Priority Assistance end user, a Fire or Lift Phone, or a medically vulnerable end user (such as those on monitored and unmonitored medical alarms). In the event that an impact is expected, the end user must be notified and agreeable to the change being undertaken.

All Registered Cablers are required to undertake appropriate training modules to ensure that they are competent to perform the cabling work according to [1] *AS/CA S009: Installation requirements for customer cabling (Wiring rules)*, which ensure safety to end users, Registered Cablers and the nbn® network.



nbn requires the Registered Cablers to be a registered cabling provider as a condition of this document as a measure of competency to do the work and to ensure that the requirements of [1] *AS/CA S009: Installation requirements for customer cabling (Wiring rules)* are met in case the work also involves any cabling activity on the customer's side of the network boundary.

The Registered Cabler must be familiar with all applicable legal and regulatory requirements for the performance of this work and comply with all laws, regulations, standards and codes of practice applicable to this work.

The Registered Cabler acknowledges responsibility for the restoration of faulty or substandard work, if they are required to do so by **nbn**, or the RSP and end user:

- nbn reserves the right to seek damages from the Registered Cabler, Responsible Third Party or Responsible Third-Party Damager if nbn incurs costs due to any work performed by the Registered Cabler on Facilities
- nbn retains ownership of any Facilities so worked on, whether re-used or replaced
- the Registered Cabler acknowledges that they are not performing any work under this document in nbn's name nor are they a contractor or employee of nbn
- the Registered Cabler must not represent or give an impression to end users or third parties that they are performing work as an employee or a contractor of nbn
- the Registered Cabler must not seek any remuneration from nbn for any work performed
- the Registered Cabler agrees to indemnify nbn against any liability, loss, damage, costs or expenses incurred or suffered by nbn that is caused by any act or omission of the Registered Cabler whether negligent or not, or which arises from any default under the terms and conditions of this document
- the Registered Cabler must not do anything that may affect the safety, integrity or proper functioning of the nbn[®] network or the safety of the end user or any other person (the Registered Cabler must not use substances or material deleterious to health or safety or which could adversely affect the functioning of the nbn[®] network)
- the Registered Cabler must ensure that they do not cause unnecessary detriment, inconvenience or damage to nbn, the RSP, the end user or a third party
- the Registered Cabler must not do any act or thing that is prejudicial to the goodwill, commercial reputation or overall public image of nbn
- the Registered Cabler must keep proper records of the work performed under this document that is available to nbn upon request within a reasonable timeframe
- notwithstanding anything contained in this document, the Registered Cabler must take all reasonable steps to ensure that lightning surge suppressors / isolators or any equipment that may be necessary for the safety and proper functioning of the installation are not bypassed or disconnected
- the Registered Cabler must not create any star-wired connections from an intermediate connection point in the lead-in cabling (i.e. between the property entry point and the first TO), unless the intermediate connection point is:
 - a centralised filter provided in accordance this document
 - an NTD provided in accordance with this document
 - a coaxial splitter or premises amplifier fitted to a PCD enclosure in accordance with this document
- the Registered Cabler must not render any nbn installation unusable (e.g. by removing the nbn cabling or not terminating the nbn[®] lead-in cable at a TO that is readily accessible by the end user), unless this is necessary for the purpose of renovation, demolition or relocation of the building
- the Registered Cabler must not connect nbn[®] lead-in cable to:
 - a customer MDF or
 - directly to a home networking box or

- a patch panel of any description
- any new cabling to the first TO must be installed in a manner that enables safe access and/or replacement of such cabling by nbn installers subsequent to its installation
- any waste material (e.g. used wire, cable; conduit) must be safely and properly disposed of in accordance with applicable laws
- all works must adhere to [1] *AS/CA S009: Installation requirements for customer cabling (Wiring rules)* and the Building Code of Australia (BCA).

6 nbn[®] copper network

6.1 Authorised activities

This section details the scope of the works that are authorised by nbn in relation to the copper network.

Subject to the terms and conditions set out herein, **nbn** authorises a Registered Cabler to:

- replace nbn's existing first TO with another TO of a type approved by nbn
- relocate nbn's existing first TO to another location within the same building
- relocate a fixed wall phone or other hard-wired telephone (other than a payphone) to another location within the same building, or replace it with a TO for the purpose of connecting other customer equipment
- disconnect a fixed wall phone or other hard-wired telephone (other than a payphone) if it is no longer required
- relocate a TO or provide an additional TO where the TOs are cabled from a common ('star-wiring') point in the lead-in cabling
- rearrange a star-wired installation to support a single-ended, bus-wired or 'mode 3' configuration
- replace, relocate or otherwise alter the indoor lead-in cabling for renovation, demolition or relocation of the building,
- disconnect a changeover switch connected to nbn[®] lead-in cabling
- install, relocate, replace or, under certain conditions (as detailed in section 4) remove a centralised filter connected to nbn[®] lead-in cabling
- replace or utilise the existing Passive NTD
- install a new Passive NTD or change a line module in an existing Passive NTD
- replace existing connection box/wall box with a nbn[®] connection box
- for nbn[®] lead-in cabling not exceeding a total capacity of ten (10) pairs and which does not terminate on a customer MDF, disconnect underground or aerial lead-in cabling at the external surface of the building for renovation, demolition or relocation of the building
- use nbn[®] lead-in poles to support customer cabling

The above activities may be performed independently or concurrently.

6.1.1 Replacement of the first TO

nbn authorises a Registered Cabler to replace the first TO with another TO or an external Passive NTD, and if the TO is replaced, shall be with an Industry approved TO of a modular type (e.g. 6P4C or 8P8C).

6.1.2 Relocation of the first TO

nbn authorises a Registered Cabler to relocate the first TO to another location, subject to the general terms and conditions of section 5 Authorised activities and the following:

- the TO shall only be relocated to another position in the same building (in the case of a building supplied with nbn® FTTB, or a multi-dwelling unit, only relocated within the same premises/sub-address. e.g. relocate to Unit 1 only, and not between Units 1 and 2)
- the TO location shall comply with siting details
- the TO, if replaced, shall be with an Industry approved TO of a modular type (e.g. 6P4C or 8P8C)
- the TO shall be cabled in accordance with [1]AS/CA S009: *Installation requirements for customer cabling (Wiring rules)*.

No alterations shall be made to any part of the outdoor cabling except for:

- one-for-one replacement of conductor terminations or connectors at an existing outdoor connection device for the sole purpose of disconnecting the old cable for the first TO and reconnecting the replacement cable
- re-routing of the TO cabling on the outside surface of the building where indoor cabling is not practicable
- the relocation or replacement of an existing outdoor centralised filter
- the replacement of an ADSL centralised filter with a VDSL2 centralised filter
- the installation of a Passive NTD
- disconnection of the cabling for the purpose of renovation, demolition or relocation of the building

6.1.3 Replacement of fixed wall phone or other hard-wired telephones

nbn authorises a Registered Cabler to replace an obsolete fixed wall phone or other hard-wired telephone (excluding a payphone) with a TO for the purpose of connecting other customer equipment, subject to the general terms and conditions of section 4 (General terms and conditions) above.

6.1.4 Relocation of the first TO

If the first TO is to be replaced or relocated:

- the installation will meet [1]AS/CA S009: *Installation requirements for customer cabling (Wiring rules)*.
- if the existing telephone or replacement TO is to be relocated and is to be reconnected as the first telephone or TO after the building entry point, it shall be installed in accordance with the requirements detailed in section 6.1.4 Relocation of the first TO

nbn authorises a Registered Cabler to disconnect a fixed wall phone or other hard-wired telephone (excluding a payphone) if it is no longer required and to advise the end user to return to the RSP, subject to section 5 Authorised activities and the following:

- if the aforementioned telephone is the first telephone connected to the line after the building entry point, it shall be replaced with a TO that complies with [1]AS/CA S009: *Installation requirements for customer cabling (Wiring rules)*.
- if the replacement TO is the first TO connected to the line after the building entry point and the required location of the TO is different to the location of the aforementioned telephone, it shall be cabled in accordance with the requirements of section 6.1.4 Relocation of the first TO

6.1.5 Relocation of star-wired TOs

nbn authorises a Registered Cabler to relocate a TO that has been star-wired from a connection block/box, lightning protector block or other joint installed in the lead-in cabling, subject to section 5 Authorised activities and the following:

- the TO shall be relocated without disturbing the connection block/box, lightning protector block or joint
- the building cabling shall be reconfigured, with star wiring beyond the first TO removed, in accordance with [1]AS/CA S009: *Installation requirements for customer cabling (Wiring rules)*.

6.1.6 Reconfiguration of nbn® wiring

nbn authorises a Registered Cabler to rearrange a star-wired installation to support a single-ended, bus-wired or 'mode 3' configuration for connection of a VDSL2 service, monitored security alarm, personal response (emergency call/medical alert) system, etc.

The arrangement shall be altered in accordance with Figure 18. Typical wiring to facilitate 'mode 3'.

- the TO connected as the first TO for each service shall be replaced with an approved TO if required
- the first TO shall be cabled in accordance with the requirements of section 6.1.2 Relocation of the first TO

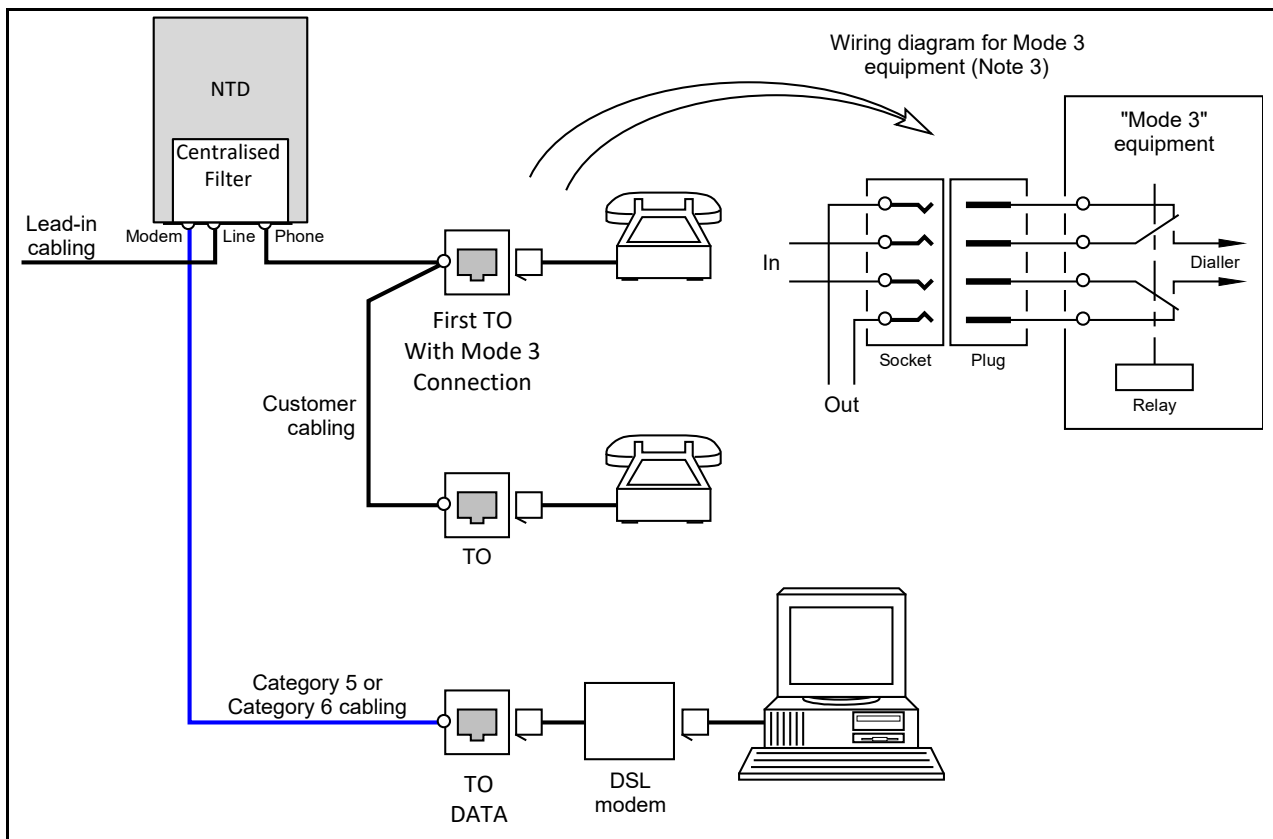


Figure 18. Typical wiring to facilitate 'mode 3'

If a 'mode 3' connection is required (e.g. for connection of a security alarm panel or a personal response (such as an emergency call/medical alert) system), the 'mode 3' TO must be the first connection point on the telephone side of the centralised filter, as shown in Figure 18.

6.1.7 Cabling in the building



Category 5 (or '5e'): cable or connecting hardware that is designed and manufactured to carry signals with a nominal maximum frequency of 100 MHz

Category 6: cable or connecting hardware that is designed and manufactured to carry signals with a nominal maximum frequency of 250 MHz

Where the cabling to the first TO 'first socket' is altered, the existing indoor part of the lead-in cabling (between the building entry point and the first TO) may be re-used or otherwise replaced in whole or in part, with PVC or polyethylene-sheathed cable with at least the same number of pairs as the existing cable.

Category 5 (or '5e') or Category 6 cable is strongly recommended for all new indoor cabling due to the number of pairs (four [4] pairs) and its noise and crosstalk immunity for VDSL2 services, and shall be ACMA compliant and have a solid copper conductor with a diameter of 0.4 mm or 0.5 mm.

Any cable that is run as outdoor surface cabling and not enclosed in conduit shall be ACMA rated outdoor type cable.

6.1.8 Cable installation

The lead-in cable shall be installed in a manner consistent with the wiring rules (refer to [1]AS/CA S009: *Installation requirements for customer cabling (Wiring rules)*) in respect of separation from other services, colour of conduit, etc.

Lead-in cabling that is run horizontally along an external wall shall be installed at least 100 mm above finished ground level. Lead-in cable on external walls shall be enclosed in conduit unless the cable is installed higher than 2.4 m or is protected from impact or abrasion by an overhang or similar building feature. Cable may be run as surface cabling without enclosure in conduit along a beam, fascia, soffit moulding, etc. Corrosion-resistant and UV-resistant cable fastenings shall be used on external surfaces.

Surface cabling on internal surfaces may be enclosed in plastic conduit, ducting or trunking, or may be stapled or clipped directly to a suitable timber support (e.g. skirting, architrave).

Outdoor or indoor cable, conduit, ducting or trunking shall be run vertically or horizontally unless it is run in parallel with a sloping building feature (e.g. bargeboard or raked ceiling), and should be run along or adjacent to suitable building features or fittings so as to be unobtrusive.

Lead-in cable installed on any surface without enclosure in conduit shall be fastened at distances no greater than:

- 500 mm for vertical cable runs
- 300 mm for horizontal or diagonal runs.

The cable bend radius for cable sizes of 2 to 5 pairs shall not be less than 25 mm (at least 50 mm bend radius is recommended for 4 pair and 5 pair cable). The cable shall be fastened on each side of the bend as shown in Figure 19 (machine stapling of category 5/5e or category 6 cable is not recommended unless the stapler is a type that limits the staple tension exerted on the cable sheath and is correctly adjusted).

Where conduit is used, rigid conduit should be used for straight or long cabling runs but corrugated (flexible) conduit may be used for short cable runs or difficult bends on the surface of the wall.

Conduit couplings and fittings should be glued or arranged to prevent the entry of water and to allow any water that may get in to drain out. An example of a suitable arrangement that does not require the conduit couplings to be glued is if the socket is above the spigot for vertical or diagonal conduit runs.



Any indoor cable that is continually immersed in water within the conduit will be prone to failure.

Conduit or ducting/trunking shall be fastened at distances no greater than:

- 900 mm for vertical rigid conduit or ducting/trunking
- 450 mm for vertical corrugated (flexible) conduit
- 600 mm for horizontal or diagonal rigid conduit or ducting/trunking
- 300 mm for horizontal corrugated (flexible) conduit

Outdoor conduits shall be fastened using galvanised saddles or half-saddles. For indoor conduits, nickel-plated or zinc-passivated saddles or half-saddles may be used.

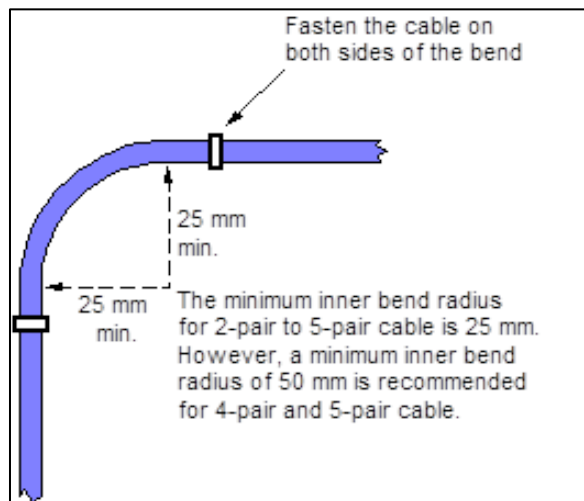


Figure 19. Representation of 2 pair - 5 pair cable minimum bend radius



Fasten the cable immediately before and after the bend, not in the middle of the bend.

6.1.9 Building cable entry

Any copper cable running down the cavity of an external wall should have a 'gooseneck' (half loop) formed in it to provide a 'drip point' so that any condensation or seepage water flowing down the cable does not run into the TO or onto the internal wall lining. Where sarking or panel bracing has been installed between the inner and outer walls, ensure that the drip point is provided on the outside (external wall side) of the sarking membrane or bracing panel. If it is necessary to drill a hole through external wall cladding for cable entry, drill at an upward angle into the wall cavity to ensure that any water running down the outer wall will not flow through the hole into the building. A suitable commercially available sealant should be used to provide a seal at the cable entry.

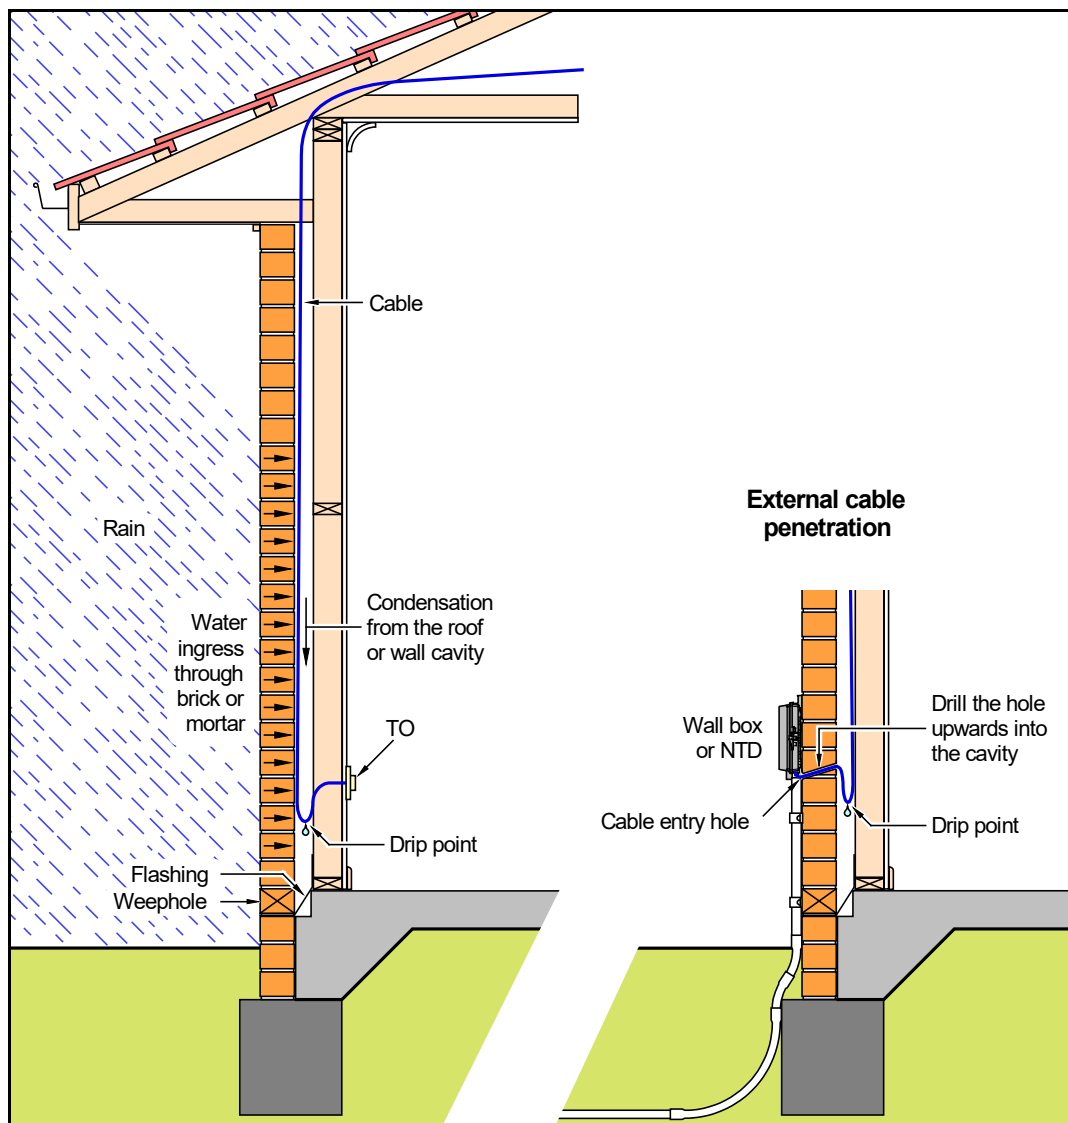


Figure 20. Building cable entry

The drip point consists of slack cable (minimum 200 mm, maximum 500 mm) left in the wall cavity and arranged such that it is looped downwards.

The drip point (slack cable) should be located on the outer side of any wall sarking or panel bracing (i.e. between the external brick or external wall cladding and the sarking/bracing).

For any external cable penetration to the building, drill the hole upwards into the wall cavity so that any water running down the external wall will not run through the hole into the building.

All Installation works shall adhere to [1]AS/CA S009: *Installation requirements for customer cabling (Wiring rules)* and the BCA.

6.1.10 Cable jointing

No joints shall be made in any part of the outdoor lead-in cabling except for:

- like-for-like replacement of conductor terminations or connectors in an existing outdoor connection device for the purpose of disconnecting the old cable between it and the first TO and reconnecting a replacement cable
- installation of an NTD
- replacement of a connection device/wall box other than an NTD with a PCD or
- installation of a VDSL2 centralised filter

Where it is proposed to join a new cable to the existing lead-in cable:

- the Registered Cabler shall make no more than one joint in the lead-in cable between an existing outdoor connection device or, where there is no outdoor connection device, the building entry point and the first TO
- the new cable shall replace part or all the existing cable and shall not be teed (star-wired) into the existing cable
- the joint shall be installed in an accessible location (e.g. accessible underfloor or roof space or behind a wall plate in a wall cavity) and shall be suitably constructed, enclosed, positioned and supported to prevent physical damage or the ingress of dust, insects, vermin and moisture (any new joint should be made in a suitable joint enclosure or connection box and be accessible)
- the joint shall be made using moisture resistant current industry standard connectors such as Scotchlocks 2 port-UY, using the crimping tool specified by the manufacturer of the connectors (pair twists shall be maintained as close as possible to the connectors)
- all pairs of the existing cable shall be jointed through to the first TO using the corresponding pairs of the new cable (unless the joint is being made in an Outdoor NTD, in which case only working pairs shall be connected)

6.1.11 Change/Over (C/O) switch

nbn authorises a Registered Cabler to disconnect an existing C/O switch connected to nbn® lead-in cabling if required, subject to Section 5 Authorised activities and the following:

- where the C/O switch is disconnected, nbn® lead-in cable shall be terminated on a TO
- if the location of the replacement TO is different to the location of the C/O switch, it shall be cabled in accordance with the requirements of section 6.1.2 (Relocation of the first TO)
- if the original need for the C/O switch has lapsed, a Registered Cabler may permanently disconnect the C/O switch, as long as the TO that is connected as the first TO complies with section 6.1.2 (Relocation of the first TO)

- nbn does not authorise a Registered Cabler to install a new C/O switch in nbn® lead-in cabling
- an NTD shall be installed in accordance with this section 6.1.11 Change/Over (C/O) switch such that the C/O switch is connected on the customer side of the NTD

6.1.12 VDSL2 centralised filter

nbn authorises a Registered Cabler to install or replace a centralised filter (also referred to as a central splitter or remote splitter) within the nbn lead-in, subject to section 5 Authorised activities and the following:

- the centralised filter shall be certified as compliant to [2]AS/CA S041.3: *Requirements for DSL Customer Equipment for connection to the Public Switched Telephone Network – Part 3: Filters for use in connection with all xDSL services*, or later
- nbn approved centralised filters are detailed in sections 13-15 .1 and shall be housed within either an NTD or TO integrated faceplate.

A Registered Cabler may install or replace a VDSL2 centralised filter in the lead-in cabling so long as all the following conditions are met:

- the centralised filter shall be located in or on the same premises as the modem
- if the centralised filter is to be installed outside the building (i.e. on an external wall), it shall be installed within an NTD
- the TO socket to be used for connection of the VDSL2 modem shall be legibly and durably marked 'DATA' or similar
- the TO socket to be used for connection of the VDSL2 modem must be of a modular type (e.g. 6P4C or 8P8C)
- If any new or replacement cable is provided between a lead-in connection device and the centralised filter shall be category 5 (or '5e') or category 6 cable
- any new or replacement cable provided between the centralised filter and the TO for the DSL service should be category 5 (or '5e') or category 6 cable
- replacement of an existing filter connected to the lead-in cabling
- a Registered Cabler may remove an existing centralised filter if the lead-in is terminated on a single TO (without star or bus wired additional TO) for dedicated connection to a VDSL2 Customer Premises Equipment (CPE)

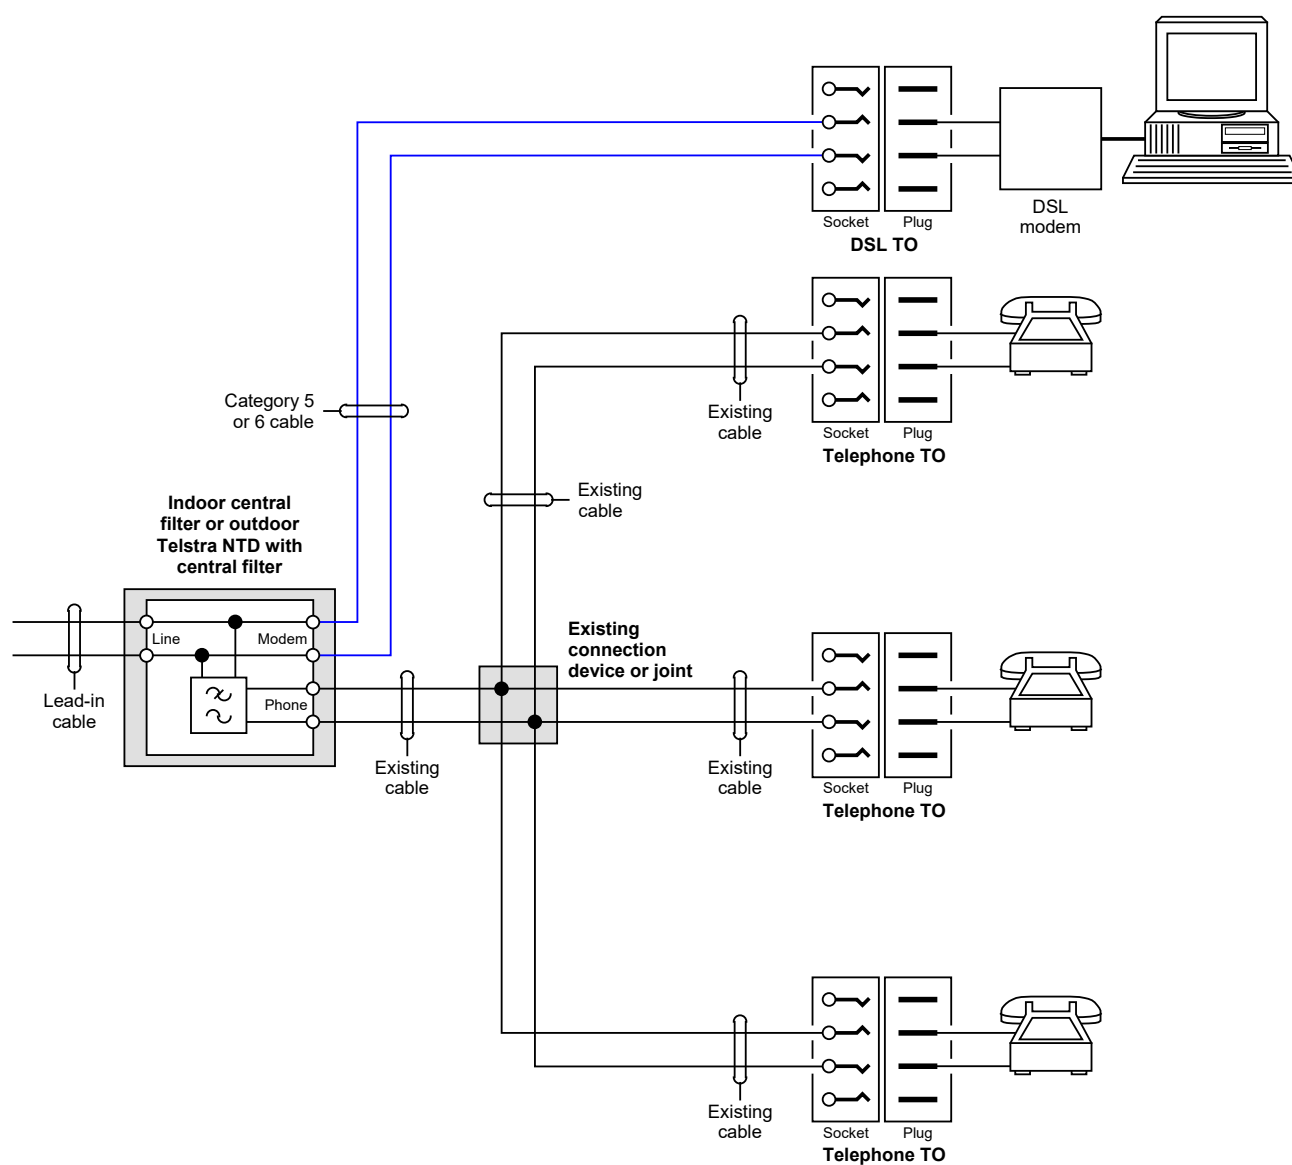


Figure 21. Typical VDSL2 centralised filter installation within an external NTD for existing star legacy wiring

6.1.13 Existing passive NTD

nbⁿ authorises a Registered Cabler to use the existing NTD if deemed fit for purpose or replace it with a new Passive **NTD**, subject to section 5 Authorised activities and the following:

- alterations to the existing Passive NTD can be undertaken if the Passive NTD is fit for purpose i.e. not showing signs of damage, or the seals are damaged or missing
- in cases where the existing Passive NTD requires replacement, then the existing NTD is to be disconnected and a new like for like NTD is to be installed
- the Passive NTD shall not be replaced if the lead-in cabling has more than a total of 5 pairs (e.g. more than one [1] x 5 pair cable or two [2] x 2 pair cables), which should be referred to the RSP/nbn
- any new Passive NTD to be installed shall be a Passive NTD described in sections 13-15
- the NTD shall be installed in accordance with this document and [1]AS/CA S009: *Installation requirements for customer cabling (Wiring rules)*
- an existing DSL line module shall not be replaced with a non-DSL line module; a DSL line module is to be replaced with the nbⁿ VDSL2 centralised filter.
- if an existing Passive NTD containing OVP or Customer Lightning Protection (CLP) is to be replaced, then the replacement equivalent Passive NTD shall be used (nbⁿ part number 10023544) and fitted with nbⁿ centralised filter modules and OVP (nbⁿ part number 10024460)

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Madison Technologies (nb ⁿ part number 10023544)	MT2710	Telstra NTD (1-6 Lines)
Madison Technologies (nb ⁿ part number 10024460)	MT2711	Central VDSL Splitter with OVP for MT2710 NTD



Earth connection should always be equipotential bonded to the electrical system where possible to take advantage of the inbuilt lightning protection.

Earth connection shall be made in accordance with section 20.7 of [1]AS/CA S009: *Installation requirements for customer cabling (Wiring rules)*.

This may need to be undertaken by a licenced electrician depending on the existing earth arrangement at the premises.

6.1.14 nbⁿ Passive NTD

nbⁿ authorises a Registered Cabler to install a Passive NTD where the existing connection device is damaged or otherwise not suitable, or the network boundary location is being changed, subject to section 5 Authorised activities and the following:

- the existing Passive NTD shall only be replaced with a Passive NTD device that is marked with “NTD”

- the Passive NTD installation is a like for like installation, inclusive of OVP and earthing arrangements (the earthing conductor used for equipotential bonding shall have a minimum cross-sectional area of 6 mm², green/yellow insulation and shall not exceed 10 m from the main earth bar/terminal)
- the nbn[®] connection box shall only be used when replacing a connection device (i.e. a 'Luca box' or wall box) and not a Passive NTD
- the Passive NTD shall only be installed if the nbn[®] lead-in cabling has no more than a total of five (5) pairs (e.g. no more than one [1] x 5 pair cable or two [2] x 2 pair cables)
- the Passive NTD shall only be used to connect a single household (inclusive of a 'home office' or 'granny flat') or a single office/business
- the Passive NTD shall not be used to connect a cable from another carrier's network other than a cable connected between the customer side of that carrier's NTD, first TO, wireless terminal, satellite terminal or a customer MDF and the customer side of the nbn[®] NTD
- the Passive NTD shall be located on the external wall of the same building in which the telecommunications service(s) will be used by the end user and shall not be installed at any point away from the building (e.g. at a fence, pole or any other detached structure)
- the new Passive NTD to be used shall be those described in section 7.3 Approved nbn[®] fibre equipment
- the passive NTD shall be installed on the external wall of the end user's building as close as practicable to the electrical switchboard for earthing requirements:
 - for a new building under construction, the preferred location is below the electricity enclosure to ensure the Passive NTD will be clear of any downpipes or adjoining fences
- the Passive NTD shall be installed no less than 500 mm and no more than 1300 mm from finished ground level (measured to the bottom of the Passive NTD):
 - for a new building under construction, the preferred height is 600 mm above finished ground level (measured to the bottom of the Passive NTD) to ensure that adequate clearance is maintained from an electricity enclosure located above the Passive NTD
 - separation from gas shall be at least one (1) m to the left and right of the meter and 500 mm above the regulator or any other fitting
- the Passive NTD shall be installed on a vertical surface with the cable entry ports at the bottom
- the Passive NTD shall not be mounted sideways, obliquely or upside down
- any cables exposed on the surface of the building shall be protected by conduit
- the nbn[®] lead-in cable shall enter the cable entry port at the bottom left of the Passive NTD and customer cables shall enter the cable entry port at the bottom right of the NTD (cables shall not enter the rear, side or top of the Passive NTD)
- the grommets/glands shall not be removed
- the end user shall be informed of the existence of the NTD as their new NBP
- adequate clearance shall be provided around and in front of the Passive NTD, in accordance with Appendix D of [1]AS/CA S009: *Installation requirements for customer cabling (Wiring rules)*, to provide safe and convenient access by nbn, service providers, Registered Cablers and end users

6.1.15 Disconnection of nbn® copper lead-in cabling

nbn authorises a Registered Cabler to disconnect underground or aerial nbn® lead-in cabling at the external surface of a building for the purpose of renovation, demolition or relocation of the building, subject to section 5 Authorised activities and the following:

- the lead-in cable shall only be disconnected if the total capacity of the lead-in cabling does not exceed 10 pairs and does not terminate on a customer MDF
- if a span of aerial lead-in cable is detached from the building for the purpose of renovation, demolition or relocation of the building, and the cable is not required to be cut, the cable and conduit shall be unfastened and suitably supported so as to protect from damage and shall be reattached to the building to comply with [1]AS/CA S009: *Installation requirements for customer cabling (Wiring rules)*
- if the underground or aerial lead-in cabling is disconnected for renovation, demolition or relocation of the building and is required to be cut, then it is to be cut at or as close as reasonably practicable to the external termination device, or if none are available, to the building entry point
- the cut cable is to have conductors individually insulated and sealed
- unsupported lead-in cable exceeding a length of 500 mm shall be tied in a loop and marked 'nbn lead-in cable'
- the lead-in cabling shall be reconnected utilising a Passive NTD or TO

6.1.16 Use of existing telecom lead-in poles for customer cabling

nbn authorises a Registered Cabler to use existing lead-in poles to support aerial customer cabling subject to section 5 (General terms and conditions) and the following:

- only poles that are located within the boundaries of the premises shall be used
- the poles shall only be used if sufficient pole height is available to install the customer cabling in accordance with the requirements of [1]AS/CA S009: *Installation requirements for customer cabling (Wiring rules)*, while maintaining the required separation from the nbn® aerial cable and fittings
- the customer cabling shall be installed and maintained at the end user's cost, including transfer of the cabling to any pole subsequently condemned and replaced by nbn
- only poles erected at the end user's cost may be used
- only existing telecommunications poles, located within the property boundary of the premises, may be used (existing telecom poles located outside the premises boundary shall not be used for customer cabling)
- the poles shall be of sufficient height and the nbn® lead-in cable shall be installed on the poles at sufficient height to allow installation of the customer cabling in accordance with the following:
 - the customer cabling shall be installed below the aerial nbn® lead-in cabling
 - the customer cabling and associated pole fittings shall be separated from the nbn® lead-in cable and associated pole fittings by at least 300 mm at the pole
 - the customer cabling shall be separated in-span from the nbn® lead-in cable by at least 300 mm
 - the customer cabling shall be installed in accordance with the relevant requirements of the wiring rules ([1]AS/CA S009: *Installation requirements for customer cabling (Wiring rules)*) including minimum ground clearances
 - the customer cable shall not be installed within any nbn or existing telecom underground pit or conduit, or within any nbn or existing telecom conduit installed on the pole



For safety reasons **nbn** will not use end user-owned poles to support nbn® cabling but will allow nbn owned poles erected at the end user's cost to be used to support the end user's aerial LV power mains or customer cabling.


nbn should be advised of this requirement in advance of commencement of pole installation, so **nbn** can ensure that the poles used are of sufficient height to support additional cables.

6.1.17 Physical MDF tag

nbn may, in its discretion, connect a tag to an nbn® copper pair to identify that pair to a cabling provider. This will generally only apply to services connected to a Main Distribution Frame (MDF) but may occasionally be used to identify a pair at a connection box or other part of the nbn® network.

An example of the nbn® Physical MDF Tag has been provided below in Figure 22 and Figure 23.

Following the connection of a service where a physical tag has been provided, Registered Cablers should remove the physical tag to ensure that it does not interfere with the correct operation of the service in question.

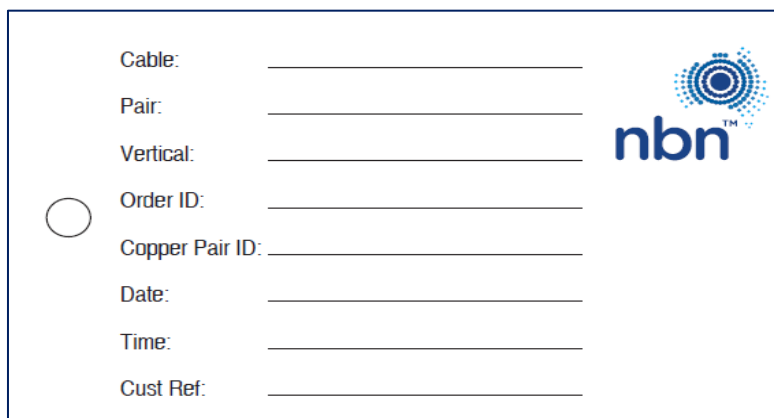

Cable:	_____
Pair:	_____
Vertical:	_____
Order ID:	_____
Copper Pair ID:	_____
Date:	_____
Time:	_____
Cust Ref:	_____


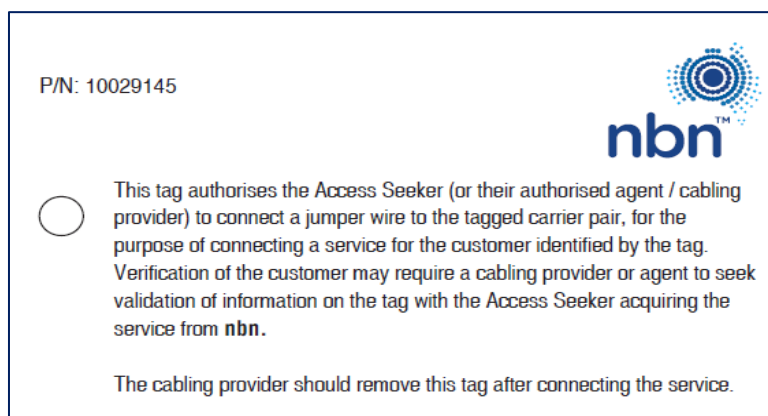



Figure 22. Physical tag (front)



P/N: 10029145



This tag authorises the Access Seeker (or their authorised agent / cabling provider) to connect a jumper wire to the tagged carrier pair, for the purpose of connecting a service for the customer identified by the tag. Verification of the customer may require a cabling provider or agent to seek validation of information on the tag with the Access Seeker acquiring the service from nbn.

The cabling provider should remove this tag after connecting the service.

Figure 23. Physical tag (back)

6.1.18 Activities specific to nbn[®] Fibre to the Curb (FTTC)

This section details the additional scope of the works that are authorised by nbn in relation to the nbn[®] copper network, specifically where an nbn[®] Fibre to the Curb (FTTC) service is provided.

Any Network Connection Device (NCD) and related nbn[®] equipment shall only be replaced by nbn approved products.

Subject to the terms and conditions set out herein, and the requirements throughout Section 6 of this document, nbn authorises a Registered Cabler to:

- Replace, relocate or otherwise alter within a premise for renovation, demolition or relocation of the building/premises subject to the boundaries identified in Figure 24 below, and with reference to section 3 for details on the Network Boundary Point (NBP)
- Perform the setup of Customer Premises Equipment (CPE) – refer to ‘nbn set up guide - Fibre to the Curb (FTTC)’ (available on nbn.com.au/FTTC)
- Where they are working for an RSP, conduct only the NCD self-install activities defined under the WBA. This document sets out rules on how to install NCDs under the WBA NCD self-install provisions. It does not expand or extend your rights to conduct NCD installs, remove or qualify any rules or limits in the WBA, or otherwise vary any WBA obligations or limitations.

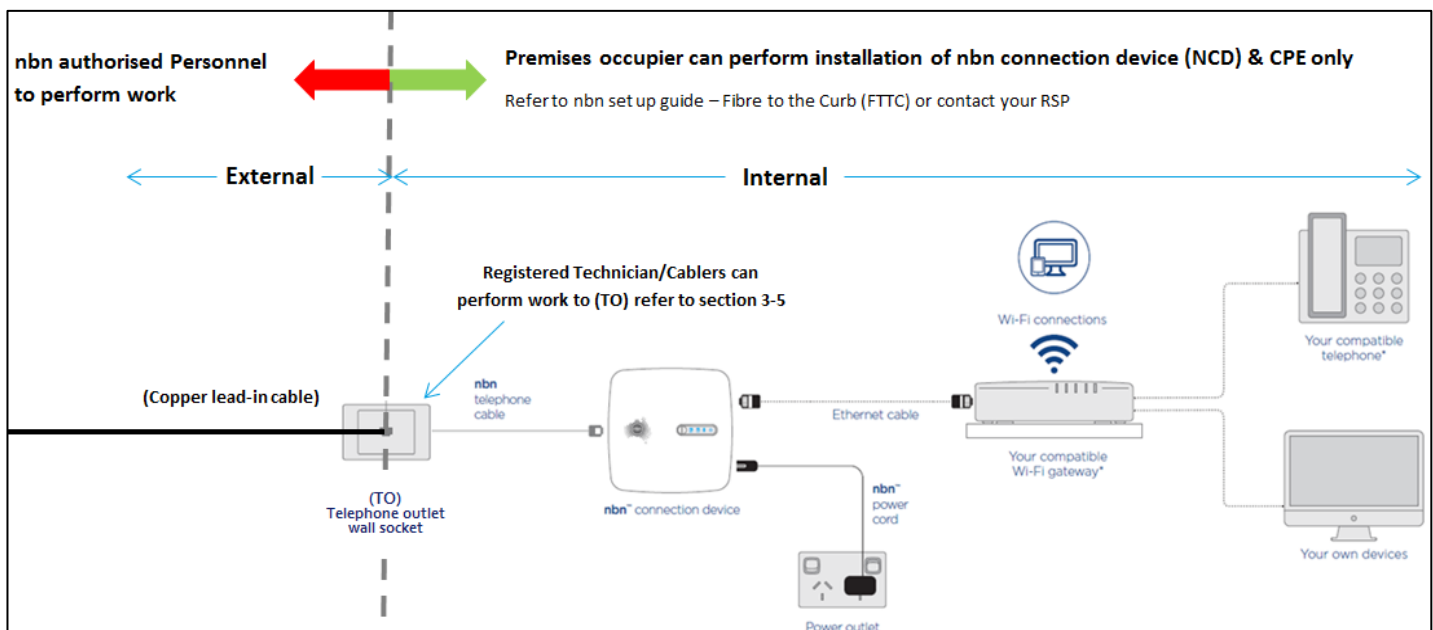


Figure 24. FTTC Network

6.1.19 Testing and minimum specifications

All tools must be regularly maintained, and test equipment must be calibrated in accordance with the manufacturer's recommendations.

All hand-held power equipment must be electrically tested and tagged in accordance with all applicable legislation and local requirements.

6.1.19.1 Test Instrument

nbn compatible modems can be utilised for service testing or a test instrument that contains a VDSL2 compatible modem, with the ability to support the following:

- Vectoring
- Sync
- Actual line speed
- Noise margin
- Attenuation
- Attenuation vs Frequency (Hlog) – optional (but recommended for visual line impairment indication)

Note: The VDSL2 deployment class profile is ITU-T G.993.2 17a (B8-11 17.664MHz)

A copper test instrument that can perform a minimum of the following:


- Volt/Ohm
- Capacitive Balance
- RFL (Resistive Fault Locator)
- TDR (Time-Domain Reflectometry)

6.1.19.2 Service test (check)

1. Utilising a suitable copper test instrument verify the following (typical values shown in table below):
 - a. No Foreign Voltage
 - b. No Resistive faults
 - c. Balance is within specification
 - d. No Bridged Taps
4. VDSL Synchronisation, Utilising end user modem or one contained within a test instrument:
 - a. Actual Line speed is greater than or equal to the line speed prior to works being performed and not below 25Mb/s Downstream and 5Mb/s Upstream
 - b. Check with the end user that all services are operational (i.e. phone / internet)

If there is a fault indication (No Sync / service / copper test fail) check connections and if fault cannot be cleared, log a fault with the Retail Service Provider whom may choose to engage nbn.

Parameter	Value				
Foreign Voltage (V)	AC Voltage Fault if: <ul style="list-style-type: none">>5V@A-G; or B-G or Hazardous if: <ul style="list-style-type: none">>50V@A-G; or B-G Under normal conditions, when the phone is on-hook, there should be no AC voltage on the line. DC Voltage Fault if: <ul style="list-style-type: none">>5V; or <-5V@A-G; or B-G or Hazardous if: <ul style="list-style-type: none">>135V; or <-135V@A-G; or B-G				
Insulation Resistance	Resistive Fault if: <ul style="list-style-type: none"><1.8Mohms@A-G or B-G or A-B				
Capacitive Balance	Balance Fault if: <ul style="list-style-type: none">Ratio <0.85@[A-G/B-G]				
Attenuation to Support VDSL2	Freq (kHz)		301.875	1000.5	3751.875
	Atten CPFUT 0.4mm (dB/km)		11.05	18.78	37.59686
	Scenario	Max Length (km)	dB Atten @ 300kHz	dB Atten @ 1000kHz	dB Atten @ 3750kHz
	25/5M on Vectored VDSL2	1.14	12.6	21.4	42.9
	25/5M on Vectored VDSL2 (exc. House)	1.1	12.2	20.7	41.4
	50/10M on Vectored VDSL2	0.75	8.3	14.1	28.2
	25/5M on Non-vectored VDSL2	0.65	7.2	12.2	24.4
	43dB @ 3.75MHz is a length of 1.14km				
Longitudinal Balance	<ul style="list-style-type: none">< -70dB Good60 to -70dB Fair> -60dB Bad				

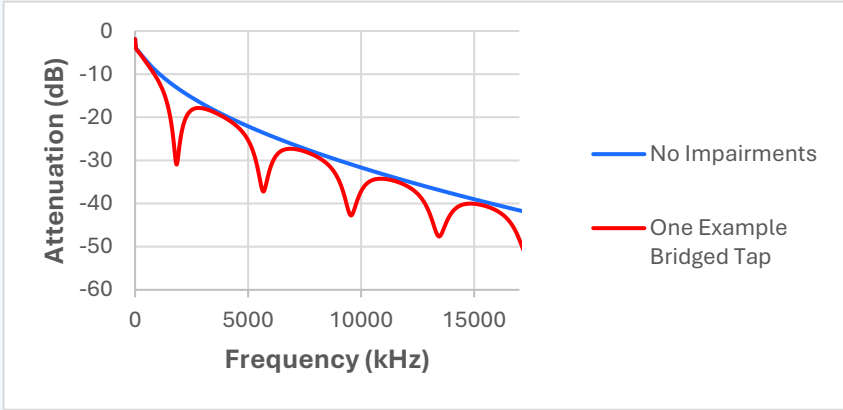Parameter	Value
Loop Resistance	<ul style="list-style-type: none"> Worst case figure of > 360 Ohms for 0.4mm to trigger an investigation for a 2.2Km loop (1.1Km each way) Sampled calculations @0.4mm diameter (different copper as below) for 2.2Km are: Pure Copper = 294 ohms Plain annealed Copper = 330 ohms
No Bridge Taps	<p>The appearance of a straight line (Attenuation vs Frequency) within a HLog graph, indicates good line performance.</p> <p>Dips in a HLog graph indicate attenuation impacted by the presence of bridged taps.</p>  <p>Figure 25. HLOG example with normal line and a bridged tap</p>

6.2 Activities not authorised

This document does not authorise a Registered Cabler to do any of the following:

- use or alter any part of the underground or aerial nbn® lead-in cabling between the property entry point and the building, other than disconnect cabling not exceeding a total capacity of 10 pairs for the purpose of renovation, demolition or relocation of the building
- connect or reconnect any underground or aerial lead-in cabling that has been cut at the external surface of the building for renovation, demolition or relocation of the building, unless the lead-in cabling has been cut during building renovation for the eventual purpose of installing a Passive NTD
- disconnect the nbn® lead-in cable and leave it permanently disconnected in any end user-accessible location, other than where necessary for renovation, demolition or relocation of the building, this includes all safety precautions necessary when cable disconnected
- totally remove nbn facilities from the building other than for renovation, demolition or relocation of the building
- alter or disconnect any nbn® lead-in cabling exceeding a capacity of 10 pairs
- alter or disconnect any payphone installation
- alter or disconnect any nbn® lead-in cabling in a power generating station or a high voltage distribution substation
- alter or disconnect any nbn® lead-in cabling in a hazardous area (explosive atmosphere) as defined in [1]AS/CA S009: *Installation requirements for customer cabling (Wiring rules)*
- star-wire an additional TO from an existing connection block/box or joint in nbn® lead-in cabling (other than a Passive NTD), or install a new termination block/box or joint (other than a Passive NTD) in the lead-in cabling for star-wiring TOs
- disconnect or remove any Passive NTD to change the network boundary from the Passive NTD to the first TO ('first socket') or any other connection point
- disconnect or remove any centralised filter (also referred to as a central splitter or remote splitter) connected to nbn's® lead-in cabling or provided within an existing Passive NTD if:
 - its disconnection or removal is essential to the proper functioning of a proprietary high-speed data service or
 - the lead-in is terminated on a single TO (without a star or bus wired additional TO) for dedicated connection to a VDSL2 CPE
- disconnect nbn® lead-in cabling for migrating services from the nbn® copper network to a different nbn network technology, such as the fibre network, HFC network, fixed wireless network or satellite network.
- bypass an existing Passive NTD containing OVP with a Passive NTD not containing OVP
- remove earth connections from an existing NTD, unless moving the earth to the new Passive NTD that contains OVP
- use screw terminals of any description for connection or jointing of nbn® lead-in conductors

- Alteration of nbn® lead-in cabling or authorised work boundary where any the following devices or equipment is connected at the first point (whether hard-wired or plug-connected):
 - any type of line multiplexing, line conditioning or line conversion equipment (e.g. a small pair-gain system)
 - a payphone
 - a functioning Integrated Services Digital Network Type 1 (ISDN NT1) or Analogue Network Termination Type 1 (ANT1)

6.3 Approved lead-in equipment (copper)

6.3.1 Connection box 1-2 lines

- 1-2 lines
- Scotchlok termination (Only approved Scotchlok with corresponding Scotchlok tool to be used (no improvised tools such as pliers to be used to for crimping scotch locks)
- IP53
- not marked as nbn compact NTD



Figure 26. nbn compact box 10023542

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Madison Technologies (nbn part number 10023542)	MT1007	NBN Enclosure PCD Copper

- NTD enclosure 1-2 lines
- suits up to two (2) x VDSL2 centralised filters
- Scotchlok termination (Only approved Scotchlok with corresponding Scotchlok tool to be used (no improvised tools such as pliers to be used to for crimping scotch locks)
- IP53
- marked with NTD



Figure 27. nbn compact NTD 10023656

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Madison Technologies (nbn part number 10023656)	MT2841	NBN Enclosure NTD Copper



Figure 28. nbn compact NTD with unterminated cables (only white conduit and saddles allowed)



Figure 29. nbn NTD with VDSL2 centralised filter installed (only white conduit and saddles allowed)

6.3.2 nbn[®] NTD

- 1-6 lines
- IP54
- six (6) X VDSL2 centralised filters
- earth termination location
- external installation only
- marked with NTD



Figure 30. nbn NTD 10023544

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Madison Technologies (nbn part number 10023544)	MT2710	Telstra NTD (1-6 Lines)

6.3.3 nbn[®] TO

- faceplate dual outlet
- in built VDSL2 centralised filter - voice and data pre-terminated to RJ4– sockets
- line in - Scotchlok termination
- flush or surface mounted
- internal installation – only



Figure 31. nbn faceplate

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Madison Technologies (nbn part number 10023548)	MT2821S	Wall Plate Dual Outlet with CPE Filter

6.3.4 Centralised filters

6.3.4.1 nbn® VDSL2 centralised filter with OVP/CLP

- built in OVP
- VDSL2 centralised filter
- earth connection
- tool less termination
- only compatible for installation in **NTD nbn part number 10023544**



Figure 32. nbn VDSL2 centralised filter

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Madison Technologies (nbn part number 10024460)	MT2711	Central VDSL Splitter with OVP for MT2710 NTD

6.3.4.2 VDSL2 centralised filter

- VDSL2 centralised filter
- Scotchlok termination
- face plate installation nbn part number 10023548 or nbn® compact NTD part number 10023656

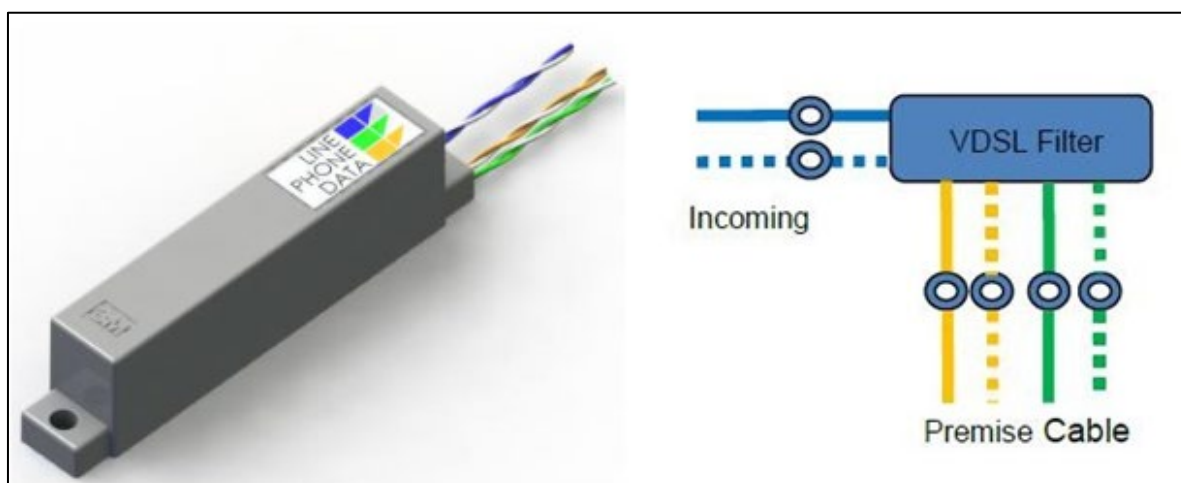


Figure 33. nbn VDSL2 centralised filter

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Madison Technologies (nbn part number 10023888)	MT2842	Single Port VDSL2 Filter

6.3.5 Cable connectors

The connectors approved for use are the Scotchlok 2 port-UY:

- to suit 0.40 mm to 0.90 mm diameter solid copper conductors
- moisture resistant gel filled

The connectors shall be used in accordance with the manufacturer's instructions and shall be crimped using the tool recommended by the manufacturer of nbn[®] connectors.



Figure 34. Connectors and crimping tool

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Madison Technologies (nbn part number 10023536)	3M UY2 SCOTCHLOK	Connector Scotchlok 2 Wire 3M Yellow pk 100

7 nbn[®] fibre network

7.1 Authorised activities

This section details the scope of the works that are authorised by nbn in relation to the nbn[®] fibre network for renovation, demolition or relocation of the building. If it is not specified it is not authorised.

If you are working for an RSP, you and the RSP may only conduct the FTTP NTD relocation activities under the WBA. This document sets out rules on how to install NTDs under the WBA FTTP NTD provisions. It does not expand or extend your rights to conduct NTD installs, remove or qualify any rules or limits in the WBA, or otherwise vary any WBA obligations or limitations.

Any fibre NTD and related nbn equipment such as new longer patch leads; fibre cordage or equipment shall only be replaced by nbn approved products.

Subject to the terms and conditions set out herein, nbn authorises a Registered Cabler to:

- replace, relocate or otherwise alter the nbn[®] fibre within premises for renovation, demolition or relocation of the building subject to the boundaries identified in Figure 35 through to Figure 43
- relocate nbn's existing fibre NTD or fibre to another location within the same premises
- relocate nbn's existing fibre TV TVR to another location within the same premises
- relocate nbn's existing battery backup (PS/B) to another location within the same premises
- disconnect the nbn[®] fibre patch cord/PIC from the fibre NTD and at the PCD and/or FWO (if FWO installed)
- disconnect the nbn[®] fibre patch cord/PIC to the Fibre TV TVR from the PCD/FWO and disconnect the fibre patch cord between the Fibre TV TVR and fibre NTD
- disconnect power to the fibre NTD (Does NOT include disconnecting power to the customers equipment if the fibre NTD is a SFP-NTD)
- disconnect power to the Fibre TV TVR
- replace the SCA/PC through connector within the PCD, ICD, FWO or NJL or fibre management tray
- replace the nbn[®] fibre patch cord/PIC from the PCD to the FWO (if it has been installed) or to the fibre NTD or Fibre TV TVR
- replace the nbn[®] fibre patch cord/PIC between the PCD/ICD and the FWO (if it has been installed) and to the fibre NTD.
- replace, relocate or otherwise alter the approved Non-Premises Location fibre customer connecting cable (CCC) from the NJL or SJL to the fibre SFP-NTD for any purpose, including but not limited to relocation of approved Non-Premises equipment, or to improve the performance of a service
- replace, relocate or otherwise alter the indoor fibre lead-in cabling from the PCD to the fibre NTD or Fibre TV TVR for any purpose, including but not limited to building alterations, or to improve the performance of a service
- replace the existing fibre NTD under instruction from nbn
- removal of the PS/B and replacement with a PS/S or NTD upgrade

- install a new fibre NTD and/or battery backup (PS/B) under instruction from nbn replace the existing Fibre TV TVR under instruction from nbn
- install a new Fibre TV TVR under instruction from nbn
- disconnect the battery backup, PS/S or PS/B Power supply from the fibre NTD and AC Supply and reconnect
- replace and/or remove batteries from the battery back-up (Note: any batteries removed must be disposed of through an approved battery recycler)
- access PCD to disconnect the PIC from the through connector
- access the NJL or SJL to disconnect the nbn[®] fibre lead-in cable from the LFN network cable.
- replace or relocate the FWO if fed from a PCD/ICD

The above activities may be performed independently or concurrently.

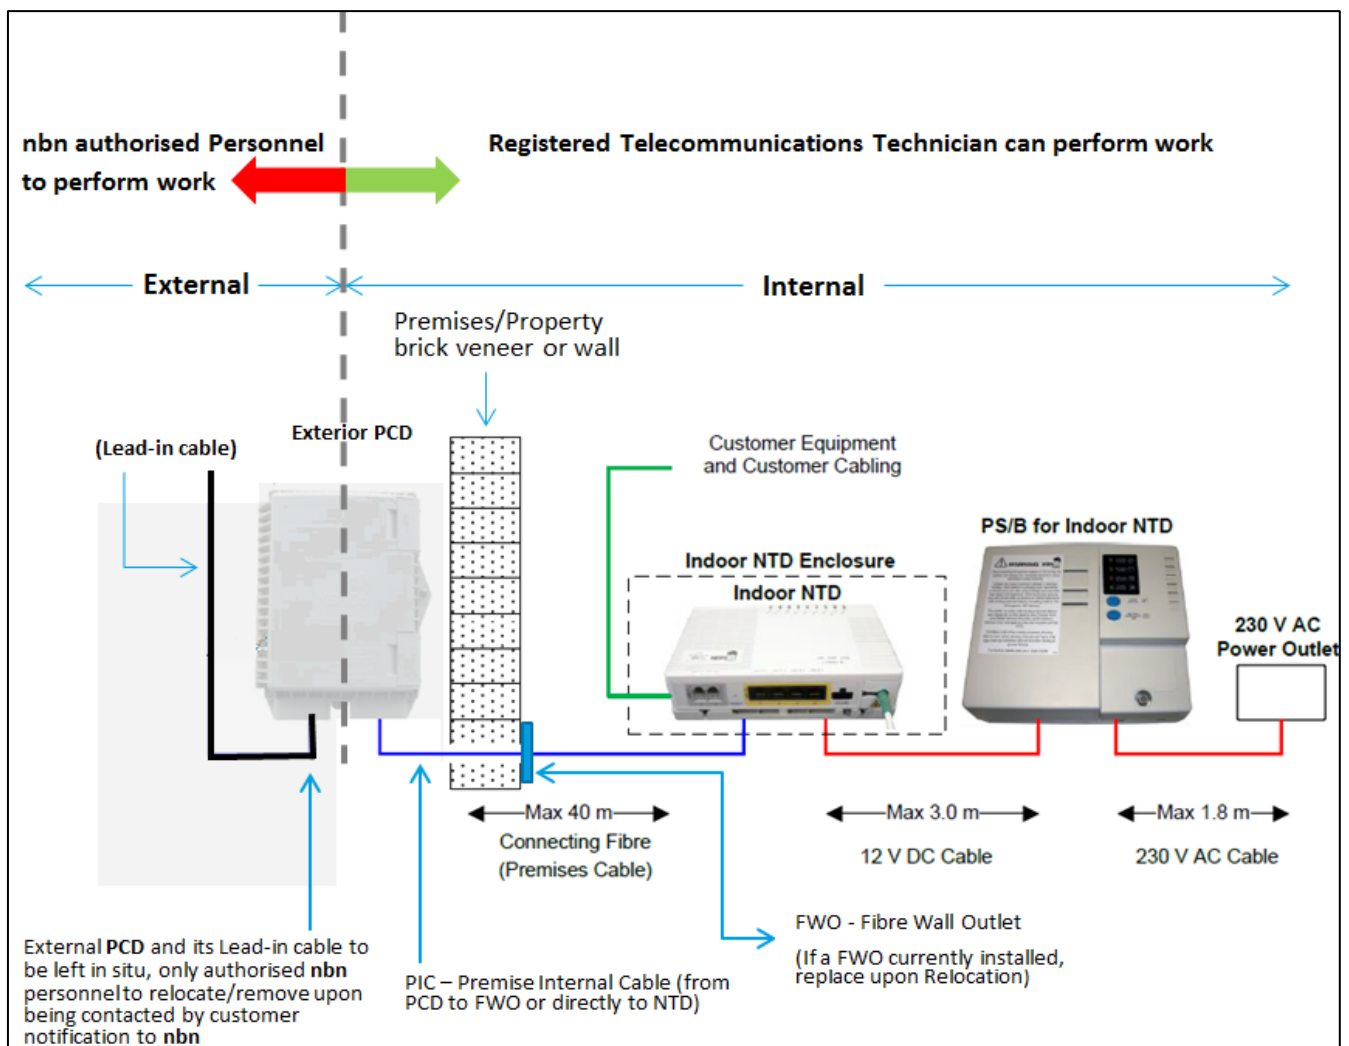


Figure 35. nbn Internal NTD with PS/B Power Unit

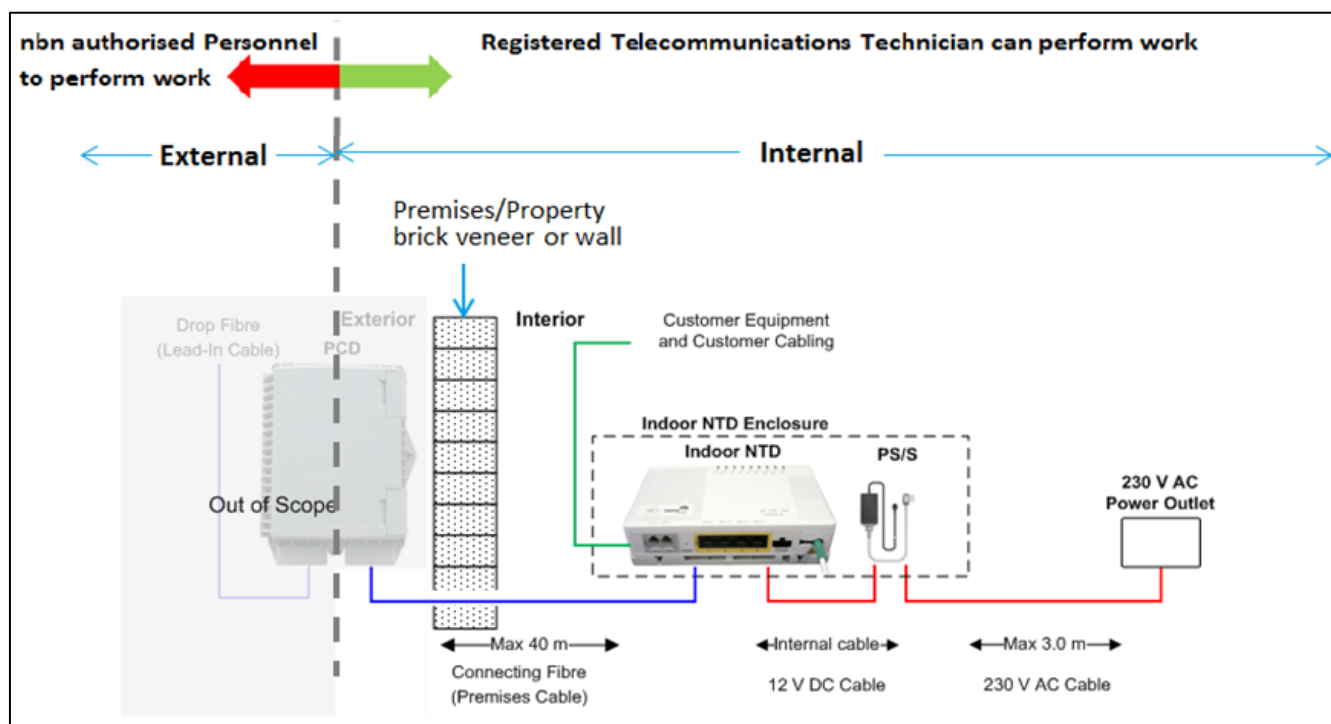


Figure 36. Indoor fibre NTD and PS/S Power Unit arrangement

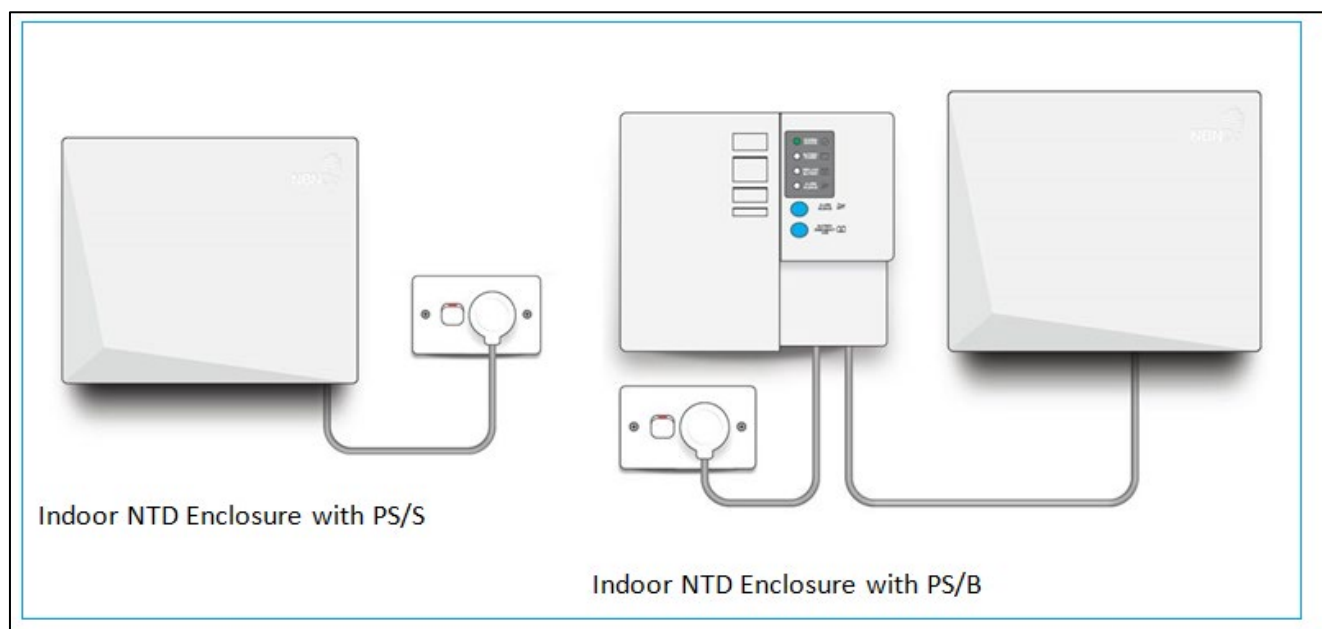


Figure 37. Installation of legacy fibre NTD with and without Power Supply

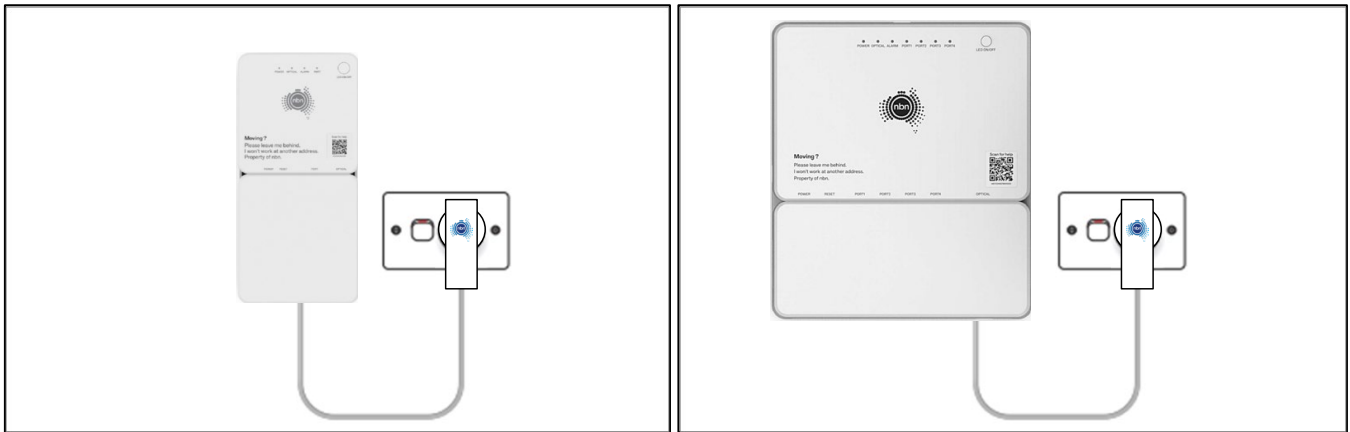


Figure 38. Installation of 1-port and 4-port fibre NTD with Power Supply

7.1.1 nbn® indoor fibre NTD

nbn authorises Registered Cablers to relocate the Indoor NTD and/or battery backup (PS/B) subject to the general terms and conditions of section 5 (General terms and conditions) and the following:

- the indoor fibre NTD and/or battery backup (PS/B) shall only be relocated to a different location/ room within the same premises
- replacement of the existing PIC cable from either the Fibre Wall Outlet plate (FWO) or the PCD, with a new PIC Cable with the required length the PIC Cable shall from the approved products detailed in section 7.3.3 of this document
- maximum Length of the new premises cable shall not exceed 40 m from the PCD

Subject to the above conditions, nbn authorises Registered Cablers to perform the following activities on an Indoor NTD:

- temporarily disconnect the NTD from the Power supply GPO or PS/B for the relocation
- temporarily disconnect the battery backup (PS/B) from the Power supply GPO for the relocation

The authorised work boundary is the customer side of the PCD and the premises cable (PIC) that terminates within the PCD.

No works shall be undertaken on the fibre service drop cable (lead-in cable) that enters the PCD from the street or nbn® local fibre network (LFN).

7.1.2 nbn® outdoor fibre NTD

The Outdoor NTD was a legacy NTD option that nbn deployed in some scenarios. This included scenarios such as base-building type areas and/or in support of lift and fire phone services.

nbn authorises Registered Cablers to access the Outdoor NTD subject to the general terms and conditions of section 5 (General terms and conditions) and the following:

- the Outdoor NTD can only be worked on with prior approval from the End user or nbn

Subject to the above conditions, nbn authorises Registered Cablers to perform the following activities on an Outdoor NTD:

- connect customer/RSP cabling or equipment to the UNI-D and/or UNI-V ports.
- temporarily disconnect the Outdoor NTD from the PS/B for the purpose of the relocation
- temporarily disconnect the battery backup (PS/B) from the Power supply GPO for the relocation
- if a PCD is installed and the Outdoor NTD is connected via a PIC from the PCD i.e. the Outdoor NTD is not directly connected via a nbn® lead-in cable, then the Outdoor NTD can be relocated.

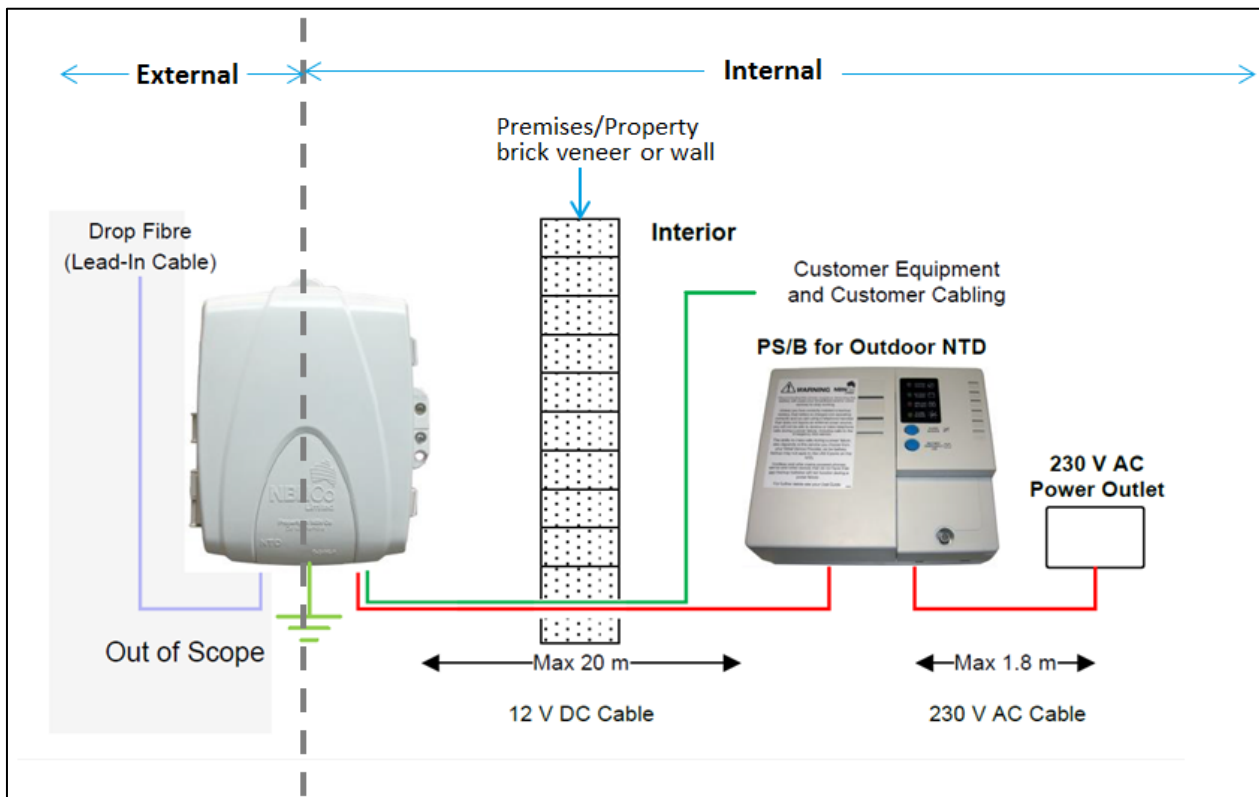


Figure 39. Legacy Outdoor fibre NTD installed internally, without PCD arrangement

7.1.3 nbn® Customer Connecting Cable and SFP-NTD

nbn authorises Registered Cablers to install the Customer Connecting Cable (CCC) subject to the general terms and conditions of section 5 (General terms and conditions) and the following:

- The CCC shall only be installed in the Non-Premises Location it is issued for
- The CCC shall only be relocated to a different location / cabinet within the same approved Non-Premises Location
- Replacement of the existing CCC cable from either NJL or the SJL, with a new CCC Cable with the required length of the CCC Cable shall from the approved products detailed in sections 13 to 16 of this document
- Make ready the replacement of the CCC cable from either NJL or the SJL where the authorised third-party elects to haul the replacement CCC cable into the cabinet.
- Temporarily remove the CCC from the SFP-NTD customers equipment for the purpose of relocation
- nbn does NOT authorise Registered Cablers to disconnect power to the customers equipment that the SFP-NTD is plugged into.

Subject to the above conditions, nbn authorises Registered Cablers to perform the following activities on a CCC and End User Duct:

1. The authorised work boundary is the customer side of the NJL/SJL and the CCC that terminates within the NJL/SJL. This is located in the Demarcation Pit.
5. No works shall be undertaken on the fibre service drop cable (lead-in cable) that enters the NJL/SJL from the street or nbn® local fibre network (LFN).
6. Installation, repair, or replacement of End User Duct shall be by a P20 Comms Duct.
7. Where the Non-Premises Location is being relocated then the cabler can haul the CCC back into the Demarcation Pit and leave it coiled there however any re-arrangement of the nbn® network isn't permitted and must be carried out under the nbn network relocations process. You can submit a request for nbn network relocations via this link: <https://www.nbnco.com.au/develop-or-plan-with-the-nbn/relocation-works>.

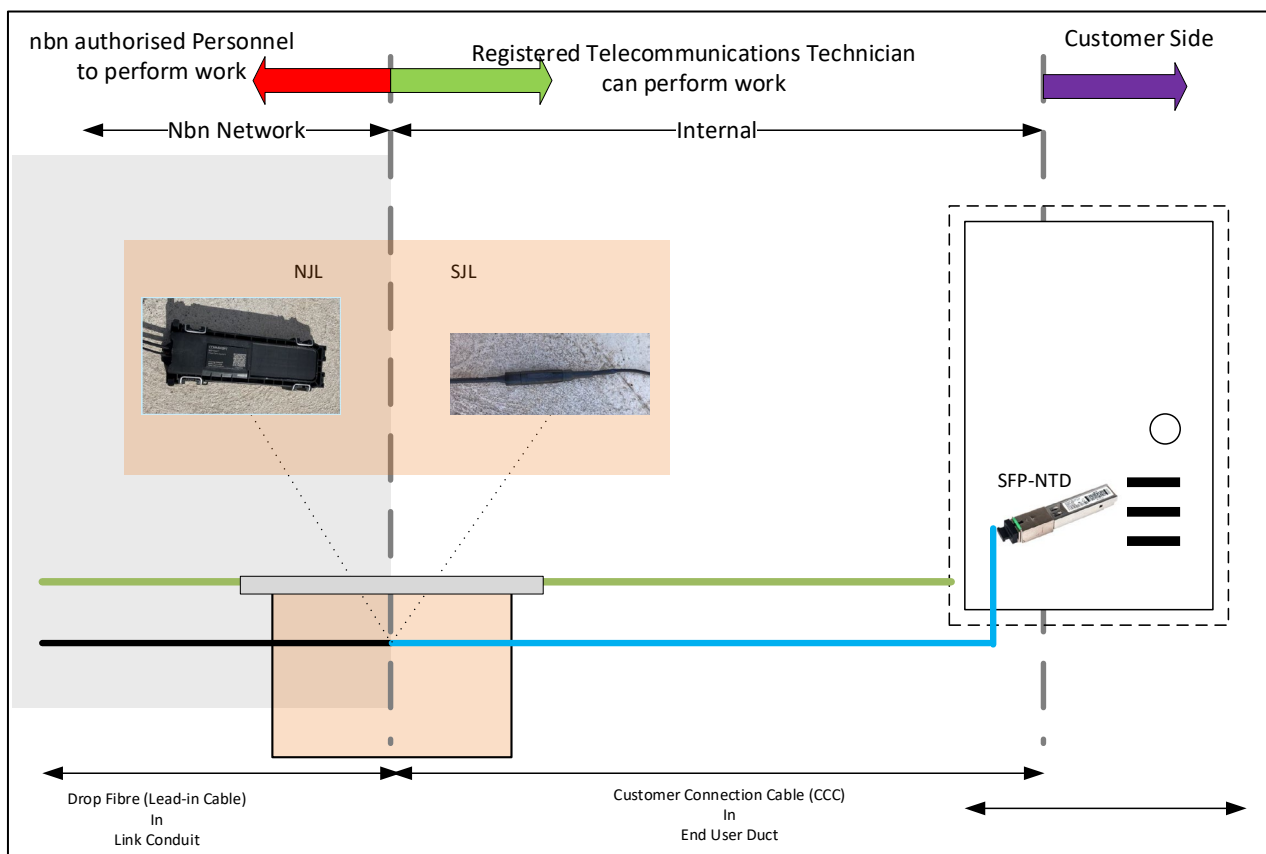


Figure 40. Smart Locations

7.1.4 nbn® fibre Business NTD (BNTD)

nbn authorises Registered Cablers to access the BNTD subject to the general terms and conditions of section 5 (General terms and conditions) and the following:

- removal of the BNTD shall take place only after the service agreement ends and end users are no longer supplied with active service(s), and after notification to both the RSP and **nbn**

- where a new PIC cable is required, the PIC cable shall be from the approved products detailed in section 7.3.3 of this document
- electrical equipment shall be disposed of via safe and secure E-waste providers

Subject to the above conditions, nbn authorises Registered Cablers to perform the following activities on a BNTD:

- relocate a rack-mounted BNTD and associated fibre-management tray to another rack location within the same premises
- remove a rack-mounted BNTD and associated fibre-management tray from a premises
- relocate a wall-mounted BNTD and associated enclosure to another internal-wall location within the same premises
- remove a wall-mounted BNTD and associated enclosure from a premises
- disconnect the nbn® patch cord between the nbn® rack-mount fibre-management tray and the BNTD
- disconnect the single-fibre PIC from the nbn® rack-mount fibre-management tray to the PCD (for BNTD installations within a single end-user's premises)
- disconnect the single-fibre PIC from the nbn® wall-mount enclosure to the PCD for BNTD Installations within a single end user's premises
- disconnect power to the BNTD
- disconnect the Power Supply Unit (PSU) from the BNTD
- replace the nbn® fibre patch cord/PIC from the PCD to the FWO (if it has been installed) or to the fibre management tray for BNTD installations within a single end-user premises
- replace or remove the nbn® fibre PIC, from the fibre management tray or FWO (within Wall mount) to PCD/ICD, with a new PIC Cable with the required length

The above activities may be performed independently or concurrently.

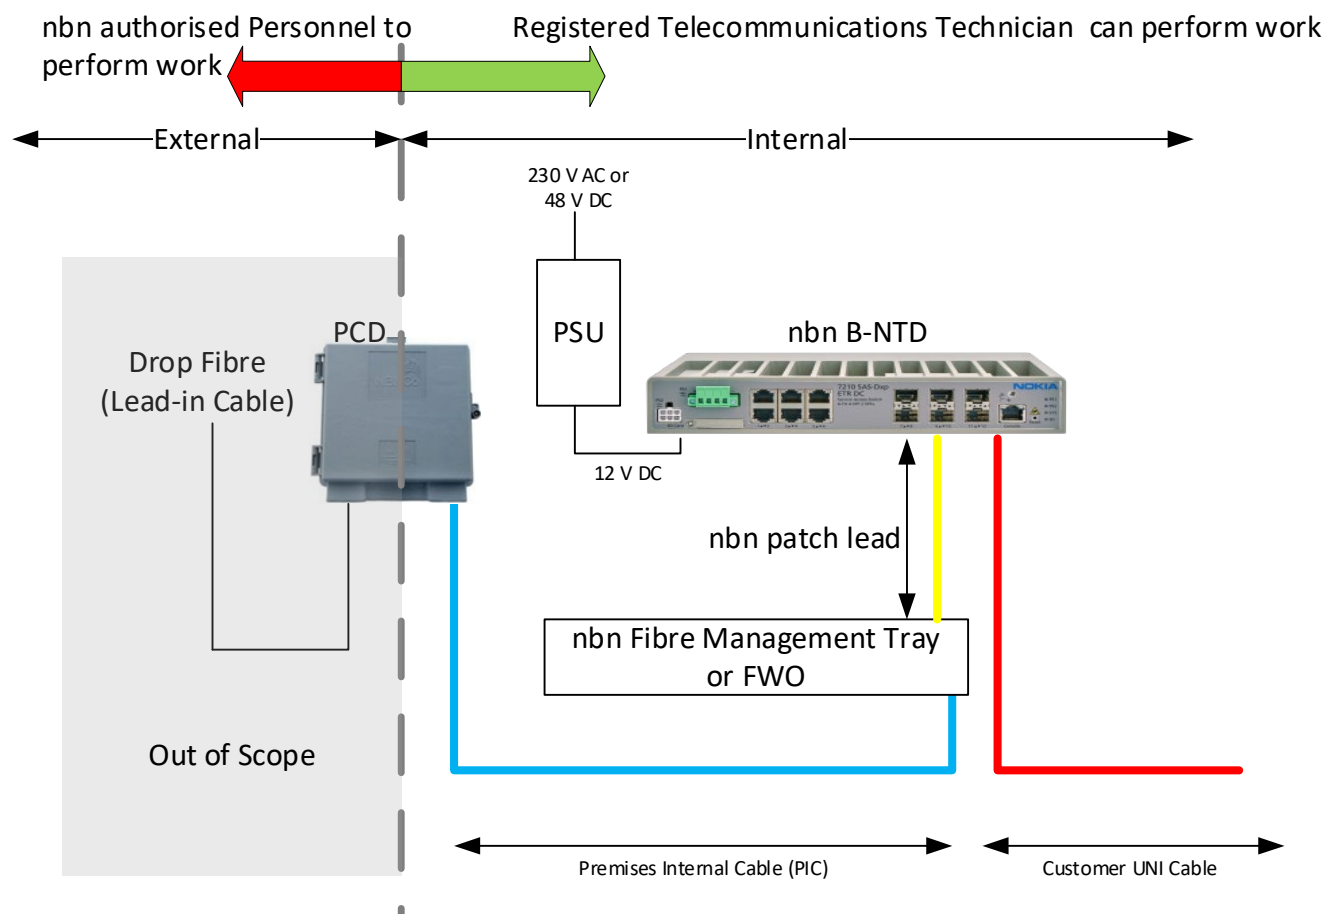


Figure 41. Business NTD (BNTD) arrangement - SDU

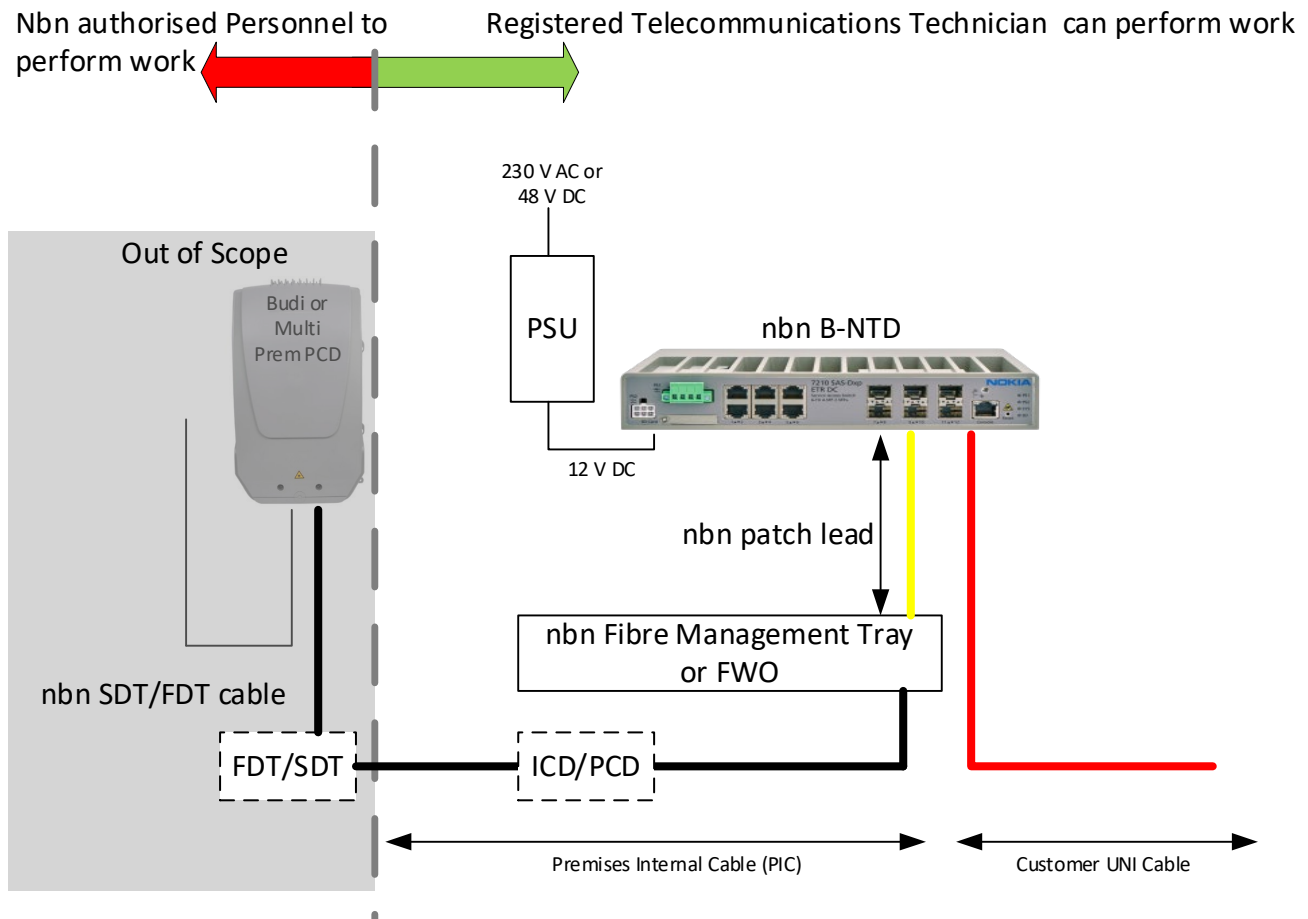


Figure 42. Business NTD (BNTD) arrangement - MDU

7.1.5 nbn® Fibre TV TVR

nbn authorises Registered Cablers to relocate the Fibre TV TVR subject to the general terms and conditions of section 5 (General terms and conditions) and the following:

- the Fibre TV TVR shall only be relocated to a different location/ room within the same premises
- replacement of the existing PIC cable from either the Fibre Wall Outlet plate (FWO) or the PCD, with a new PIC Cable with the required length; the PIC Cable shall be from the approved products detailed in section 7.3.3 of this document
- maximum Length of the new premises cable shall not exceed 40 m from the PCD

Subject to the above conditions, nbn authorises Registered Cablers to perform the following activities on a Fibre TV TVR

- temporarily disconnect the Fibre TV TVR from the Power supply GPO for the relocation

The authorised work boundary is the customer side of the PCD and the premises cable (PIC) that terminates within the PCD.

No works shall be undertaken on the fibre service drop cable (lead-in cable) that enters the PCD from the street or nbn® local fibre network (LFN).

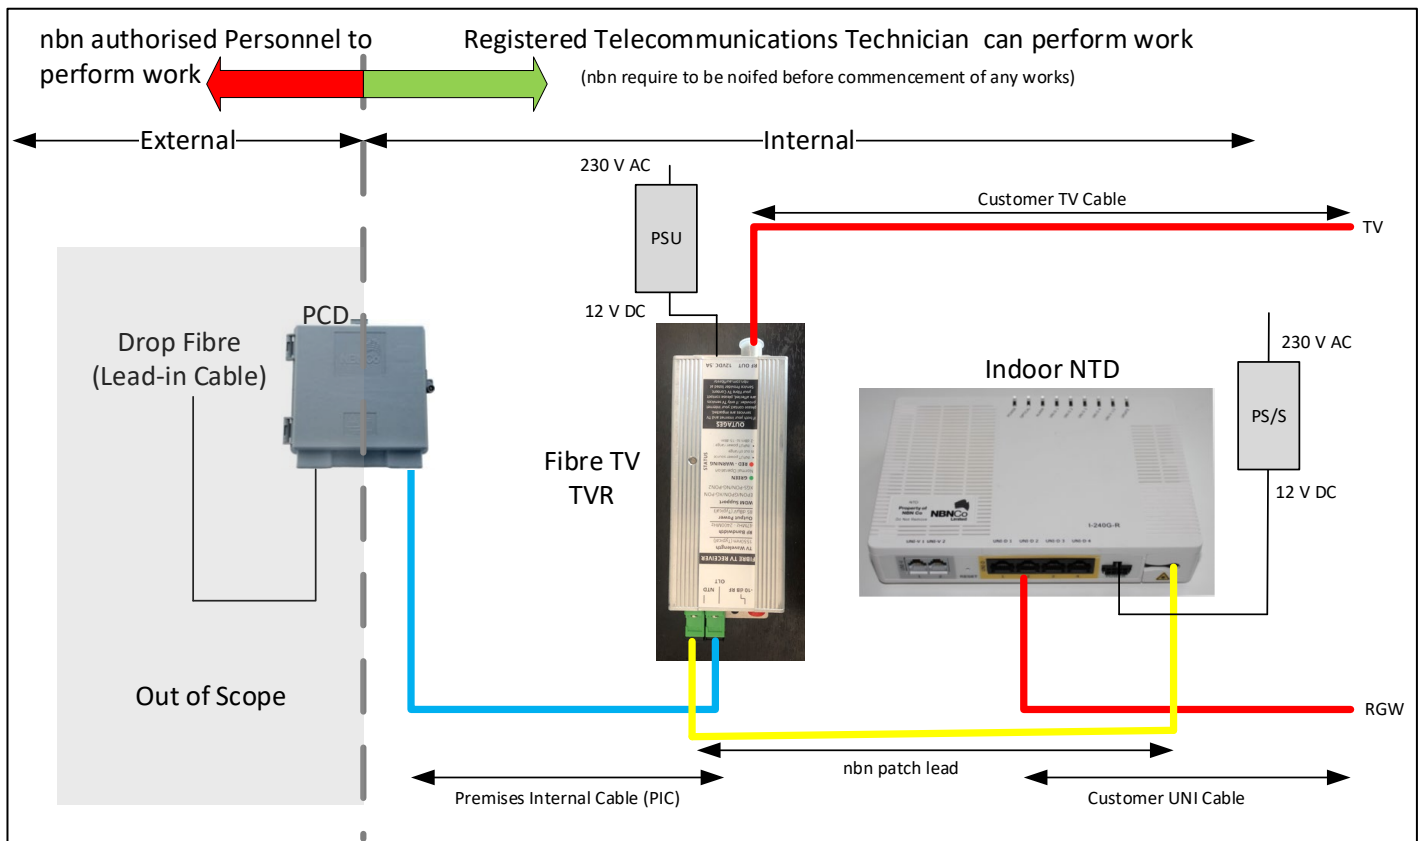


Figure 43. Fibre TV TVR with Indoor NTD

7.1.6 Premises internal cable (PIC)

nbn authorises a Registered Cable to disconnect the connectorised PIC connected to the PCD, ICD, FWO or fibre NTD subject to section 5 (General terms and conditions) and the following:

- PIC can be disconnected from the ICD, PCD or FWO
- PIC can be replaced with a different length PIC cable up to 40 m in length
- PIC can be extended or repaired via the installation of an ICD
- PIC cable must be nbn approved
- When the PIC is installed direct to the PCD, the PIC can be disconnected from the lead in cable at the PCD by removing the PIC's SC/APC connector at the Through Connector
- If an armoured PIC is used, any replacement of the PIC must be with an armoured cable or equal or higher rating

7.1.7 MDU NTDs and premises cabling

nbn authorises a Registered Cabler to perform works within MDU's only at the premises of the end user and subject to section 5 (General terms and conditions) and all the following:

- Internal NTDs or Business NTDs can be relocated within the same end user's Premises
- Relocate the FWO to another location within the same end user's Premises

- Individual PIC can be disconnected from the ICD or FWO
- PIC supplied directly from an FDT / SDT cannot be disconnected from the FDT/ SDT, the PIC can be relocated, redirected and re-terminated within the premises if the existing length is sufficient to do so

nbn authorises work between the fibre NTD and hallway connection device ICD or FWO only as detailed in Figure 44 and Figure 45 below.

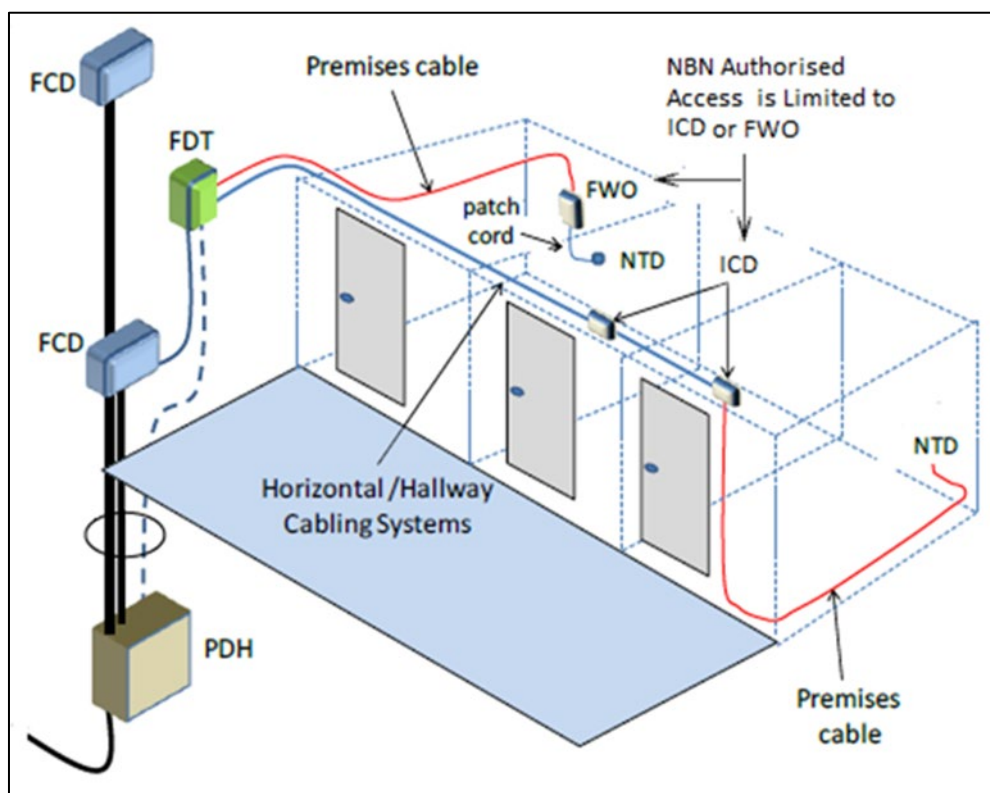


Figure 44. FDT to FWO & ICD arrangement

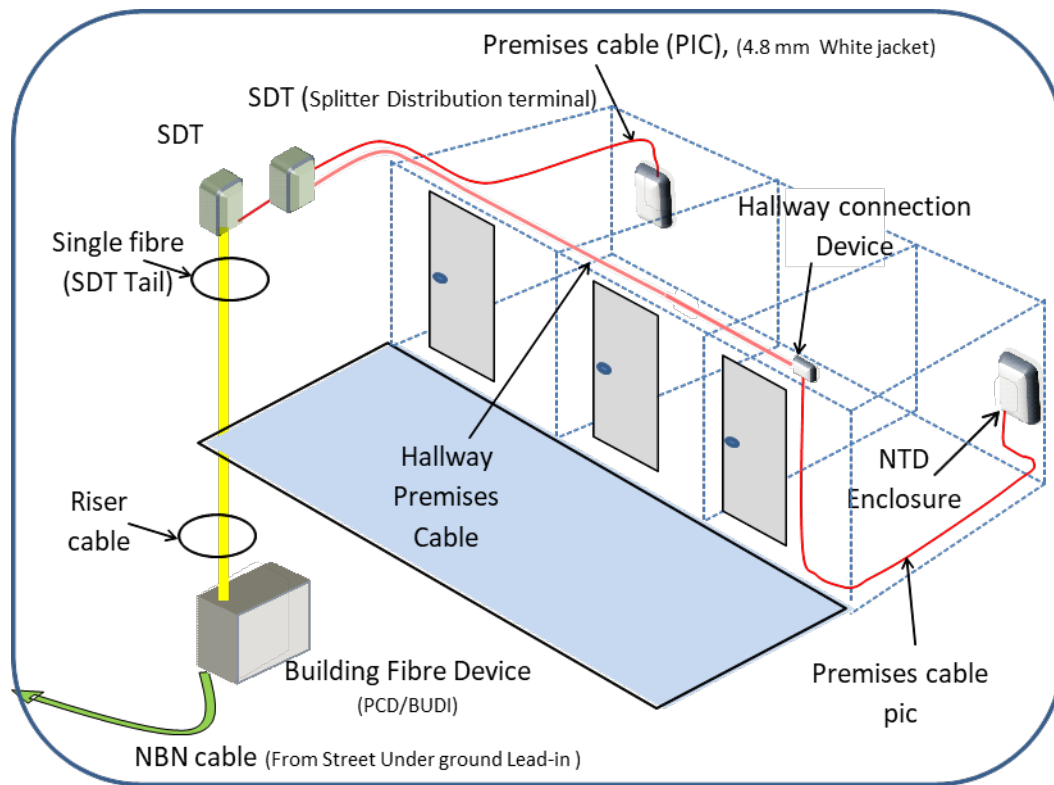


Figure 45. SDT to FWO & ICD arrangement

7.1.8 Testing and minimum specifications

7.1.8.1 Equipment required

All tools must be regularly maintained, and test equipment must be calibrated in accordance with the manufacturer's recommendations.

All hand-held power equipment must be electrically tested and tagged in accordance with all applicable legislation and local requirements.

PON Power Meter (minimum specifications)

A PON specific power meter will also include the ability to be inserted into a live PON network. It must have the following minimum specifications:

1. Pass through insertion loss <1.5dB.
2. Calibrated Wavelengths as follows:
 - a. 1310nm with spectral passband of 1260 to 1360nm
 - b. 1490nm with spectral passband of 1480 to 1500nm
3. Burst mode measurement @ 1310nm for G.984 GPON up to 1.25 Gb/s (upstream) +/- 0.5dB accuracy.
4. Intrinsic uncertainty for all wavelengths +/- 0.5dB (-7dBm CW signal).
5. Isolation > 35dB all wavelengths.
6. Measurement range as follows:

- c. 1310nm +10 to -40dBm
 - d. 1490nm +10 to -40dBm
8. Optical interface SC/APC.

Fibre Inspection Probe (video)



A video inspection probe (not a magnifying optical only scope) with SC/APC adaptors for both connector ferrule and bulkhead adaptor.

SC/APC connector cleaning kit

These come in many varieties, but the following should be included:

- 9. Wet fibre cleaning equipment designed for optics.
- 10. Cleaning sticks designed for SC bulkhead through connectors.

Table 1. Wet cleaning products

Name	Description	Image
Optic fibre wipes	<p>Disposable wipes are used to remove fingerprints, oils, grime, polishing compound, dust and lint.</p> <p>All wipes are single use per optic connector interface.</p> <p>Note: Wipes can also be used for dry cleaning.</p>	
Isopropyl Alcohol	<p>Used in conjunction with disposable optic fibre wipes and fibre connector cleaning sticks/swabs.</p>	







Name	Description	Image
Fibre connector cleaning sticks	<p>Used to clean the end faces of installed connectors, from inside the enclosure.</p> <p>To clean, insert the microfibre tip inside the interface's aperture and twist once.</p> <p>All sticks are single use per optic connector interface.</p> <p>Note: Sticks are available in different diameters.</p>	
Isopropyl Alcohol swabs	Isopropyl Alcohol swabs used to clean connectors.	
Wet Cleaning Consumables	<p>Examples of wet cleaning consumables are:</p> <ul style="list-style-type: none"> • Isopropyl Alcohol • Alcohol swabs • Lint-free wipes • Fibre optic sticks/swabs 	

Table 2. Dry cleaning products

Name	Description	Compatible connectors	Image
Fibre Optic Connector Cleaner Cassette	A reel-based cassette cleaner that requires medium hand pressure.	<ul style="list-style-type: none"> • SC/SCA • LC/LCA • MPO 	
			
			
Fibre Cleaning Tool for OptiTip Connectors	<p>The red jack adaptor is used to clean the pin portion of the OptiTip connector.</p> <p>The blue jack adaptor is used to clean the non-pinned portion of the OptiTip.</p>	<ul style="list-style-type: none"> • OptiTip 	
Single Fibre Port cleaner	<p>An extendable telescopic function allows for extended reach.</p> <p>e.g. Corning</p>	<ul style="list-style-type: none"> • OptiTap 	

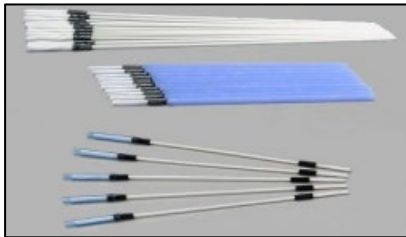Name	Description	Compatible connectors	Image
One-Click Cleaner	The One-Click Cleaner is inserted into the fibre interface. e.g. Fujikura	<ul style="list-style-type: none"> MPO 	
One-Click Cleaner	The One-Click Cleaner is inserted into the fibre interface. e.g. Fujikura	<ul style="list-style-type: none"> SC 	
One-Click Cleaner	The One-Click Cleaner is inserted into the fibre interface. e.g. Fujikura	<ul style="list-style-type: none"> LC connectors 	

7.1.8.2 Inspect and clean fibre connections

Dirty connectors are by far the most common cause of fibre network failures. Dirty connectors can permanently damage the fibre mating surface, and cause pitting and damage from dust or debris which results in high signal loss.

It is therefore essential that connectors are checked and cleaned before connection.

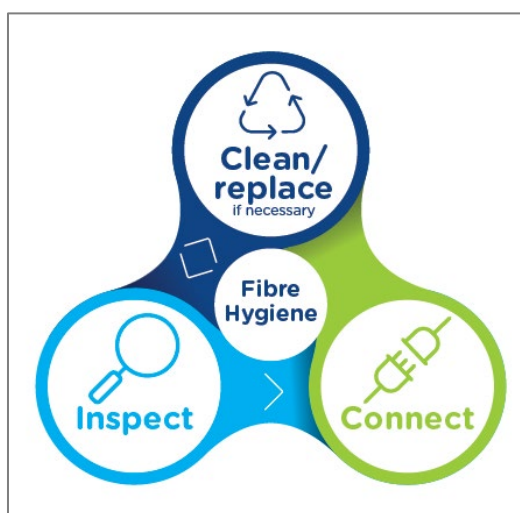


Figure 46. NTD fibre inspection and connection process flow

1. Inspect all fibre connectors before connection using a fibre video inspection probe.
11. Clean dirty connectors using fibre cleaning equipment such as that listed in section 0

12. Replace any Premises Indoor Cable if connectors cannot be cleaned, contact nbn for NTD replacement if the NTD bulkhead connector cannot be cleaned.
13. Replace dust caps whenever connectors are not connected to an outlet or port.

Optical signal level check

This particular test procedure assumes that the existing NTD is being re-located and is not to be utilised for new NTD installation.

1. Check that the NTD and the PSU (for legacy NTD, either PS/B or PS/S) indicator lights are operating correctly, as shown in Fibre User Guide and Power Supply with Battery Backup guide available on the nbn website
2. Use a PON power meter to test signal levels at the NTD before and after moving the NTD
3. Ensure the power meter readings are between these ranges:
 - a. 1310 nm (upstream) - between 0 dBm and +5
 - b. 1490 nm (downstream) - between -14 dBm and -26 dBm
 - c. no more than +/- 1dB variation is expected in levels between before and after.
4. Record the 1310 and 1490nm power level at the NTD.
14. If all readings are within the ranges specified above remove the PON power meter and connect fibre directly to the NTD.
15. All Activity lights should now be operating as per the user guide (this depends on what else is connected)
16. If there is a fault indication (Optical / Power or Alarm LED) check connections and if fault has not cleared log fault with Retail Service Provider who may raise a ticket with nbn.

7.1.8.3 Power Supply test

After relocation, perform the following:

1. Identify PSU Type:
 - a. If NTD 2.0 PSU, or legacy PS/S, complete steps 2–4.
 - b. If legacy PS/B, complete steps 5–8.

For the NTD 2.0 PSU, and the legacy NTD PS/S:

17. Check that the PS/S is correctly installed, all cables are correctly connected, and there is no physical damage to the PS/S or cable.
18. Check that the NTD power light is on.

For the Legacy NTD PS/B:

19. Check that the PS/B battery is correctly installed (if installed or replaced), all cables are correctly connected, and there is no physical damage to the PS/B, battery, or cable.
20. Verify that the System Status light is green, and no power alarms are active.
21. Test the PS/B Battery Emergency Use function:
 - a. Disconnect AC power from the PS/B.

- b. Open the battery cover.
- c. Disconnect the positive (red) battery lead and wait for thirty seconds.
- d. Reconnect the positive (red) battery lead.
- e. Press and hold the Battery Emergency Use button. All four lights flash on and a short beep sound.
- f. Release the Battery Emergency Use button. The top two lights remain on and the battery is connected.
- g. Reconnect AC power to the PS/B.
- h. Verify that no power alarms are active.

22. Test the PS/B Alarm Silence function:

- a. Temporarily silence alarms for 24 hours - press button for 0.5 to 2.5 seconds until the PS/B beeps once, then release. The Alarm Silence light displays flashing amber.
- b. Reactivate temporarily silenced audible alarms - press the button until you hear two short tones, then release immediately.
- c. Silence alarms indefinitely (more than 24 hours) - press and hold button, after approximately 0.5 seconds you will hear a single tone, wait approximately 15 seconds for a second short tone, then release. The Alarm Silence light displays steady amber.
- d. Reactivate indefinitely silenced audible alarms - press and hold until you hear a single tone, wait another 15 seconds for a second double tone, then release. The Alarm Silence light displays no colour.

7.2 Activities not authorised

This document does not authorise a Registered Cabler to do any of the following:

- Relocate, remove, or replace the PCD/ICD
- Relocate, remove, or replace nbn[®] lead-in cabling between pit and the PCD
- Disconnect the Lead in cable connection at the PCD/ICD
- Relocate, remove, or replace nbn[®] lead-in cabling between the pit and CTL, PDH or BUDI
- Relocate, remove, or replace nbn[®] lead-in cabling between the external nbn[®] network Pit and the NTD or Business NTD
- Relocate, remove, or replace nbn[®] internal premises cabling between the building entry point and PCD/ICD or FWO (where ICD/PCD is not installed)
- Works within nbn[®] fibre network outside the Property boundary
- Access, remove/relocate or work within an nbn[®] Fibre Distribution Terminal (FDT)
- Access, remove/relocate or work within an nbn[®] Splitter Distribution Terminal (SDT)
- Access, remove/relocate or work within a Fibre Collector Distributor (FCD)
- Access, remove/relocate or work within a Premises Distribution Hub (PDH)
- Access, remove/relocate or work within a BUDI, Building fibre Device (BFD)

- Access, remove/relocate or work within a PCD feeding Multiple end users within an MDU (residential or commercial)
- Relocate a fibre NTD or any nbn equipment to another premises
- Relocation of nbn® fibre to another premises
- Relocation of nbn fibre to another approved Non-Premises
- Use of non nbn approved fibre products
- Disconnection of power to the customers equipment that a SFP-NTD is plugged into.
- Termination of the PIC with a Field Installable Connector (FIC) at the PCD or NTD location
- Access, remove, relocate or work on any nbn® fibre network assets, fibre, patch leads, or NTDs within a third-party Data Centre
- Replace an nbn® NTD with another nbn® NTD
- Replace a PSU (including legacy PS/S or PS/B) with a different variant, or with a PSU made by another vendor

7.3 Approved nbn® fibre equipment

7.3.1 nbn® Fibre Wall Outlet (FWO)

The FWO is an indoor device.

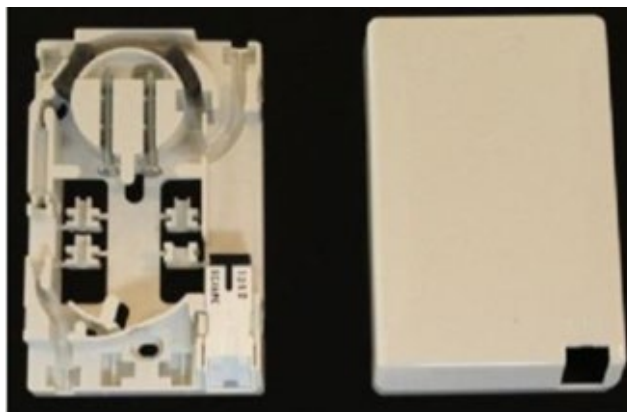


Figure 47. nbn FWO with inbuilt through connector SCA Simplex SM

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Warren and Brown (nbn part number 10002863)	TC4025WB1SAAL	FIBRE WALL OUTLET BASE S/TRAY, SHUTTERED SC/APC THRU CONN.& COVER WHITE

7.3.2 nbn® Through Connector

nbn-approved Through Connector SCA Simplex SM Ceramic Sleeve green, No flanges.



Figure 48. SCA Through Connector

Manufacturer or Primary supplier	Manufacturer Product Code	Description
CommScope (nbn part number 10018115)	CZ1899-000	Through connector SCA simplex SM zirconia sleeve green, no flanges

7.3.3 nbn® Premises Installation Cable (PIC)

nbn approved PICs



Figure 49. nbn Rugged Patch lead (Premises cable)

Manufacturer or Primary supplier	Manufacturer Product Code AFL	Manufacturer Product Code Prysmian	Description
AFL TELECOMMUNICATIONS / Prysmian	NBN-S1SCASCA5M4.8BK-S-B /	XPPSC04213	Premises Cable 4.8mm Indoor Outdoor LSZH G657B3 SC APC both ends 5m
AFL TELECOMMUNICATIONS / Prysmian	NBN-S1SCASCA15M4.8BK-S-B	XPPSC04214	Premises Cable 4.8mm Indoor Outdoor LSZH G657B3 SC APC both ends 15m
AFL TELECOMMUNICATIONS / Prysmian	NBN-S1SCASCA20M4.8BK-S-B	XPPSC04211	Premises Cable 4.8mm Indoor Outdoor LSZH G657B3 SC APC both ends 20m
AFL TELECOMMUNICATIONS / Prysmian	NBN-S1SCASCA30M4.8BK-S-B	XPPSC04215	Premises Cable 4.8mm Indoor Outdoor LSZH G657B3 SC APC both ends 30m
AFL TELECOMMUNICATIONS / Prysmian	NBN-S1SCASCA50M4.8BK-S-R	XPPSC04216	Premises Cable 4.8mm Indoor Outdoor LSZH G657B3 SC APC both ends 50m
AFL TELECOMMUNICATIONS / Prysmian	NBN-S1SCASCA150M4.8BK-S-R	XPPSC04219	Premises Cable 4.8mm Indoor Outdoor LSZH G657B3 SC APC both ends 75M
AFL TELECOMMUNICATIONS / Prysmian	NBN-S1SCASCA200M4.8BK-S-R	XPPSC04220	Premises Cable 4.8mm Indoor Outdoor LSZH G657B3 SC APC both ends 100M
AFL TELECOMMUNICATIONS / Prysmian	NBN-S1SCASCA250M4.8BK-S-R	XPPSC04221	Premises Cable 4.8mm Indoor Outdoor LSZH G657B3 SC APC both ends 150M
AFL TELECOMMUNICATIONS / Prysmian	NBN-S1SCASCA500M4.8BK-S-R	XPPSC04222	Premises Cable 4.8mm Indoor Outdoor LSZH G657B3 SC APC both ends 200M

Manufacturer or Primary supplier	Manufacturer Product Code AFL	Manufacturer Product Code Prysmian	Description
AFL TELECOMMUNICATIONS / Prysmian	NBN-S1SCASCA20M4.8BK-S-B	XPPSC04211	Premises Cable 4.8mm Indoor Outdoor LSZH G657B3 SC APC both ends 250M
AFL TELECOMMUNICATIONS / Prysmian	NBN-S1SCASCA30M4.8BK-S-B	XPPSC04215	Premises Cable 4.8mm Indoor Outdoor LSZH G657B3 SC APC both ends 500M

7.3.4 nbn® Internal Connection Device (ICD)

nbn approved ICDs



Figure 50. ICD supplied with SCA Through Connector

Manufacturer or Primary supplier	Manufacturer Product Code	Description
CommScope (nbn part number 10018114)	RFP-0-00-S2-1-L-X-X-TM	Indoor Connection Device ICD with SC APC Adapter RFP

7.3.5 nbn[®] Standalone fibre NTD and Power Supply

Below is an overview of nbn specified standalone NTDs.

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Nokia 1-port (nbn part number 10041707)	G-010G-D	1-Port GPON NTD Bundle
Sercomm 1-port (nbn part number 10041707)	FG1000A.NB	1-Port GPON NTD Bundle
Nokia 4-port (nbn part number 10041708)	U-040X-A	4-Port GPON/XGS-PON NTD Bundle
Sercomm 4-port (nbn part number 10041708)	CG4000A	4-Port GPON/XGS-PON NTD Bundle
Nokia 1-port Adapter plate (nbn part number 10041721)	3TN00956AA	Nokia 1 Port NTD Adapter Plate use in nbn legacy wall mount enclosures
Sercomm 1-port Adapter plate (nbn part number 10041722)	940EA840SZ	Sercomm 1 Port NTD Adapter Plate use in nbn legacy wall mount enclosures

Table 3. Overview of Nokia nbn NTD and Power Supplies

Nokia 1 port fibre NTD

Part No/Type (Indoor Fibre NTD)

- Model No. G-010G-D
- Power Supply 2 PIN 1.5A transformer 230V AC 12V DC Marked Nokia



Nokia 4 Port Fibre NTD

Part No/Type (Indoor Fibre NTD)

- Model No. U-040X-A
- Power Supply 2 PIN 1.5A transformer 230V AC 12V DC Marked Nokia



Nokia Fibre 1-port NTD Wall bracket and Cover (to mount to wall)



Nokia Fibre 4-port NTD Wall bracket and Cover (to mount to wall)



Nokia 1 port Adapter plate (for use with legacy NTD enclosure)

Nokia part number - 3TN00956AA

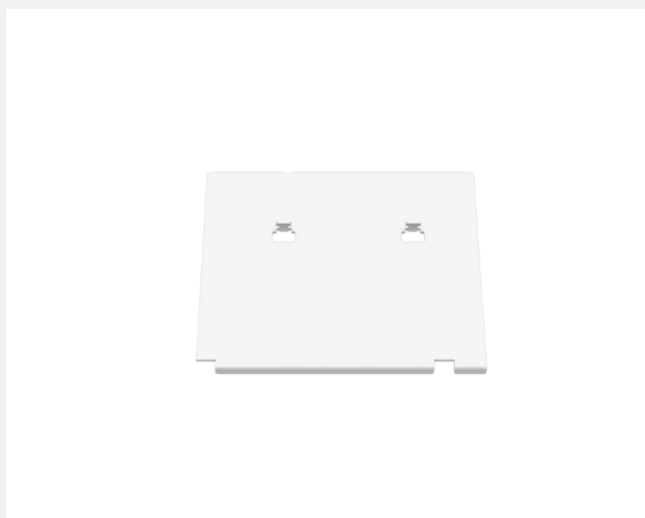








Table 4. Overview of Sercomm nbn NTD and Power Supplies

<p>Sercomm 1-port Fibre NTD</p> <p>Part No/Type (Indoor Fibre NTD)</p> <ul style="list-style-type: none">Model No. FG1000A.NBPower Supply 2 PIN 1.5A transformer 230V AC 12V DC Marked Sercomm <div></div>	<p>Sercomm 4-Port Fibre NTD</p> <p>Part No/Type (Indoor Fibre NTD)</p> <ul style="list-style-type: none">Model No. CG4000APower Supply 2 PIN 1.5A transformer 230V AC 12V DC Marked Sercomm <div></div>
--	---

Sercomm Fibre 1-port NTD Wall bracket and Cover
(to mount to wall)



Sercomm Fibre 4-port NTD Wall bracket and Cover
(to mount to wall)



Sercomm 1 port Adapter plate (for use with legacy
NTD enclosure)

Sercomm part number - 940EA840SZ




Table 5. Legacy outdoor and indoor NTD and power supplies

Indoor Fibre NTD (Legacy)

Part No/Type (Indoor Fibre NTD)

- Model No. I-240G-R and G-240G-P
- Part No. 3FE 55594 AB (I-240G-R) & 3FE 56159 AA (G-240G-P)
- Power Supply for an Indoor NTD either PS/S or PS/B (DUPS-1227G model for an indoor NTD)


Top View

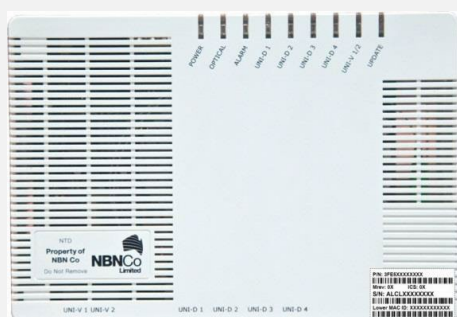

Front View



Indoor Fibre NTD Enclosure base (to mount to wall) (Legacy)

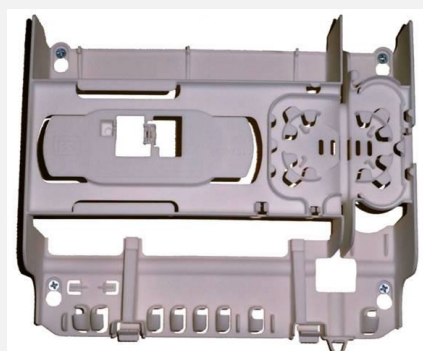

Outdoor Fibre NTD (Legacy)

Part No/Type (Outdoor Fibre NTD)

- Model No. O-240G-P and G-240G-Q
- Part No. 3FE 53516 AG (O-240G-P) & 3FE 47236 AA (G-240G-Q)
- Power Supply PS/B (DUPS-1227G model for an Outdoor NTD only)



Indoor Fibre NTD Enclosure Cover (Legacy)


An enclosure provided by nbn for an indoor Fibre NTD and a PS/S. It consists of two parts: a base (on which the indoor Fibre NTD is mounted) and a cover



PS/S (Legacy)



Indoor Fibre NTD Enclosure with Indoor Fibre NTD, PS/S and cables (Legacy)

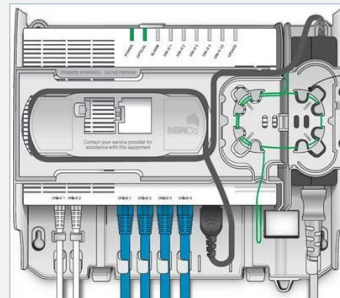

PS/B (Legacy)

- Power Supply DUPS-1227G model for an Indoor Fibre NTD



PS/B BB (Legacy)

- Np-7 12v 7ah Battery fits into PS/B (shown to left)

[FTTP Battery Backup Information Online](#)



PS/B 230V AC power cable



7.3.6 nbn® Smart Locations - (approved Non-Premise Locations) SFP-NTD

Below is an overview of nbn® specified SFP-NTD.

SFP-NTD (Option)

Part No/Type (SFP-NTD)

- Model No. G-010S-Q
- Part No. 3FE 49476 AA (G-010S-Q)

Power for a SFP-NTD is provided by the Customers equipment that it is plugged into.



Figure 51. SFP-NTD

7.3.7 nbn[®] Business NTD (BNTD) and Power Supplies

Below is an overview of nbn specified business -1Gbps BNTD.

Part No/Type (Business NTD)

- Model No. Nokia 7210-SAS-K ETR
- Part No. 3HE09426AA



Figure 52. 1Gbps – BNTD

Power is provided via either AC or DC fed PSU

Part No/Type (PSU)

- Model No. PS 7210 SAS-K ETR -48V DC
- Part No. 3HE05581AA
- Model No. PS 7210 SAS-K ETR AC
- Part No. 3HE10029AA



Figure 53. 1Gbps NTD - Business PSUs

Below is an overview of nbn specified business 2 - 10Gbps Business NTD.

Part No/Type (Business – NTD)

- Model No. Nokia 7210 SAS-DXP 2SFP+ 4F 6T ETR AC
- Part No. 3HE14798AA



Figure 54. BNTD 2-10Gbps

- Model No. PS - 7210 SAS-DXP ETR -48V DC
- Part No. 3HE10965AA
- Model No. PS - 7210 SAS-DXP ETR - AC
- Part No. 3HE10964AA



Figure 55. 2-10 Gbps BNTD - PSUs

7.3.8 nbn® Non-Premises Locations Customer Connecting Cables (CCC)

7.3.8.1 Customer Connecting Cables (CCC)

CCC with HFOC (Hardened Fibre Optical Connector)



Figure 56. CCC with HFOC (Hardened Fibre Optical Connector)

Use where Demarcation pit is <5m from the NPL, and SJL is used.

Manufacturer or Primary supplier	Manufacturer Product Code	Description
COMMSCOPE TECHNOLOGIES (nbn part number 10040324)	FHD-HJ1C-0008M	CCC drop cable, Terminated with 1 * Hardened-Angled Male Connector and 1 * SC/APC, 8m

Use where Demarcation pit is >5m and < 10m from the NPL, and SJL is being used.

Manufacturer or Primary supplier	Manufacturer Product Code	Description
COMMSCOPE TECHNOLOGIES (nbn part number 10040325)	FHD-HJ1C-0015M	CCC drop cable, Terminated with 1 * Hardened-Angled Male Connector and 1 * SC/APC, 15m

CCC with Pushlok

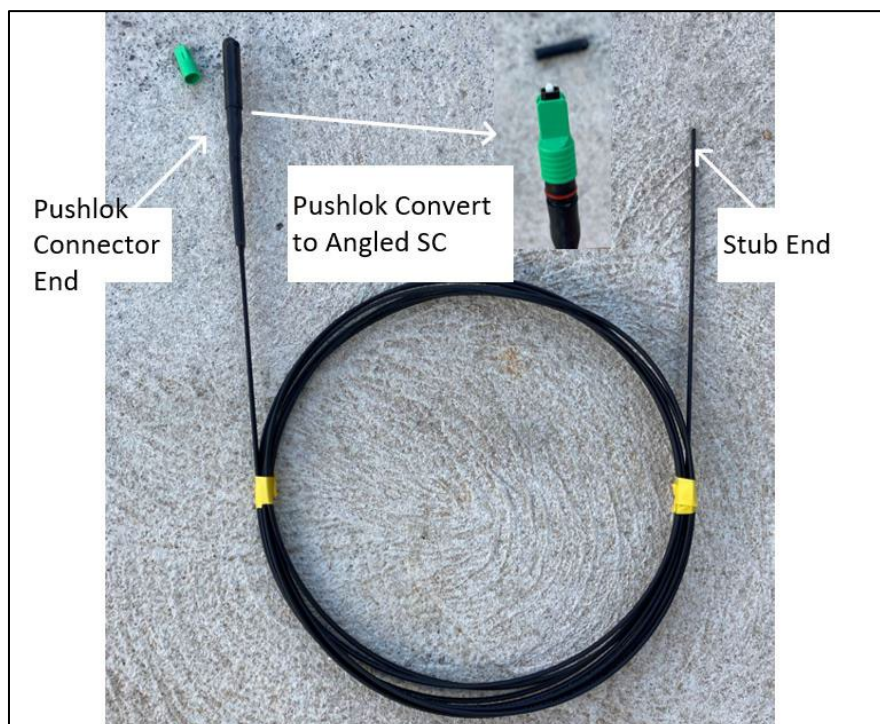


Figure 57. CCC with Pushlok

Use where NJL is being used, due to conduit capacity and Demarcation pit distance from NPL $\leq 15\text{m}$.

Manufacturer or Primary supplier	Manufacturer Product Code	Description
CORNING OPTICAL COMMUNICATIONS (nbn part number 10040326)	00D101JBA9R020M	CCC for NJL, Terminated with and 1 * SC/APC Pushlok Connector on one end and stub on the other end, 20m

Use where NJL is being planned, due to conduit capacity and Demarcation pit distance from NPL $> 15\text{m}$.

Manufacturer or Primary supplier	Manufacturer Product Code	Description
CORNING OPTICAL COMMUNICATIONS (nbn part number 10040327)	00D101JBA9R060M	CCC for NJL, Terminated with and 1 * SC/APC Pushlok connector on one end and stub on the other end, 60m

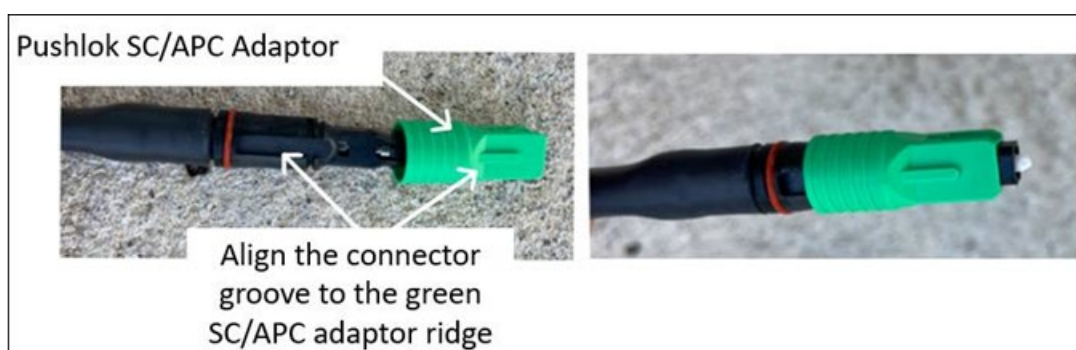


Figure 58. Pushlok adaptor

Pushlok adaptor – Used with NJL CCC with evolve connector. (10040326, 10040327).

Manufacturer or Primary supplier	Manufacturer Product Code	Description
CORNING OPTICAL COMMUNICATIONS (nbn part number 10040328)	KT-PL-SHROUD-SC	Adaptor Pushlok SC Converter

NJL / SJL

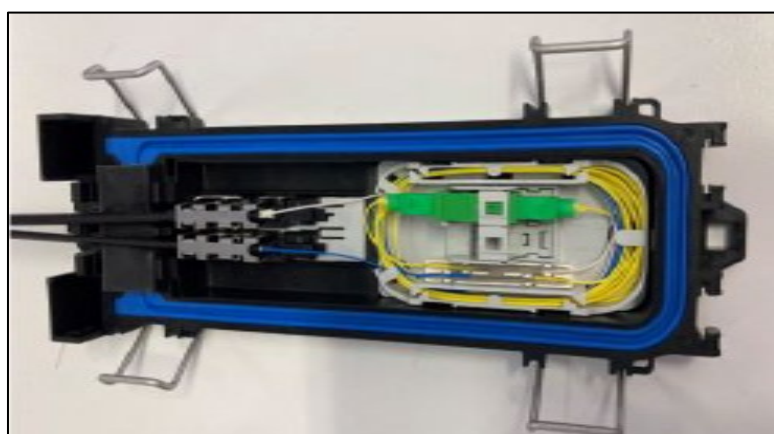


Figure 59. NJL

NJL – Use with Link Conduit < 20mm Comms Duct* or End User duct <= 16mm Duct.**

Manufacturer or Primary supplier	Manufacturer Product Code	Description
COMMSCOPE TECHNOLOGIES (nbn part number 10040323)	SRC1-U3K2A1BBAU6	Drop Fibre Access Closure SRC50 (Includes 1x SCA Adaptor, 2x 900 micron G.657 pigtails and retention clamp for 2x flat drop cables)



Figure 60. SJL

SJL - Used with Link Conduit \geq 20mm Comms Duct* or End User duct $>$ 16mm Duct.

Manufacturer or Primary supplier	Manufacturer Product Code	Description
N/A	N/A	The SJL is not an individual item but is created by the joining of pre-connectorised CCC cables.

Note:

* Comms Duct are nbn approved 20mm Link Conduit, which has O.D. 26.8mm.

** Where End User duct \leq 16mm, follow Full Build connection method.

7.3.9 nbn® Fibre TV TVRs and Power Supply

Below is an overview of nbn® specified Fibre TV TVR.

Fibre TV TVR: Kingray – Only for MDU



Figure 61. Fibre TV TVR Kingray

Manufacturer or Primary supplier	Manufacturer Product Code	Description
C-COR BROADBAND (nbn part number 10030980)	KOR001	Optical Receiver Digital TV and Satellite TV PIN Fibre TV TVR 47~2600MHz MDU's Only

Fibre TV TVR: Jonsa



Figure 62. Fibre TV TVR Jonsa

Manufacturer or Primary supplier	Manufacturer Product Code	Description
JONSA AUSTRALIA (nbn part number 10037769)	DF/RXL1/10N	Fibre TV Receiver Premises Kit

8 nbn[®] HFC network

Below describe authorised work boundaries of the premises served by the nbn[®] HFC network. Such activities must be performed by a Registered Cabler subject to the general terms and conditions of section 5 Authorised activities.

8.1 Authorised activities

8.1.1 SDUs

Subject to the terms and conditions set out herein, nbn authorises a Registered Cabler to:

- do coaxial installation, modification and removal within premises for renovation, demolition or relocation of the building as per authorised work boundary nominated as illustrated in Figure 63.
- install an nbn[®] wall plate at a location that is preferred by the end-user and an RG-6 coaxial tie-cable run from the isolator output port to the wall plate
- install an HFC NTD and a short fly-lead to connect the HFC NTD to the wall plate
- follow the nbn installation standards, e.g., the 50m rule states the distance from a standard tap to the wall plate must be under 50m and ensure the RF signal level measured at the wall plate meets nbn specifications
- replace an existing 2-way splitter inside the PCD enclosure with a nbn approved 3-way splitter (for modified services)
- install and test the premises amplifier in the condition that an existing 3-way splitter should be replaced with a premises amplifier which has 4 coaxial output ports. Note that in node areas that have been converted to 204MHz band split, premises amplifiers cannot be used and must be removed.
- recover or remove the HFC network equipment e.g., HFC NTDs; fly-leads; splitters and premises amplifiers
- remove the 2-way splitter and connect the nbn[®] NTD directly to the wall plate (when obsolete Foxtel Pay TV has been removed). Always disconnect unused wall plates and remove splitters where possible.
- remove unused ports, e.g. 4th port no longer required in premises amplifier and replace with appropriate splitter (2-way or 3-way)
- check the RF levels at all wall plates are within the specifications of the equipment connected to those wall plates (before conducting any modification)
- reduce the signal to the correct level at the wall plate by using only one attenuator (3, 6 or 10 dB) to achieve the correct reduction of signal level.
- ensure there is no disruption to any remaining services that are sharing the premises coaxial cable network
- ensure all equipment and components to be used in the HFC Network is in accordance to the approved coaxial equipment for the nbn[®] HFC network as described in section 8.3 Approved Coaxial equipment
- ensure that any additions, changes or removals do not permanently disrupt existing coaxial services or reduce the performance of such services without the end-user's knowledge or approval.

8.1.2 MDUs

Subject to the terms and conditions set out herein, nbn authorises a Registered Cabler to complete coaxial installation, modification and removal within premises for renovation, demolition or relocation of the building as per authorised work boundary nominated as illustrated in Figure 63. and Figure 64. perform MDU installation from the ICD to the wall plate inside the premises (see Table 6 for the maximum home run cable lengths).

- to do cable installation between ICD and wall plate (if ICD is present and EU specifically requests the wall plate be re-located within the premises) following the 50m rule distance from the standard tap to wall plate and RF levels in the wall plate are within nbn specifications
- disconnect multiple equipment installed, e.g. redundant Telstra cable modems; Foxtel set-up boxes; HFC NTDs from the splitter near the wall plate without affecting the other services, where possible.
- add a wall-plate, and or splitter or change a 2-way splitter to 3-way splitter or vice versa to improve the service performance
- check the RF levels at all wall plates are within the specifications of the equipment connected to those wall plates (before conducting any modification)
- reduce the signal to the correct level at the wall plate by using only one attenuator (3, 6 or 10 dB) to achieve the correct reduction of signal level.
- do small cabling changes between the first wall plate and equipment in other rooms within the premises
- to ensure all equipment and components to be used in the nbn® HFC Network is in accordance with the approved coaxial equipment described in section 8.3 Approved Coaxial equipment.
- to ensure that any additions, changes or removals do not permanently disrupt existing coaxial services or reduce the performance of such services without the end-user's knowledge or approval.

Table 6. Home run cable lengths

Tap Type	Typical Application	RG6	RG11
MDU	Multiple Storey MDUs	25m	35m
Standard	Cluster Complexes	50m	75m

8.1.3 Authorised work boundaries

The high-level diagram below (See Figure 63) shows the authorised work boundary in an SDU served by the HFC network. A Registered Cabler fulfilling the criteria specified in this document is authorised to perform any such work during renovation, demolition or relocation of the building.

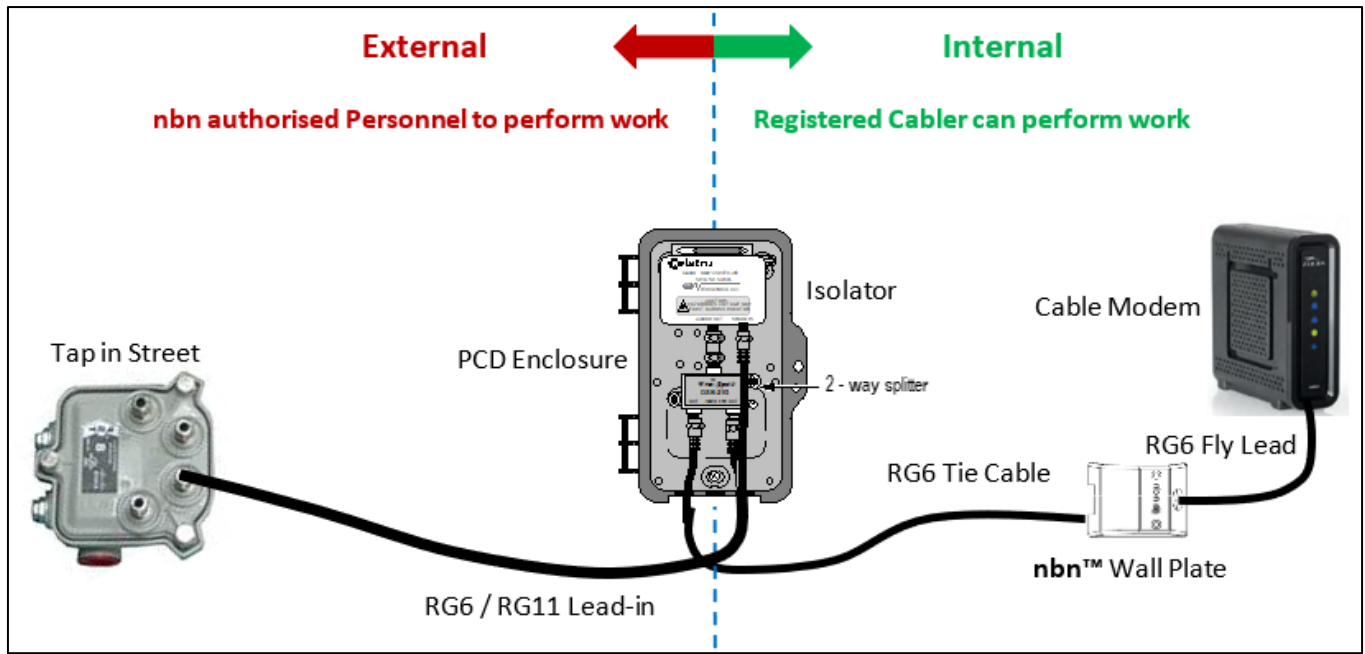


Figure 63. nbn Coaxial Authorised Work Boundary – SDU

8.1.4 Coaxial installation/modification/removal options

8.1.4.1 SDUs

Overview

The HFC network includes passive and active branching, both at the Tap and the PCD or in some cases, the wall-plate. Setting out every design, installation, modification and removal permutation is beyond the scope of this document. To maintain traceability to a common set of standards and references as listed in section 1.6 (Referenced documents), only an overview will be provided here with reference to the more detailed documents.

Typical Coaxial installations and modifications

When an end-user requires an nbn-delivered service to be connected, an nbn® wall plate (which will typically have an nbn logo printed on it, however some wall plates may be branded Telstra), may be installed at a location that is preferred by the end-user and an RG-6 coaxial tie-cable run from the Isolator output port to the wall plate. A new HFC NTD package will include an nbn CM8200 or CM3500 DOCSIS3.1 HFC NTD and a short fly-lead to connect the HFC NTD to the wall plate. The HFC NTD package will also include a 2-way splitter which is not required in this scenario.

As part of the coaxial tie-cable, wall-plate and HFC NTD installation, the Registered Cabler must follow nbn installation practices and ensure that the RF signal level measured at the wall plate meet nbn requirements. In some cases, if the cable distance between the PCD and the wall plate is too long (e.g., a battle-axe block),

the RF signal level may not meet nbn specifications. In such cases, a competent and trained Registered Technical is required to install an optional nbn approved premises amplifier (fitted to a large PCD enclosure) and associated plug-pack power supply that must be plugged into a suitable GPO that is not likely to be disturbed. If the GPO is not close to the PCD and amplifier, then a power inserter must be installed in-line with the coaxial cable and close to the GPO where the power plug-pack is located.

If an end-user requires multiple retail services over coaxial cable from one or more Carriage Service Providers / RSPs, then multiple wall-plates will be required, along with a passive splitter or an active premises amplifier which is installed in the PCD enclosure. However, in a node area that has been uplifted to 204MHz band split, no amplifier is currently approved (on the output side of the Isolator).

Re-location of the 2-way splitter from the PCD to the end-user side of a wall plate is permitted at the commencement of the co-existence period. Note: The existing third-party coaxial service is disrupted for a minute or so while the 2-way splitter is being installed. The existing coaxial cable is reconnected to one port of the splitter and the HFC NTD and fly-lead connected to the other port of the splitter. Caution: this simpler method of adding an nbn provided RSP service to an existing wall plate should not be used where there is already a 2-way, or 3-way splitter installed in the PCD enclosure. Concatenating splitters can result in unacceptable signal levels to the connected equipment, thus not only affecting the new HFC network service, but also any other existing coaxial service. In such cases, an existing two-way splitter in the PCD should be replaced with a 3-way splitter. The latter may be required where the end-user already has one HFC NTD for connecting to a 1st RSP and wants a 2nd HFC NTD to connect to a 2nd RSP (e.g., to a granny flat).

A premises amplifier must only be installed by a competent Registered Cabler experienced in the installation and testing of such equipment. In many cases, the existing small PCD enclosure will need to be replaced with a large PCD enclosure. This task must be implemented by an nbn DP and cannot be carried out by a Registered Cabler. This will require temporary removal of the existing Isolator from the lead-in cable while the PCD enclosure is being replaced.

Note: where the node area has been converted to 204MHz band split, there is currently no customer amplifier approved for use at this point.

Coaxial installation modification and removals

nbn authorises a Registered Cabler to recover or remove the following HFC network equipment, subject to 4 (General terms and conditions).

- HFC NTDs
- fly-leads
- splitters
- premises amplifiers and associated voltage adapters.

When any of the HFC network equipment items are removed, the Registered Cabler must ensure there is no disruption to any remaining services that are sharing the premises coaxial cable network.

If a pre-existing Pay TV service has been removed and there is a redundant 2-way splitter installed, the Cabler is required to remove the 2-way splitter and connect the nbn® NTD directly to the wall plate. There will be loss of nbn ethernet service for a minute or so because of this equipment removal. Removing the splitter will increase the HFC NTD signal level by typically 4dB, which more often than not, is a good thing. Caution: This can also have a negative impact on performance if the signal level is already too high.

Removing the 2-way splitter could cause the HFC NTD to saturate, thus causing errors or loss of service but this is unlikely.

If a premises amplifier that was installed to provide a 4th port is no longer required, it shall be removed and replaced with a 2-way or 3-way passive splitter. The benefit of doing this is that the voltage adapter is no longer required to power the premises amplifier. If the node area has not yet been converted to 204MHz band split, Registered Cablers need to check the RF levels at all wall plates before the amplifier is removed. Taking into account the extra loss introduced by the 2-way or 3-way splitter, the Cabler needs to confirm that the resultant RF signal levels at all wall plates are within the specifications of the equipment connected to those wall plates.

Registered Cabler's modification & removal responsibilities

When installing, relocating or removing HFC network equipment, the Registered Cabler acknowledges that:

- It may be necessary to add a splitter, change a 2-way splitter to a 3-way splitter or add a new premises amplifier, or to remove any of these equipment's. **Note:** There are currently no customer premises amplifiers suitable for use in Node areas that have been converted to PMUS 204MHz band split. In all instances they should be removed to ensure the modem does not go into a partial service state.
- During renovations, it may be necessary to relocate the PCD enclosure. If this is the case, a nbn DP must carry out such works, who may be required to install a new lead-in cable from the Tap. The Registered Cabler is not authorised to relocate or modify the PCD enclosure.
- The procedures undertaken by the Registered Cabler must consider always the existing coaxial services that are already operational at the premises.
- The end-user must be made aware of any necessary coaxial service disruptions required to:
 - complete a new wall plate connection;
 - relocate a wall plate; or
 - remove equipment (e.g., a premises amplifier that is no longer needed and wanted).

An agreed time should be scheduled with the end-user for any such disruptions to occur.

- The Registered Cabler must ensure that any additions, changes or removals do not permanently disrupt existing coaxial services or reduce the performance of such services without the end-user's knowledge or approval.
- The Registered Cabler must not inadvertently or deliberately, permanently disrupt or reduce the quality of an existing coaxial service.

8.1.4.2 MDUs

Overview

MDUs differ from SDUs in the following ways: 1) the Tap is installed in a common area inside a Security Wall Box with CX50 hard-line coaxial cable connecting to the street coaxial network via a Directional Coupler; 2) one Isolator per premises is installed in the Security Wall Box; 3) generally there is no intermediate PCD enclosure, except for horizontal MDUs, such as residential estates; 4) an ICD is installed outside the premises; 5) RG6 or RG11 lateral coaxial cable runs from the Isolator output to the ICD; 6) Internal cabling runs from the ICD to the wall plate inside the premises (see table 1 for the maximum home run cable

lengths); 7) there is no premises splitter inside the Security Wall Box, instead a splitter when required is always installed after the wall plate; and 8) all the above is constructed and tested by the nbn DP, leaving items 6 and 7 for the Registered Cabler to perform installation.

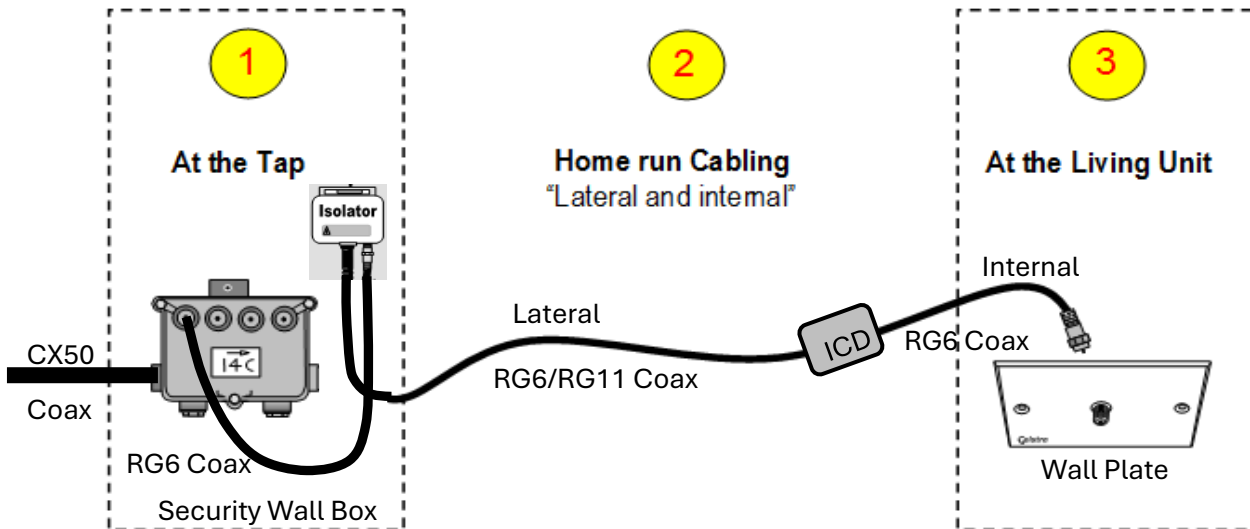


Figure 64. MDU equipment and cabling (coax)

The purpose of the ICD is three-fold:

1. to terminate a RG11 lateral (where required for low loss) with a barrel connector / joiner (inside the ICD) so that a smaller and easier to run RG6 cable connects into the Living Unit and to the wall plate;
23. to complete all of the nbn cable installations to the relevant premises during the one construction build without entering the premises; and
24. so that an RSP service can be activated rapidly once requested by the end-user.

Typical coaxial installations and modifications

A typical coaxial installation includes wall plate; optional 2-way or 3-way splitter; HFC NTD; and the internal cabling of RG6 coaxial cable from the ICD to the wall plate.

Beyond the wall plate, the MDU premises equipment and installation is fundamentally the same as for an SDU.

For the MDU scenario, a registered Cabler should not modify the cable between the ICD and wall plate unless the EU specifically requests the wall plate be re-located within the premises.

As for the SDU scenario, additional services can be added by connecting RSP equipment (including a cable modem) via a fly-lead to an unused splitter port. At most 3 devices can be connected using a 3-way splitter. Premises amplifiers are not generally provided for using inside premises.

For MDUs that have previously been connected to the Telstra coaxial network, there may be multiple existing wall plates in place. Adding a 3rd HFC network service for an RSP or replacing the existing cable modem with an HFC NTD is similar to that of an SDU, splitters that are no longer required shall be removed.

Coaxial installation removals

If multiple Telstra cable modems, Foxtel set-top-boxes and/or HFC NTDs have been historically installed, the Registered Cabler must disconnect these from the splitter near the wall plate without affecting the other services. The Registered Cabler must remove the splitter when not required, to improve the performance of the remaining coaxial services. If the Registered Cabler removes a splitter or changes a 3-way splitter to a 2-way splitter, the Registered Cabler must complete this process as quickly as possible.

Registered Cabler's modification & removal responsibilities

When installing, relocating or removing coaxial services from the ICD to and within a premises, the Registered Cabler acknowledges that:

- It may be necessary to add a wall plate, add a splitter or change the number of splits.
- It is required to update the Isolator to the most recent version when onsite.
- There may also be a need to remove a splitter or change a 3-way splitter to a 2-way splitter to improve the service performance. Redundant splitters shall be removed.
- Small cabling changes may also be required between the first wall plate and equipment in other rooms within the premises.
- The Registered Cabler must consider at all times the existing coaxial-fed services that are already operational.
- The end-user must be made aware of any necessary coaxial service disruptions required to:
 - complete a new wall plate connection;
 - relocate a wall plate; or
 - relocate or remove equipment.
- The Registered Cabler must ensure that any additions, changes or removals shall not permanently disrupt existing coaxial services or reduce performance of such services without end-user's knowledge or approval.
- Registered Cablers must not inadvertently or deliberately, permanently disrupt or reduce the quality of an existing coaxial service.

8.1.5 Testing and minimum specifications

All tools must be regularly maintained, and test equipment must be calibrated in accordance with the manufacturer's recommendations.

All hand-held power equipment must be electrically tested and tagged in accordance with all applicable legislation and local requirements.

8.1.5.1 Test Instrument

The following test instruments or equivalent are required to perform signal measurements.

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Trilithic	RF Leakage detector Seeker D or Seeker X	Seeker D. use frequencies 136 MHz & 614 MHz Seeker X. use 136MHz, 138 MHz (OUPD), 614MHz
Viavi	ONX620	DOCSIS 3.0/3.1 - (4- Digital Signal Level Meter - SW Version. 4.14.18 Current Version
Viavi	ONX630	DOCSIS 3.0/3.1 – Digital Signal Level Meter - SW Version 4.14.18 Current Version

Service Test (check)

1. Utilising a suitable HFC test instrument, verify the following at the nbn® HFC NTD (typical values shown in table below):
 - a. Downstream Signal Level DOCSIS 3.0/3.1 – Digital Signal Level Meter - SW Version 3.6.20
 - b. Upstream Signal Level DOCSIS 3.0/3.1 – Digital Signal Level Meter - SW Version 3.6.20
 - c. Downstream Mean Error Ratio (MER)
 - d. Upstream MER at the CMTS
 - e. Signal Leakage (1 meter from item under test)
25. Remove HFC test instrument and reconnect nbn® HFC NTD.
 - a. Check LED operation
 - b. Check with the end user that all services are operational (i.e. phone / internet)

If the received signal level at the wall plate is too high compared to the required values shown in Table 7, it must be attenuated (lower the signal level) so that it is below the maximum levels.

Use a 3, 6 or 10 dB attenuator to reduce the signal to the correct level at the wall plate. Use only one attenuator to achieve the correct reduction of signal level.

If the transmit signal level at the wall plate is too high, remediate to reduce the equipment and cable losses between the Tap and the wall plate. nbn authorised personnel will be required to implement any necessary equipment or cable changes between the Tap and the PCD.

If the transmit signal level at the wall plate is too low, use a 3, 6 or 10 dB fixed attenuator or approved step attenuator to increase the transmit signal to the correct level at the wall plate. Use only one attenuator to achieve the correct increase in signal level.

If there is a fault indication (No Sync / service / signal level fail) check connections and if fault cannot be cleared, log a fault with nbn (or RSP).

Table 7. Signal level

Metric	Description	Impaired	Healthy	Specification/ Reference
DS MER	Downstream Modulation Error Ratio	<34.5 dB	= > 34.5 dB	Required to support specified BER at 256 QAM
US MER	Upstream Modulation Error Ratio	< 30 dB	= > 30 dB	Required to support BER at 64 QAM
DS Pre-FEC BER	Bit Error Ratio at the cable modem prior to Forward Error Correction	1.01E-8 or worse	1.0E-8 or better	
DS Receive Level	Electrical input to the cable modem	< -6 or > +9 dBmV/ch	=> -6 to <= +9 dBmV/ch	
US Transmit Level	Electrical output from the cable modem (6.4MHz wide channel)	<33 or >53 dBmV/ch	=>33 to <=53 dBmV/ch	
Signal Leakage	Customer connection items (includes from the isolation box to each wall plate)	=> 21 V/m (at 1m from the source)	<= 20 V/m (at 1m from the source)	

8.2 Activities not authorised

This document does not authorise a Registered Cabler to do any of the following:

- Relocate, remove or replace the PCD
- Relocate, remove or replace nbn® lead-in cabling between the Tap and the PCD
- Disconnect the nbn® Lead-in cable connection at the PCD
- Use of non nbn® approved coaxial equipment (refer to section 8.3 for details)
- Re-locate or modify the Isolator
- Modification or re-location of any support structures e.g. underground ducting, riser brackets
- Install a premises amplifier and the associated plug-pack power supply if the cable distance between the PCD and the wall plate is too long (e.g. battle-axe block)

8.3 Approved Coaxial equipment

8.3.1 PCD

The PCD is used to house the isolator, splitter and in the case of the CG1000N any amplifiers.

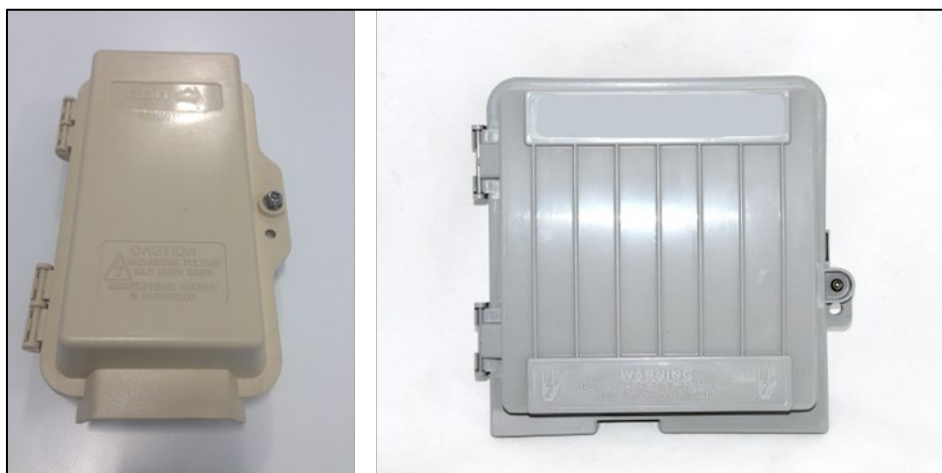


Figure 65. Typical PCDs

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Madison Technologies	CG 1000	Large Isolation Box – Customer Premises
Madison Technologies	CG1000N	Large PCD – Customer Premises with nbn logo
Madison Technologies	MT1322B	Small PCD – Customer Premises with nbn logo
Madison Technologies	MT 1010	Telephony Wall Box with standard Phillips head screw

8.3.2 ICD

The ICD used for MDU construction is shown below and contains a barrel and F connectors.

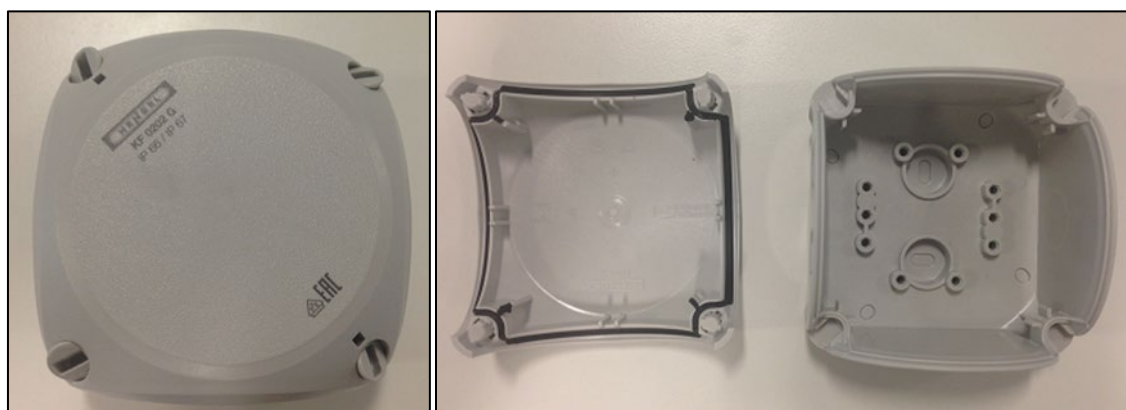


Figure 66. Hensel ICD

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Hensel	KF 200 G	ICD enclosure

8.3.3 Passive devices

8.3.3.1 Isolator

Isolators are present at each premises. Historically there have been several versions which are now obsolete. The 1.8GHz and 1GHz units listed below are the current isolators issued by nbn at the time of publication.



Figure 67. Typical isolator

Manufacturer or primary supplier	Manufacturer Product Code	Description
Technetix	TRISZ-DG-7KV 1.8GHz	Isolator, electrical, F (female) connector ports, single output
Sumnet	CS6601-A 1GHz	

8.3.3.2 Splitters

2 and 3-way splitters are used to provide additional connection points to wall plates where additional nbn services are required.



Figure 68. Typical 2- and 3-way splitters

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Tru-Spec	DSB-21G	Splitter, even 2-way, 3.7 dB insertion loss per leg, F (female) connector ports. 1 GHz rating
Tru-Spec	TSB-21G	
Steren	201-102	
Digitap	002DWSB	
Antronix	CMC2002H-A	
Zinwell	MSG-2A	
CableCor	L1.3.1	
Tru-Spec	TSB-31-G/B	Splitter, even 3-way, 5.5 dB insertion loss per leg, F (female) connector ports. 1 GHz rating
Digitap	1003DWSB	
Antronix	CMC2003BH-A	
Zinwell	MSG-313LT-B	
CableCor	L.1.3.2	

8.3.3.3 Attenuators

A passive device that reduces the signal level by a predetermined amount. Attenuation values of 3, 6, and 10 db are the most commonly used.



Figure 69. Typical attenuators

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Tru-Spec Bitek (Digitek) Holland	FAM-3 08AF03 FAM-3	Attenuator Fixed - 3 dB, max. insertion loss variation 0.5 dB, F (male) to F (female)
Tru-Spec Bitek (Digitek) Holland	FAM-6 08AF05 FAM-6	Attenuator Fixed - 6 dB, max. insertion loss variation 0.5 dB F (male) to F (female)
Tru-Spec Zinwell Holland	FAM-10 AT-10 FAM-10	Attenuator Fixed - 10 dB, max. insertion loss variation 0.5 dB, F (male) to F (female)
C-Cor	BC496	Attenuator Fixed - 3 dB, Belling Lee (male) to Belling Lee (female)
C-Cor	BC500	Attenuator Fixed - 6 dB, Belling Lee (male) to Belling Lee (female)
PPC	TR75SSWS500	Parking Terminator

8.3.4 Premises amplifier

The premises amplifier is used to provide additional in-home RF signal, it provides additional RF out ports for multiple device connection. Premises amplifiers cannot be used in node areas that have been converted to

204MHz band split. If additional outlets are required, additional lead-ins may be required, and or a network upgrade.



Figure 70. Typical premises amplifier

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Zinwell	HDA-PIAU	Power inserter and 14V DC power pack
Zinwell	14vDC300/1	Power adapter
Zinwell	HDA-RA6-4AU-M	Amplifier, with active return, shock protected, remote powering, 4 outputs with female F port connector interface (14V DC powered)
PPC	PPC-5-U/U-65/85	Amplifier, with active return, shock protected, remote powering, 4 outputs with female F port connector interface (15V DC powered)
C-Cor	D.PWRKIT	FD41SD-15-400 DC C-Cor plug pack CableCOR 50VDC/0.5A max power inserter
C-Cor	A.PPC AMPKIT	Kit containing PPC-5-U/U-65/85 and D.PWRKIT

8.3.5 Drop and indoor cables

Drop cables can be either RG6 or RG11 and available in underground (flooded), aerial (with messenger wire) and indoor (low smoke).

8.3.5.1 Internal cable

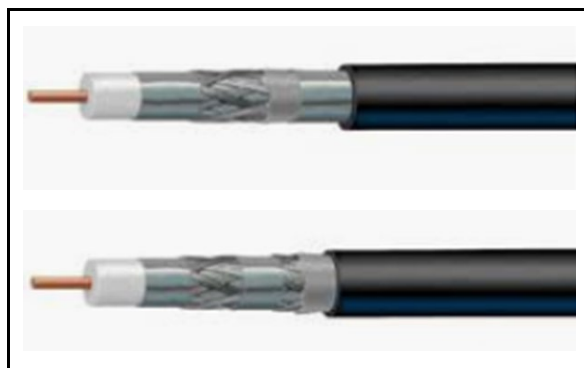


Figure 71. Typical RG6 and RG11 Quadshield cable

Manufacturer or Primary supplier	Manufacturer Product Code	Description
CommScope Belden PCT Amphenol / TFC Matchmaster Jonsa Australia PPC C-Cor	F11SSV 1617A A11QS - BVV T11Q - VB/B 06MM-E11Q CRG11BQ P11IQVRMN B102	RG11 Quadshield, minimum of 60% inner & 40% outer braid, Black PVC jacket - non flooded, Copper clad steel centre conductor solid, gas expanded PE dielectric
CommScope	F11SSVV	Quad Shield, 60% inner & 40% outer braid, Black flame-retardant PVC jacket – non-flooded Copper clad steel solid
CommScope Belden Belden PCT Amphenol / TFC Matchmaster Jonsa Australia PPC C-Cor	F6TSV 9118 YJ52452 A6TS – BVV T6T77 – VB/B 06MM-E6T CRG6UBT P6IT77VRMN B109	RG6 Tri-shield, minimum of 60% braid, Black PVC jacket – non-flooded Copper clad steel centre conductor solid, gas expanded PE dielectric

Manufacturer or Primary supplier	Manufacturer Product Code	Description
CommScope	F6TSVV	RG6 Tri Shield, 60% inner & 40% outer braid, Black flame-retardant PVC jacket – non-flooded. Copper clad steel solid centre conductor, foam PE dielectric
CommScope	F6SSVV	RG6 Quad Shield, Black flame-retardant PVC jacket – non-flooded Copper clad steel solid centre conductor, foam PE dielectric

8.3.5.2 Underground cable



Figure 72. RG6 Tri-shield flooded cable



Figure 73. RG11 Quadshield flooded cable

Manufacturer or Primary supplier	Manufacturer Product Code	Description
CommScope Belden PCT Amphenol / TFC Matchmaster Jonsa Australia PPC C-Cor	F11SSEF 1618A A11QS - BF T11Q - FEB 06MM-E11QF CRG11BQF P11IQEFRMY B104	RG11 Quadshield, minimum of 60% inner & 40% outer braid. Black PE jacket – flooded. Copper clad steel centre conductor solid, gas expanded PE dielectric
CommScope TFC Belden PCT	F677TSEF XP 26H6 1837A A6TS - BF	RG6 Tri-shield, minimum of 60% braid, Black PE jacket - flooded. Copper clad steel centre conductor solid, gas expanded PE dielectric.

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Amphenol / TFC	T6T77 - FEB	
Matchmaster	06MM-E6TF	
Jonsa Australia	CRG6UBTF	
PPC	P6IT77EFRM	
C-Cor	B111	

8.3.5.3 Aerial cable

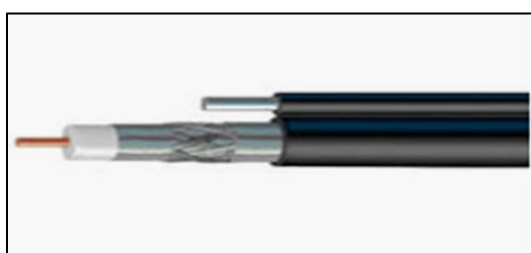


Figure 74. Typical Aerial cable

Manufacturer or Primary supplier	Manufacturer Product Code	Description
CommScope; Belden PCT Amphenol / TFC Matchmaster Jonsa Australia PPC C-Cor PPC	F11SSVM-APD 1620AM A11QS - BVMF T11Q - LTVB - 072M/B 06MM-E11QFM CRG11BQFM P11IQV2CRMN B108 P11IQEFRMY	RG11 IM Quadshield, minimum of 60% inner & 40% outer braid, Black PVC jacket, non-flow flooding. Copper clad steel centre conductor solid, gas expanded PE dielectric, 1.8mm diameter steel messenger wire.
CommScope Belden PCT Amphenol / TFC Matchmaster Jonsa Australia PPC C-Cor	F6TSVM-APD 1616AM A6TS - BVMF T6T77 - LTVB - 051M/B 06MM-E6TFM CRG6UBTFM P6IT77VMFRMN B110	RG6 IM Tri-shield, minimum of 60% braid, Black PVC jacket – non-flow flooded. Copper clad steel centre conductor solid, gas expanded PE dielectric, 1.3mm diameter steel messenger wire.

8.3.6 F Connectors

F Connectors are used on RG6 and RG11 cables. Any unconnected F port must be capped off with an F terminator.

8.3.6.1 Adaptors / Terminators



Figure 75. Example F connectors / adaptors

Manufacturer or Primary supplier	Manufacturer Product Code	Description
PPC	FMBLF	Adaptor - F male to Belling Lee female
PPC	CF81GHZM	Adaptor - F female to F female port
Jonsa Australia	APF/F	Adaptor – F female to F female port
Jonsa Australia	APF/FFR3N	Adaptor – right angle
PPC	RAPLUS	Adaptor – right angle
PPC	TR75S	Terminator, 75-ohm, f port soldered
Jonsa Australia	APFDM1	Terminator, 75-ohm, f port soldered, with additional rubber ‘O’ ring

8.3.6.2 Compression crimp connectors



Figure 76. Example compression crimp connectors

Manufacturer or Primary supplier	Manufacturer Product Code	Description
PPC (C-Cor)	EX6XL	RG6 F-connector, compression crimp indoor-outdoor, Universal fit (tri & quad shield)
PPC (C-Cor)	EX6XL-NBN	RG6 F-connector, compression crimp indoor-outdoor, Universal fit (tri & quad shield with nbn Logo)
PPC (C-Cor)	EX11	RG11 F-connector integral pin, compression crimp, indoor-outdoor, Universal fit (tri & quad)
PPC (C-Cor)	EX11RAFM	RG11 right angle F-connector, compression crimp - indoor /outdoor. Universal fit (tri & quad shield)
PPC (C-Cor)	EX6XL: PLUS	RG6 F-connector, compression crimp indoor-outdoor, Universal fit (tri & quad shield)
F-CONN	FS6U	RG6 F-connector, compression crimp indoor-outdoor, Universal fit (tri & quad shield)
PCT (Jonsa Australia)	TRSF-6L	RG6 F-connector, compression crimp indoor-outdoor, Universal fit (tri & quad shield)
PCT (Jonsa Australia)	TRSN-6L	RG6 F-connector, compression crimp indoor-outdoor, Universal fit (tri & quad shield) with nbn logo
PCT (Jonsa Australia)	TRS-6L-RA	RG6 right angle F-connector, compression crimp - indoor /outdoor. Universal fit (tri & quad shield)
PCT (Jonsa Australia)	TRSN-6LRA	RG6 right angle F-connector, compression crimp - indoor /outdoor. Universal fit (tri & quad shield), nbn logo
PCT (Jonsa Australia)	TRSF-11L	RG11 F-connector, compression crimp indoor-outdoor, Universal fit (tri & quad shield)
PCT (Jonsa Australia)	TRSN-11L	RG11 F-connector, compression crimp indoor-outdoor, Universal fit (tri & quad shield) with nbn logo

Manufacturer or Primary supplier	Manufacturer Product Code	Description
PCT (Jonsa Australia)	DRS-11-RA	RG11 right angle F-connector, compression crimp - indoor /outdoor. Universal fit (tri & quad shield)
ICM (Hills)	DB6U-L 9BC80490)	RG6 F-connector, compression crimp indoor-outdoor, Universal fit (tri & quad shield)
Corning – Cablecon	CX-3-4.9	RG6 F-connector, compression crimp indoor-outdoor, Universal fit (tri & quad shield)
Corning – Cablecon	7.0QM	RG6 F-connector, compression crimp indoor-outdoor, Universal fit (tri & quad shield)
ICM (Hills)	FS11V-SL (BC89237F)	RG11 F-connector, compression crimp indoor-outdoor, Universal fit

8.3.7 Wall plates

Wall plates can be mounted in to either the skirting board or flush mount against a wall. Below is an image of a typical skirting mount version.

Note: Optus HFC networks (Redcliffe only) require the use of a self-terminating F81 barrel.



Figure 77. Typical skirt mount wall plate

Manufacturer or Primary supplier	Manufacturer Product Code	Description
Jonsa Australia	APO2FNBN3	Wall outlet plate, white, flush mounted, single output F female to F female, nbn logo. F81 joiner to conform to nbn specification.
Jonsa Australia	APO1FNBN3	Skirting outlet plate, white, single output F female to F female, nbn logo. F81 joiner to conform to nbn specification.

9 Glossary

Term	Description
ACMA	Australian Communications and Media Authority
ANT	Analogue Network Termination
BCA	Building Code of Australia
BEP	Building Entry Point
CCC	Customer Connecting Cable – for Non-Premises Locations.
CLP	Customer Lightning Protection (also known as OVP)
C/O	Change/Over
CPE	Customer Premises Equipment
DFN	Distribution Fibre Network
DP	Delivery Partner
DPU	Distribution Port Unit
DSL	Digital Subscriber Line
FDT	Fibre Distribution Terminal
FIC	Field Installable Connector
FTTB	Fibre to the Building
FTTC	Fibre to the Curb
FTTP	Fibre to the
FWO	Fibre Wall Outlet
GPO	General Power Outlet
GPON	Gigabit Passive Optical Network
HFC	Hybrid Fibre Coaxial
HS&E	Health, Safety & Environment
ICD	Internal Connection Device
IDU	Indoor Unit
ISDN	Integrated Services Digital Network
LFN	Local Fibre Network
MDF	Main Distribution Frame

Term	Description
MDU	Multiple Dwelling Unit
nbn	NBN Co Ltd
NBP	Network Boundary Point
NCD	Network Connection Device. A device supplied as part of the nbn® FTTC service, that is used to provide a UNI-D (Ethernet) port to the user of service. This device includes a Reverse Power Feed (RPF).
NJL	Network Access Joint Location
NTD	Network Termination Device
Non-Premises Locations (NPL)	Non-Premises Locations are non-residential locations where nbn has allowed supply of an nbn Service and are limited to Approved Non-Premises Locations and Smart Locations, both of which are defined in nbn's Wholesale Broadband Agreement
ODU	Outdoor Unit
OVP	Over Voltage Protection
ONT	Optical Network Terminal
Passive NTD (PNTD)	Passive Network Termination Device. This means a passive or non-powered device that is: (a) provided by nbn to establish a demarcation point between nbn's network and customer cabling and/or equipment; and (b) permanently marked at manufacture with the words 'Network Termination Device' or the letters 'NTD'.
PCD	Premises Connection Device
PIC	Premises Internal Cable
Premise	An addressable location currently used on an on-going basis for residential, business (whether for profit or not), government, health or educational purposes
PS/B	Power Supply with Battery Backup
PS/S	Power Supply Standard
RSP	Retail Service Provider
SDU	Single Dwelling Unit
SJL	Segment Joint Location

Term	Description
TO	Telecommunications Outlet
SJL	Segment Joint Location
SDS	Service Drop Sheath
SDT	Splitter Distribution Terminal
SFP-NTD	Small form factor pluggable transceiver network termination device that is owned, operated or controlled by nbn (or any related body corporate of nbn)
TO	Telecommunications Outlet
UNI	User Network Interface
UNI-D	User Network Interface – Data
UNI-V	User Network Interface – Voice
VDSL	Very High Rate Digital Subscriber Line
WBA	Wholesale Broadband Agreement
WHS	Workplace Health & Safety
WNTD	Wireless Network Termination Device